 




PROPAGATOR SET WITH LED GROW LIGHTS

GB PROPAGATOR SET WITH LED GROW LIGHTS
Instructions for use
HU LED-ES MELEGÁGYKÉSZLET
Használati útmutató
SI KOMPLET LED-RASTLINJAKA
Navodilo za uporabo
CZ SADA LED PAŘENIŠŤ
Návod k použití
SK ŠUPRAVA PARENÍSK NA KULTIVÁCIU RASTLIN
Návod na používanie
DE ANZUCHTKASTEN-SET
Gebruiksaanweisung

 
 
 
IAN 466651_2404



DELTA-SPORT HANDELSKONTOR GMBH
Wragelkamp 6 • 22397 Hamburg
GERMANY

10/2024
Delta-Sport-NS-AS-15203

IAN 466651_2404

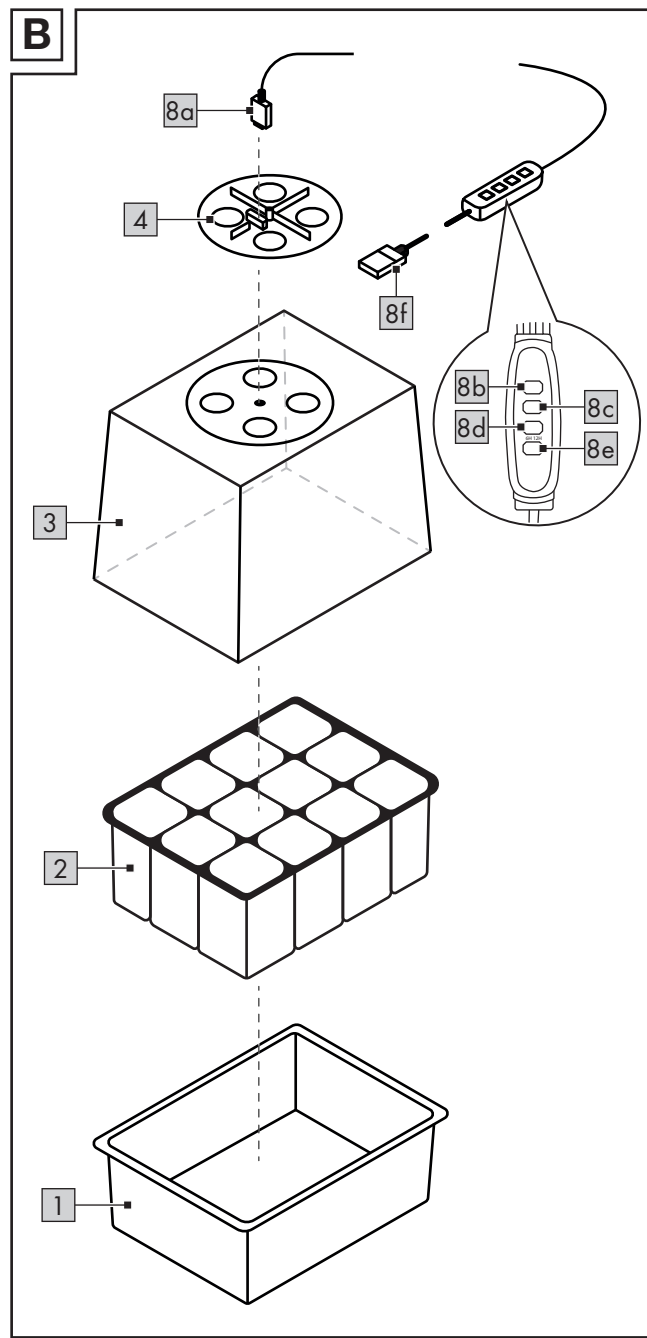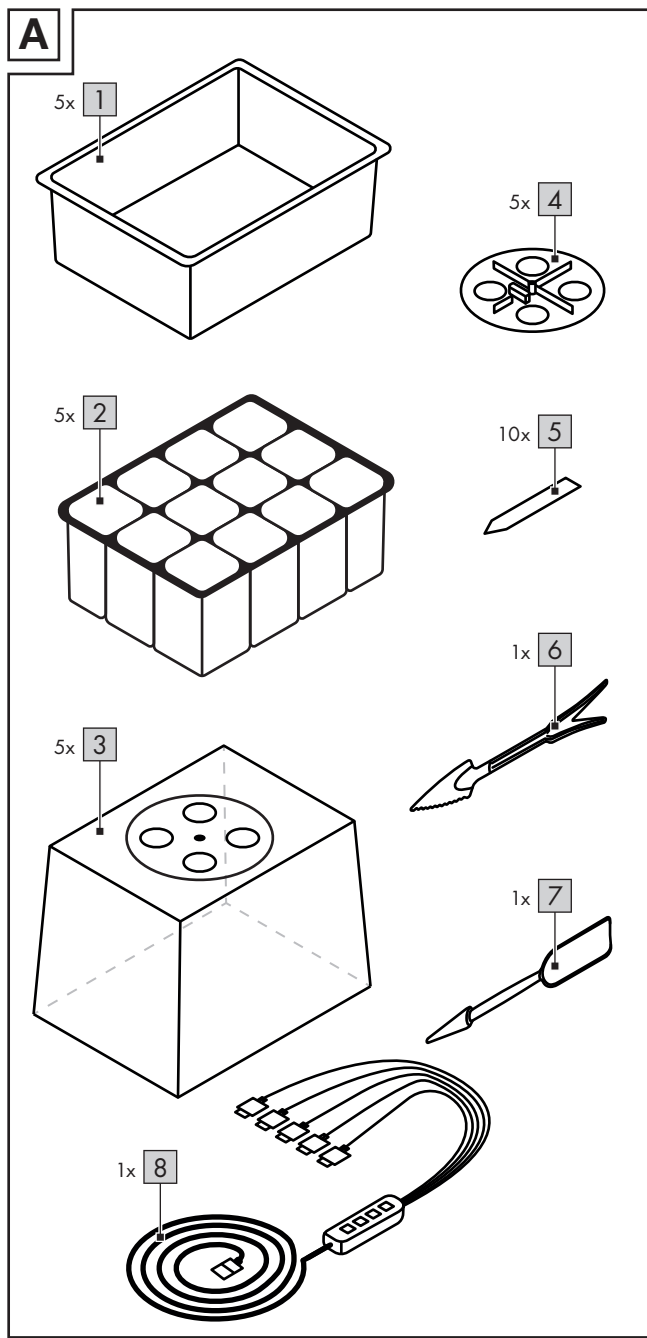

Congratulations!
You have chosen to purchase a high-quality product. Familiarise yourself with the product before using it for the first time.
Read the following instructions for use carefully.
Use the product only as described and only for the given areas of application. Store these instructions for use carefully. When passing the product on to third parties, please also hand over all accompanying documents.

Scope of delivery (fig. A)
1 x LED propagator set (1-4)
1 x accessory (5-7)
1 x USB cable (8)
1 x instructions for use

Technical data
Dimensions: approx. 185 x 140 x 140mm L x W x H)
USB cable: Type C
Input: 5V === 1.25A
Output: 5 x 5V === 0.25A

Protection Level III

Protection Level II

This product may be connected only to protection level II devices bearing this symbol.
This article must only be connected to a control gear that provides SELV/PELV.

Symbol for DC voltage

Delta-Sport Handelskontor GmbH hereby declares that this product complies with the essential requirements and the other relevant provisions.

Date of manufacture (month/year): 10/2024

Intended use

The product is designed as a propagator for plants and is not intended for commercial use.

FOR INDOOR USE ONLY.

Timer function: 6 hours switched on/18 hours switched off
Timer function: 12 hours switched on/12 hours switched off

Safety information

Important: read these instructions for use carefully and keep them in a safe place!

Life-threatening hazard!

Never leave children with the packaging materials unsupervised. There is a risk of suffocation.
LEDs are not replaceable.

This product can be used by children above the age of 8 and by people with reduced physical, sensory, or mental capacities or by those lacking experience and knowledge provided they are supervised or have been instructed in the safe use of the product and understand the risks involved. Children may not play with the product. Cleaning and user maintenance may not be performed by children without supervision.

Danger of Injury

This product is not a toy. Never leave children unsupervised with the product.
No modifications may be made to the product!
Only use the product for its intended use.

Avoid property damage!

Check the product for damage and wear before each use.
The product may only be used in good order and condition!

IAN: 466651_2404

Usluge servisa

Magyarországi ügyfélszolgálat
Telefonszám: 0680021647
Kapcsolatfelvételi úrlap a parkside-diy.com oldalon
Székhely: Németország

Use

1. Assemble the product as shown in fig. B.
2. Fill the insert (2) with soil and bed in the selected seeds or seedlings. Use the planting tool (7) for this.
Note: Soil should be moist but not wet. Don't pack the soil down too firmly. Follow the instructions for the chosen seeds.
3. Connect the end (8a) of the USB cable (8) with the product's ventilation wheel (4).
4. Connect the other end (8f) of the cable to a USB port of a switched-on laptop/notebook or of a charging station with a USB port.
Note: To operate use only a power-supply unit of protection level II authorised for domestic appliances with a USB output.
5. Open the ventilation slots to dry out excess humidity or if need be remove the cover for a few hours.
6. Use the markers (5) to identify different kinds of plants.
Note: To replant the seedlings use the replanting tool (6) so as not to damage the root system.

Storage, cleaning

When not in use, always store the product clean and dry at room temperature. Only clean the product with a damp cloth and wipe dry afterwards.
IMPORTANT! Never clean the product with harsh cleaning agents.

Setting up

When setting the product up follow the instructions below:
Place the product on an even surface.
Place the product in a location where it is not exposed to strong sunlight.
Place the product in a draught-free location and not close to heat sources.

Switching the light on and off

Note: The USB cable has a control device that switches the LED functions on and off or regulates them.

Control device with button layout (fig. B)

On/off button (8e)
Light change button: 6h/18h and 12h/12h (8d)
Light change button: Alternate among the pots (8c)
Dimmer function-button (8b)

Timer function:

On the timer function you can select from two options:
6 hours switched on/18 hours switched off
12 hours switched on/12 hours switched off
The sequence is repeated daily.

Switching the timer function on/off

1. Before first use, press the on/off button (8e) once to switch the product on.
The control light (blue stripe) switches off.
2. Press the timer function button (8d) once to set the product's timer function to 6h/18h. The LED light on the control device (6H) lights up blue.
3. Press the timer function button again to set the timer function to 12h/12h. The LED light on the control device (12H) lights up red.
Note: The light on the control device serves to indicate which timer function is currently active.
4. Press the timer function button again to deactivate the timer function. The 6H and 12H fields no longer light up.

Disposal

The accompanying symbol indicates that this device complies with Directive 2012/19/EU. This directive indicates that you may not dispose of this device along with basic household waste at the end of its useful life and instead must hand it in to specifically designated collection sites, valuable substance collection stations, or waste disposal facilities.
Look after the environment and dispose of waste properly. Batteries may not be disposed of with household waste. They may contain toxic heavy metals and are subject to hazardous waste treatment. The chemical symbols of the heavy metals are as follows: Cd = cadmium, Hg = mercury, Pb = lead. Dispose of used batteries at a municipal collection site.
For further information about disposal of the product no longer needed, contact your local council.
Dispose of the product and the packaging in an environmentally friendly manner. Store the packaging materials (foil bags, for example) out of the reach of children.

Service handling

Customer Service United Kingdom
Telephone: 08000518970
Contact form at parkside-diy.com
Location: Germany

Note the label on the packaging materials when separating waste, as these are labelled with abbreviations (a) and numbers (b) with the following meaning: 1-7: plastics / 20-22: paper and cardboard / 80-98: composite materials.
The product and the packaging materials can be recycled, dispose of them separately for better treatment of waste.

Guarantee handling

To ensure rapid processing of your case please follow the following instructions:
For all inquiries keep the sales receipt and product number (e.g. IAN 123456_7890) handy as proof of purchase.
You will find the product number on the product label, on an engraving on the product, on the title page of your instructions (bottom left), or on the sticker on the back or bottom of the product.
Should any functional problem or other defects occur, first contact the service department named below by telephone or use our contact form, which you will find at parkside-diy.com under service categories.
Once the product is determined to be defective, you can then attach the proof of purchase (sales receipt) and state the nature of the defect and when it occurred and send it, postage free for you, to the address of the service department of which you have been notified.

At parkside-diy.com you can find and download these and many other manuals. With this QR code you can directly access parkside-diy.com. Select your country and use the search template to look for the operating instructions. By entering the product number (e.g. IAN 123456_7890) you access the operating instructions for your product.



IAN: 466651_2404

Service handling

Customer Service United Kingdom
Telephone: 08000518970
Contact form at parkside-diy.com
Location: Germany

Szövből gratulálunk!
Vásárlásával kiváló minőségű terméket választott. Használatba vétele előtt ismerkedjen meg a termékkel.
Figyelmesen olvassa el az alábbi használati útmutatót.
A terméket kizárólag az itt ismertetett módon, a rendeltetésének megfelelően használja. Gondosan őrizze meg a használati útmutatót. A termék továbbadásakor adja át az összes kapcsolódó dokumentumot is.

A csomag tartalma (A ábra)

1 x LED-es csíráztatókészlet (1-4)
1 x tartozék (5-7)
1 x USB kábel (8)
1 x használati útmutató

Műszaki adatok

Méreték: kb. 185 x 140 x 140 mm (h x sz x m)
USB kábel: C típus
Bemenet: 5V === 1,25 A
Kimenet: 5 x 5V === 0,25 A

Védelmi osztály: III

Védelmi osztály: II

A terméket csak azon II. védelmi osztályú készülékekhez szabad csatlakoztatni, amelyekben ez a szimbólum megtalálható.

Ez a termék csak SELV/PELV feszültségű szolgáltató vezérlőegységhez csatlakoztatható.

Egyenfeszültség jele

Delta-Sport Handelskontor GmbH kijelenti, hogy ez a cikk megfelel az alapvető követelményeknek és az egyéb vonatkozó rendelkezéseknek.

Gyártás dátuma (hónap/év): 10/2024

Rendeltetészerű használat

A termék csíráztatóként való, nem kereskedelmi célú felhasználásra készült.

CSAK BELTÉRBEN HASZNÁLHATÓ.

Időzítőfunkció: 6 óra bekapcsolva / 18 óra kikapcsolva
Időzítőfunkció: 12 óra bekapcsolva / 12 óra kikapcsolva

Biztonsági utasítások

Fontos: figyelmesen olvassa el a használati útmutatót, és feltétlenül őrizze meg!

Életveszély!

Soha ne hagyjon gyermeket felügyelet nélkül a csomagolóanyaggal. Legutak külső elzáródása miatti fulladásveszély.
A LED-ek nem cserélhetők.

Ezt a terméket 8 évnél fiatalabb gyermekek, valamint csökkent fizikai, érzékszervi vagy mentális képességekkel bíró vagy tapasztalat és tudás hiányában szenvedő személyek csak akkor használhatják, ha felügyelet alatt állnak, vagy a készülék biztonságos használatáról ki lettek oktatva, és a termék használatából adódó veszélyeket megértették. A gyermekek nem játszhatnak a termékkel. A tisztítást és a felhasználói karbantartást a gyermekek felügyelet nélkül nem végezhetik.

Sérülésveszély!

A termék nem játékszer. Soha ne hagyjon gyermekeket felügyelet nélkül a termékkel.
A terméket nem szabad átalkítani, módosítani
A terméket kizárólag rendeltetésének megfelelően használja.

Obdelava v primeru garancijskega zahtevka

Za zagotovitev hitro obdelavo svoje zadeve, sledite naslednjim napotkom:
Za vsa vprašanja imejte pri roki račun in številko artikla (npr. IAN 123456_7890) kot dokazilo o nakupu.
Številko artikla najdete na tipski ploščici izdelka, gravuri na izdelku, ovitku vaših navodil (spodaj levo) ali nalepki na zadnji ali spodnji strani izdelka.
Napotek: Lučka upravljalnega elementa služi kot indikator, katera funkcija časovnika je trenutno aktivna.
4. Tipko za funkcijo časovnika ponovno pritisnite, da funkcijo časovnika deaktivirate. Polji 6H in 12H ne svetita več.

Šhranjevanje, čiščenje
Če izdelka ne uporabljate, ga shranite na suho, čisto mesto pri sobni temperaturi. Čistite le z vlažno krpo in nato do suhega obrišite.
POMEMBNO! Nikoli ne čistite z ostrimi čistilnimi sredstvi.
Napotki za odlaganje v smeti
Sosednji simbol označuje, da za to napravo velja Direktiva 2012/19/EU. Ta direktiva določa, da te naprave po koncu njene življenjske dobe ne smete odvračati med običajne gospodinjске odpadke, temveč jo morate oddati na posebej vzpostavljene zbirišče mestih, v centrih za recikliranje ali v podjetjih za odstranjevanje. Vanjeto okolje in pravno odpravljanje med odpadke. Baterij/akumulatorskih baterij ni dovoljeno odlagati med gospodinjске odpadke. Lahko vsebujejo težke kovine, zato so podvržene predelavi posebnih odpadkov. Kemični simboli težkih kovin so naslednji: Cd = kadmij, Hg = živo srebro, Pb = svinec. Izrabljene baterije/akumulatorske baterije zato oddajte na komunalnem zbiriščnem mestu.
Druge informacije o odstranjevanju osludzene opreme med odpadke lahko dobite pri svoji občinski ali mestni upravi. Opremo in embalažo zavrzite okolju prijazno. Embalažni material (kot so npr. vrečke iz folije) hranite izven dosega otrok.
Pri ločevanju odpadkov upoštevajte oznake embalažnih materialov. Označeni so s kratricami (a) in številkami (b) z naslednjim pomenom: 1-7: umetne mase / 20-22: papir in lepka / 80-98: kompozitni materiali. Izdelek in embalažne materiale je mogoče reciklirati, zato jih zavrzite ločeno, da jih je mogoče lažje predelati.

IAN: 466651_2404

Napotki za garancijo in izvajanje servisne storitve
Služba za stranke Slovenija
Telefon: 080081400
Sedež: Nemčija

Obrazec za stik na spletni strani parkside-diy.com

Sedež: Nemčija

Obrazec za stik na spletni strani parkside-diy.com

Sedež: Nemčija

IAN 466651_2404



