

 


HOT AIR BRUSH CWG 300 A1


GB IE NI MT

HOT AIR BRUSH


Operation and safety notes




A

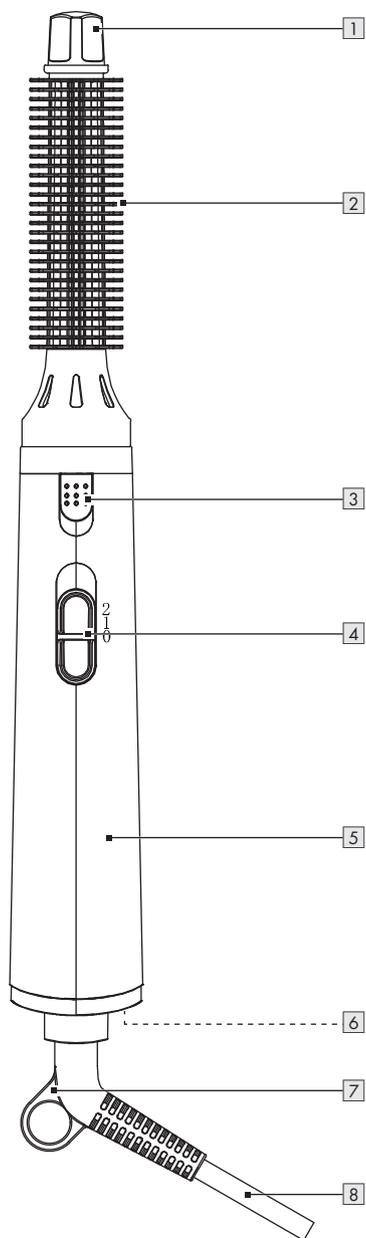


B

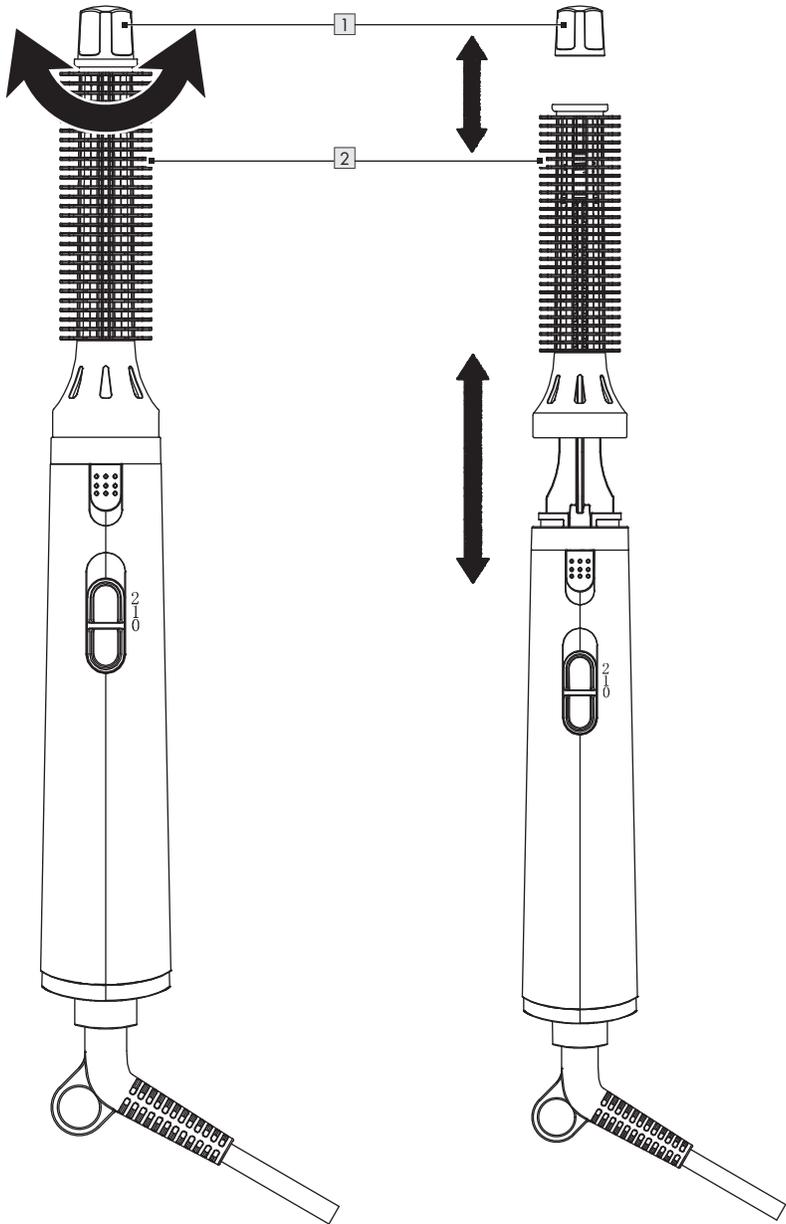

C

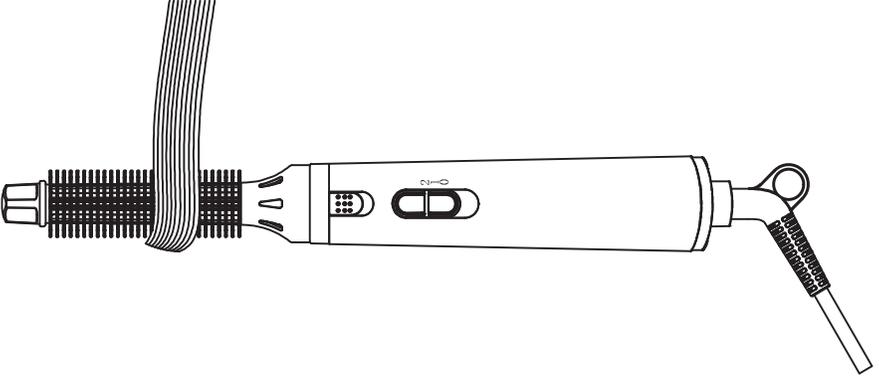

D

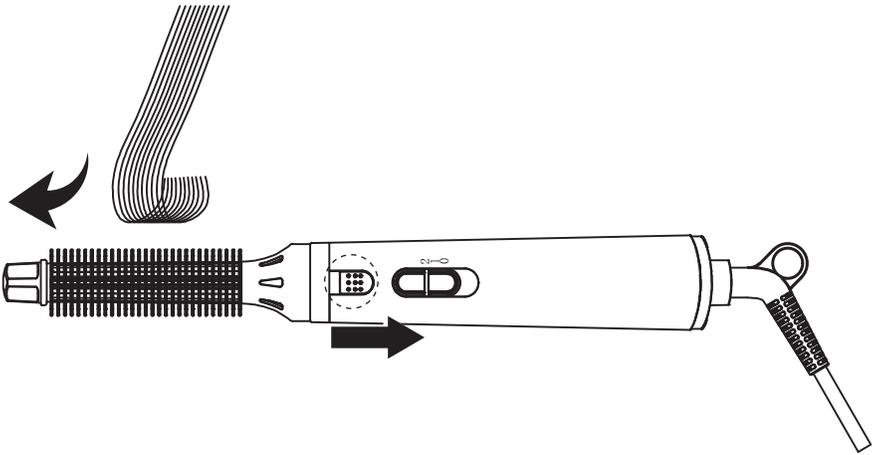

List of pictograms used	Page	6
Introduction	Page	6
Intended use	Page	7
Scope of delivery	Page	7
Parts description	Page	7
Technical data	Page	7
Safety instructions	Page	7
First set-up of the product	Page	9
Unpacking the product and basic cleaning	Page	9
Operation	Page	9
Off mode	Page	9
Drying and styling hair	Page	10
Styling tips	Page	10
Troubleshooting	Page	11
Cleaning and care	Page	11
Removing/attaching the brush attachment	Page	11
Cleaning	Page	11
Storage	Page	11
Disposal	Page	11
Warranty	Page	12
Warranty claim procedure	Page	12
Service	Page	12

List of pictograms used

	Read the user manual.		Alternating current/voltage
	DANGER! – Designating a hazard with high risk, which will result in death or severe injury if not avoided (e.g. risk of suffocation)	Hz	Hertz (supply frequency)
	WARNING! – Designating a hazard with moderate risk, which can result in death or severe injury if not avoided (e.g. risk of electric shock)	W	Watts
	CAUTION! – Designating a hazard with low risk, which could result in minor or moderate injury if not avoided (e.g. risk of scalding)		Use the product in dry indoor spaces only.
	NOTICE! – Warns of possible damage to property/the product if not avoided (e.g. risk of short circuit)		Protection class II (double insulation)
	INFO: This symbol with the “Info” signal word offers additional useful information.		Do not use this product near bathtubs, showers, basins or other vessels containing water.
CE	CE mark indicates conformity with relevant EU directives applicable for this product.	 	Safety information Instructions for use

HOT AIR BRUSH

● Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. The instructions for use are part of the product. They contain important information concerning safety, use and disposal. Before using the product, please familiarise yourself with all of the safety information and instructions for use. Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.



You can download and view this and numerous other manuals at www.lidl-service.com. By scanning this QR code, you will be taken straight to the Lidl service website (www.lidl-service.com)

where you can open your instruction manual by entering the article number (IAN) 493479_2504.

● Intended use

- This product is intended for drying and styling human hair.
- The product must not be used on artificial or animal hair. Do not use the product for any other purpose.
- The product is only intended for use in private households. The product is not suitable for commercial purposes.
- The manufacturer accepts no liability for damages caused by improper use.

● Scope of delivery

After unpacking the product, check if the delivery is complete and if all parts are in good condition. Remove all packing materials before use.

- 1 Hot air brush
- 1 Operation and safety notes

● Parts description

(Fig. A)

- 1 Cap
- 2 Brush attachment with air outlet
- 3 Curl release button
- 4 Function switch **(0/1/2)**
- 5 Handle
- 6 Air inlet
- 7 Hanging loop
- 8 Mains cord with mains plug

● Technical data

Input voltage:	220–240 V~, 50–60 Hz
Rated power:	300 W
Protection class:	II / 
Power consumption in off mode:	0 W



Safety instructions

BEFORE USING THE PRODUCT, FAMILIARISE YOURSELF WITH ALL OF THE SAFETY INFORMATION AND INSTRUCTIONS FOR USE! WHEN PASSING THIS PRODUCT ON TO OTHERS, ALSO INCLUDE ALL THE DOCUMENTS!

In the case of damage resulting from non-compliance with these operating instructions the warranty claim becomes invalid! No liability is accepted for consequential damage! In the case of material damage or personal injury caused by incorrect handling or non-compliance with the safety instructions, no liability is accepted!

⚠ WARNING! RISK OF LOSS OF LIFE OR ACCIDENT TO INFANTS AND CHILDREN!

Never leave children unsupervised with the packaging material. The packaging material represents a danger of suffocation. Children frequently underestimate the dangers. Always keep children away from the packaging material.

- This product can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children shall not play with the product. Cleaning and user maintenance shall not be made by children without supervision.

- If the mains cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ WARNING! Risk of electric shock! Do not use this product near bathtubs, showers, basins or other vessels containing water.

⚠ CAUTION! Risk of burns! Keep the product out of reach from young children, particularly during use and cool down.

- When the product is connected to the mains supply: Never leave the product unattended.

- When the product is heating up or cooling down: Never place the product on a table and close to other objects.
- When the product is used in a bathroom: Remove the mains plug from the mains outlet after use. The proximity of water presents a hazard, even when the product is switched off.
- For additional protection: The installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

⚠ WARNING! Risk of injury! Use this product solely in accordance with these instructions. Do not attempt to modify the product in any way.

- The product is not to be used if it has been dropped and there are visible signs of damage.
- Disconnect the product from the mains supply and contact your retailer if it is damaged.

⚠ WARNING! Risk of electric shock!

- Never attempt to repair the product yourself. In case of malfunction, repairs are to

be conducted by qualified personnel only.

- Do not immerse the product in water or other liquids.
- Never hold the product under running water.
- If liquid gets into the housing: Disconnect the product from the mains supply immediately and have the product repaired by a qualified technician.
- Clean all parts of the product as described (see "Cleaning").
- Before connecting the product to the mains outlet: Check that the voltage corresponds with the mains supply details shown on the product's rating label.
- Do not use the product outdoors.
- Do not operate the product with wet hands or while standing on a wet floor.
- Do not touch the mains plug with wet hands.
- Do not pull the mains plug out of the mains outlet by the mains cord.
- After use and before cleaning: Disconnect the product from the mains supply. The product is completely free of electrical power only when unplugged.
- Do not kink or crush the mains cord, and route the mains cord

so that it cannot be stepped on or tripped over.

- Protect the product, the mains cord and the mains plug against heat, dust, direct sunlight, dripping and splashing water.
- Do not use or store the product in or expose it to a humid environment.
- Always place the product on a heat-resistant, stable, flat surface.

● **First set-up of the product**

● **Unpacking the product and basic cleaning**

① **INFO:** The product may give off some odour during first use. This is due to production or transport residues that will quickly subside. Ensure sufficient ventilation in the area.

1. Take the product out of the packaging and remove all packaging materials.
2. Check to make sure that all listed parts are included (see "Scope of delivery").
3. Check whether the product and all parts are in good condition, if any damage or defect is detected, do not use the product, but follow the procedure described in chapter "Warranty".

● **Operation**

● **Off mode**

- The product enters off mode automatically when:
 - the product is connected to the mains supply and
 - the function switch **4** is in **0** position
- When the product is not in use: Remove the mains plug **8** from the mains supply.

● Drying and styling hair

⚠ CAUTION! Risk of burns! The product becomes very hot during use.

- When the product is switched on or cooling down: Never touch the brush attachment with air outlet [2].
 - Always hold the product by its handle [5].
 - Never place the switched on or hot product on a table.
 - Never block the air inlet [6] or the air outlet [2].
 - If any hair gets caught in the brush attachment [2]: Switch off the product. Remove the hair carefully after the product has cooled down.
1. Connect the mains plug [8] to a suitable mains outlet.
 2. Slide the function switch [4] into the suitable position:

Function switch	Function mode
0	Product switched off
1	Product switched on: <ul style="list-style-type: none"> ■ Low heat and speed ■ Ideal for sensitive or fine hair
2	Product switched on: <ul style="list-style-type: none"> ■ High heat and speed ■ Ideal for normal hair

3. Grasp an approximately 4 cm wide strand of hair and hold it at the brush attachment [2]. If necessary, hold the cap [1] briefly to rotate the product (Fig. C).
4. Guide the product evenly along the strand from close to the root to the tip. Place the brush attachment [2] at the end of hair, then rotate the appliance by the handle to roll the hair onto the brush attachment [2]. Do not hold the product too long on any part of the hair strand.

5. Releasing hair from the brush attachment [2]: Slide the curl release button [3] towards the handle [5] and hold it in position. Pull the product down simultaneously. The brush attachment rolls out of the lock (Fig. D).
6. Repeat the steps 3. to 5. until the result is satisfactory.
7. Work through the strands section by section until all hair is styled as desired.
8. After use: Slide the function switch [4] to position **0** to switch off the product. The product enters off mode.
9. Disconnect the mains plug [8] from the mains outlet.
10. Allow the product to cool down completely.

● Styling tips

- Use the product to style small curls and waves and to dry slightly damp hair.
- Preventing heat damage: Avoid brushing your hair for extended periods or maintaining prolonged contact with the product.
- A suitable styling product can enhance the durability of the curls. Choose a styling product that also contains heat protection.
- Before using the product:
 - Dry your hair until it is slightly damp. We do not recommend to style hair that is too wet.
 - Use a comb to thoroughly comb the dry hair.
- If you want to comb out the hair after styling: Allow the hair to cool down well first.

● Troubleshooting

Problem	Cause	Solution
The product is not working.	The mains plug 8 is not connected to a mains outlet.	Connect the mains plug 8 to a suitable mains outlet.
	The mains outlet is defective.	Connect the mains plug 8 to a different mains outlet.
The product is not sufficiently heated up.	The set temperature is too low.	Set a higher heat level (see "Drying and styling hair").

● Cleaning and care

⚠ **WARNING! Risk of electric shock!**

- Disconnect the mains plug **8** from the mains outlet.
- Do not immerse the product in water or other liquids.

⚠ **CAUTION! Risk of burns!**

Allow the product to cool down completely.

- ### ⚠ **NOTICE! Risk of product damage!** Do not use any aggressive cleaning liquids or solvents. These can damage the surface of the product.

● Removing/attaching the brush attachment

(Fig. B)

Removing the brush attachment

1. Turn the cap **1** in anticlockwise direction.
2. Remove the cap **1**.
3. Pull the brush attachment **2** off the product.

Attaching the brush attachment

1. Attach the brush attachment **2** to the product.
2. Fastening the cap **1**: Turn the cap in clockwise direction.

● Cleaning

Cleaning the product

1. Remove the brush attachment **2** from the product (see "Removing/attaching the brush attachment").

2. Wipe the product with a slightly damp cloth. For stubborn soiling, use a mild cleaning detergent.
3. Let the product dry completely.

Cleaning the brush attachment

1. Remove any remaining hair from the brush attachment **2**.
2. Remove the brush attachment **2** from the product (see "Removing/attaching the brush attachment").
3. Clean the brush attachment **2** with lukewarm water and a mild cleaning detergent.
4. Rinse the brush attachment **2** with clear water.
5. Let the brush attachment **2** dry completely.
6. Attach the brush attachment **2** to the product (see "Removing/attaching the brush attachment").

● Storage

- For short term storage: Use the hanging loop **7** to hang the product.
- Store the product in the original packaging.
- Store the product in a cool, dry place, protected from moisture and out of the reach of children.

● Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.



Observe the marking of the packaging materials for waste separation, which

are marked with abbreviations (a) and numbers (b) with following meaning:
1-7: plastics/20-22: paper and fibreboard/80-98: composite materials.

Product:



Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.



To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of material or manufacturing defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Keep the original sales receipt in a safe location as this document is required as proof of purchase.

Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.

Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. The warranty period is not extended as a result of a claim being granted. This also applies to replaced and repaired parts.

This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty covers material or manufacturing defects. This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g. batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g. switches or glass parts.

Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions:

Please have the till receipt and the item number (IAN 493479_2504) available as proof of purchase.

You will find the item number on the rating plate, an engraving, on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product.

If functional or other defects occur, please contact the service department listed either by telephone or by e-mail.

You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

Service

GB Service Great Britain

Tel.: 0800 404 7657

E-Mail: owim@lidl.gb

IE Service Ireland

Tel.: 1800 101010

E-Mail: owim@lidl.ie

NI Service Northern Ireland

Tel.: 1800 101010

E-Mail: owim@lidl.ni

MT Service Malta

Tel.: 80062230

E-Mail: owim@lidl.mt



OWIM GmbH & Co. KG

Stiftsbergstraße 1
74167 Neckarsulm
GERMANY

Model No.: HG13855-BS

Version: 10/2025

IAN 493479_2504

