



ROCKET & GLIDER / MINI HAND LAUNCH GLIDER / SLINGSHOT GLIDER

GB
ROCKET & GLIDER /
MINI HAND LAUNCH GLIDER /
SLINGSHOT GLIDER
 Instructions for use

DE AT CH
RAKETE UND GLEITER /
MINI WURFGLEITER /
KATAPULT GLEITER
 Gebrauchsanweisung

PL
RAKIETA I SZYBOWIEC /
MINI SZYBOWIEC DO RZUCANIA /
SZYBOWIEC Z KATAPULTĄ
 Instrukcja użytkowania



IAN 373237_2204





DELTA-SPORT HANDELSKONTOR GMBH
 Wragelkamp 6 • DE-22397 Hamburg
 GERMANY

10/2022
 Delta-Sport-Nr.: FS-10891, FS-10892,
 FS-10893


IAN 373237_2204



FS-10891

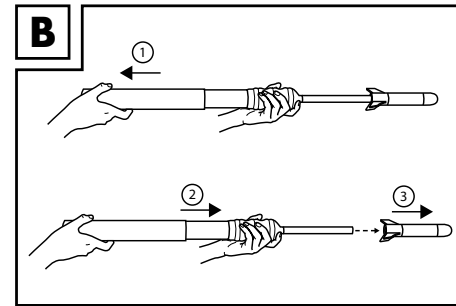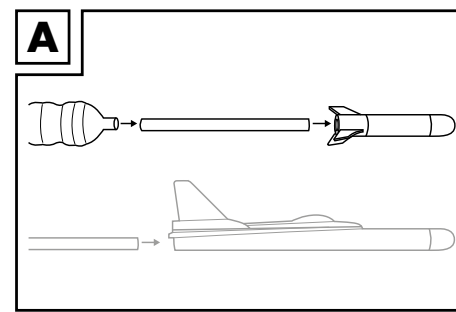

FS-10893

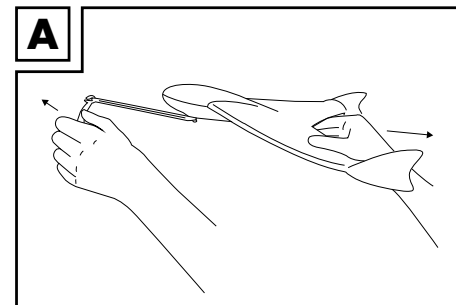

2. In one quick and forceful move press the rear part of the air pressure pump forwards to launch the rocket or glider.

FS-10892
Affixing stickers (fig. A)
 Peel the stickers off the sheet and attach them correspondingly to wing and rudder.




Assembly (fig. A, B, C)
 Insert the wing into the slot on the fuselage, as shown in fig. A, allowing it to lock in the centre. On one side of the rudder is a part marked "T" and on the other a "P". The "T" stands for looping and the "P" stands for gliding.
Note: When positioning the rudder always handle at the fuselage end.

Looping
 Insert the rudder into the fuselage with the "T" upwards (the "P" faces downwards), as shown in fig. A.
 Hold the product with the fuselage nose slightly inclined upwards and throw it with full force into the wind (fig. B).

Gliding:
 Insert the rudder into the fuselage with the "P" upwards (the "T" faces downwards), as shown in fig. A.
 Hold the product with the fuselage nose slightly inclined downwards and without applying too much force throw it into the wind (fig. C).
Note: Gliding can be adjusted by bending the rudder slightly at the fuselage end.

FS-10893
Assembly (fig. A)
 1. Hook the elastic band to the underside of the glider.
Note: Use only the elastic band provided.
 2. Pull the rubber catapult forwards and the slider backwards at the same time.
 3. Release the glider to let it fly.

FS-10892

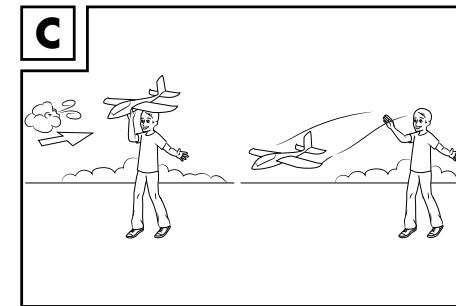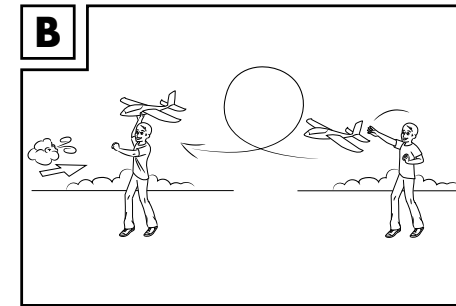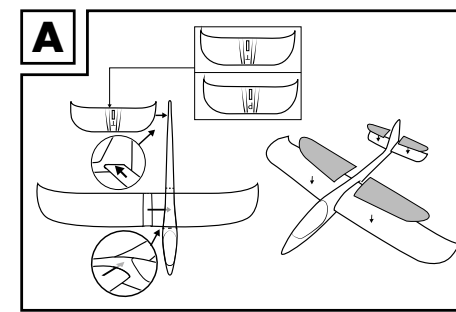

Congratulations!
 You have chosen to purchase a high-quality product. Familiarise yourself with the product before using it for the first time.
Read the following instructions for use carefully.
 Use the product only as described and only for the given areas of application. Store these instructions for use carefully. When passing the product on to third parties, please also hand over all accompanying documents.

Scope of delivery
FS-10891
 1 x air pressure pump
 1 x attachment
 1 x rocket
 1 x glider
 1 x instructions for use

FS-10892
 1 x fuselage
 1 x wing
 1 x rudder
 4 x sticker
 1 x instructions for use

FS-10893
 1 x glider
 1 x rubber catapult (3-part)
 1 x instructions for use

Technical data
 Date of manufacture (month/year):
 10/2022

Delta-Sport Handelskontor GmbH hereby declares that this product meets the following basic requirements, as well as other important regulations: 2009/48/EC – Toy Safety Directive

UK Conformity Assessed
 Delta-Sport Handelskontor GmbH hereby declares that this product meets the following basic requirements, as well as other important regulations: Toys (Safety) Regulations 2011

Intended use
 This product is a toy for private use and for children aged 5 years and above.

Safety instructions

- Warning. Not suitable for children under 36 months. Choking hazard. Small parts.
- Warning. Do not aim at eyes or face.
- Use of this product requires care and practice.
- Children may only play with the product under adult supervision.
- Never let the product fly in nature reserves, scenic areas, bird sanctuaries, above roads or wherever flying is expressly prohibited!
- Never let the product fly in the vicinity of overhead power lines!
- Never let the product fly in the vicinity of trees!
- Let it fly only in open areas, at sufficient distance from people and animals!
- Do not attach any additional loads to the product!
- When landing on hard surfaces such as asphalt, pavement, stone or the like, the material may become worn by abrasion.
- Warning. The packaging and mounting materials are not a constituent part of the toy and they must be removed in all cases for safety reasons before the product is given to children to play with.
- Check the product for damage and wear before each use. The product may only be used in good order and condition!

FS-10891
Assembly (fig. A)
 Put the attachment on the air pressure pump, as shown in fig. A. Then place either the rocket or the glider on the attachment.

Use (fig. B)
 1. Pull back the rear section of the air pressure pump.
Note: Pull the rear section of the air pressure pump back but not too far. It might damage the material.

Storage, cleaning
 When not in use, always store the product clean and dry at room temperature.
 Only clean the product with a damp cloth and wipe dry afterwards.
IMPORTANT! Never clean the product with harsh cleaning agents.

Disposal
 Dispose of the product and packaging materials in accordance with current local regulations. Store the packaging materials (foil bags, for example) out of the reach of children. For further information about disposal of the product no longer needed, contact your local council. Dispose of the product and the packaging in an environmentally friendly manner.

The Recycling Code distinguishes different materials to be returned for recycling. The Code consists of the recycling symbol for the recycling process and a number that identifies the material.

Notes on the guarantee and service handling
 The product was produced with great care and under continuous quality control. DELTA-SPORT HANDELSKONTOR GmbH gives private end customers a three-year guarantee on this product from the date of purchase (guarantee period) in accordance with the following provisions. The guarantee is only valid for material and manufacturing defects. The guarantee does not cover parts subject to normal wear and tear that are thus considered wear parts (e.g. batteries) or fragile parts such as switches, rechargeable batteries, or parts made of glass. Claims under this guarantee are excluded if the product has been used incorrectly, improperly, or contrary to the intended purpose, or if the provisions in the instructions for use were not observed, unless the end customer proves that a material or manufacturing defect exists that was not caused by one of the aforementioned circumstances.

Claims under the guarantee can only be made within the guarantee period by presenting the original sales receipt. Please therefore keep the original sales receipt. The guarantee period is not extended by any repairs carried out under the guarantee, under statutory guarantees, or as a gesture of goodwill. This also applies to replaced and repaired parts.
 If you wish to make a claim please first contact the service hotline mentioned below or contact us by e-mail. If there is a guarantee case, then the product will be repaired or replaced free of charge to you or the purchase price will be refunded, depending on our choice.
 Your legal rights, in particular guarantee claims against the respective seller, are not limited by this guarantee.
 IAN: 373237_2204
 Service Great Britain
 Tel.: 0800 404 7657
 E-Mail: deltasport@lidl.co.uk

Gratulujemy!
 Decydując się na ten produkt, otrzymują Państwo towar wysokiej jakości. Należy zapoznać się z produktem przed jego pierwszym użyciem.
Należy uważnie przeczytać następującą instrukcję użytkowania.
 Produkt ten należy użytkować wyłącznie w opisany sposób oraz zgodnie ze wskazanym przeznaczeniem. Niniejszą instrukcję użytkowania należy przechowywać w bezpiecznym miejscu. Przekazując produkt innej osobie, należy upewnić się, że otrzyma ona także całą dokumentację dotyczącą produktu.

Zakres dostawy
FS-10891
 1 x pompa ciśnieniowa
 1 x nasadka
 1 x rakieta
 1 x szybowiec
 1 x instrukcja użytkowania
FS-10892
 1 x kadłub
 1 x skrzydło
 1 x ster
 4 x naklejka
 1 x instrukcja użytkowania
FS-10893
 1 x szybowiec
 1 x gumowa katapulta (3-częściowa)
 1 x instrukcja użytkowania

Dane techniczne
 Data produkcji (miesiąc/rok):
 10/2022
 Firma Delta-Sport Handelskontor GmbH oświadcza, że niniejszy produkt spełnia najważniejsze wymagania oraz jest zgodny z podanymi poniżej wytycznymi:
 2009/48/WE – dyrektywa w sprawie bezpieczeństwa zabawek

Zastosowanie zgodne z przeznaczeniem
 Ten produkt jest zabawką dla dzieci od 5. roku życia i jest przeznaczony do użytku prywatnego.

