



# WOODEN MUD KITCHEN

GB IE NI



















**WOODEN MUD KITCHEN**  
Assembly, operating and safety instructions

FR BE

**CUISINE D'EXTÉRIEUR**  
Instructions de montage, d'utilisation et consignes de sécurité




DE AT CH

**OUTDOORKÜCHE**  
Montage, Bedienungs- und Sicherheitshinweise

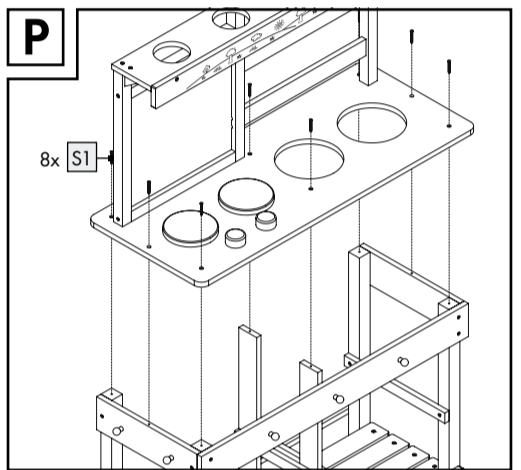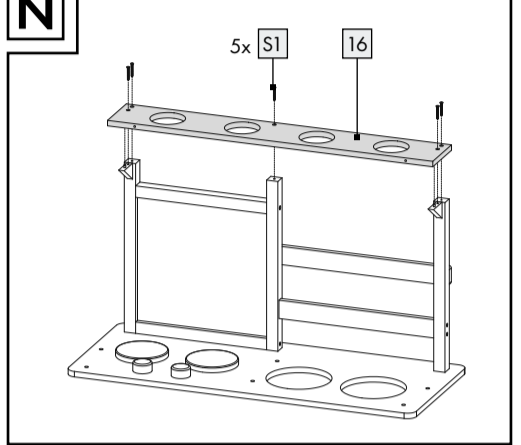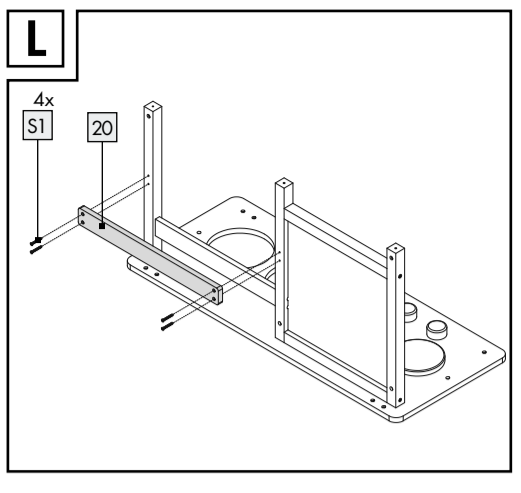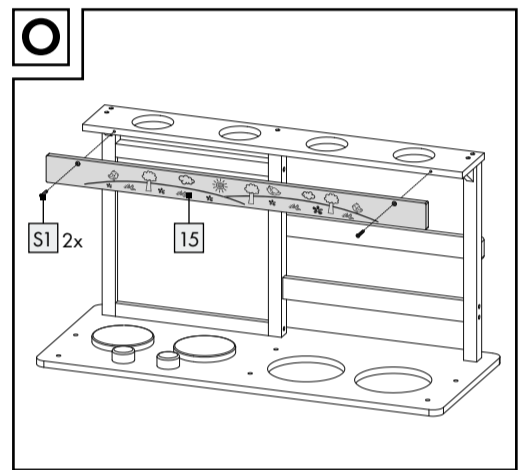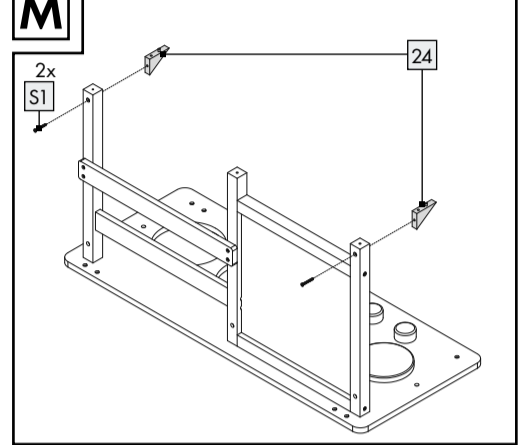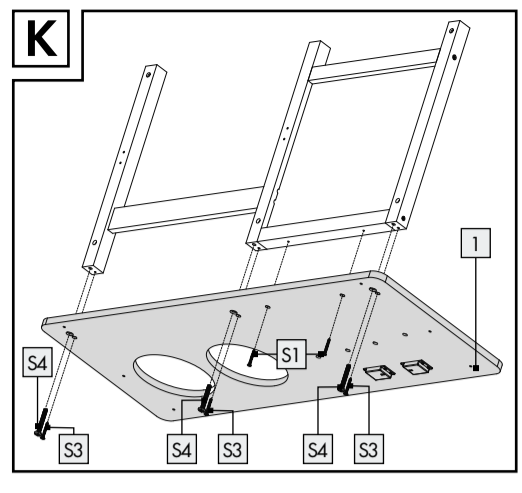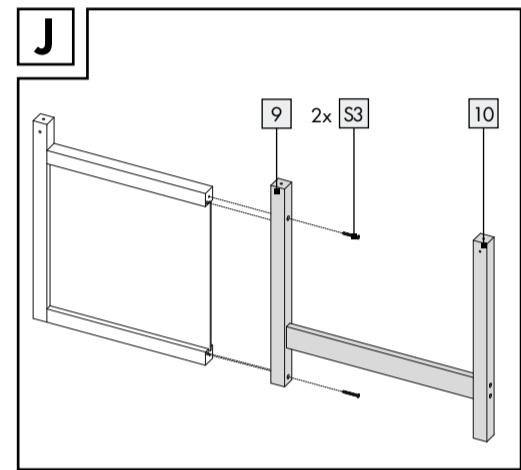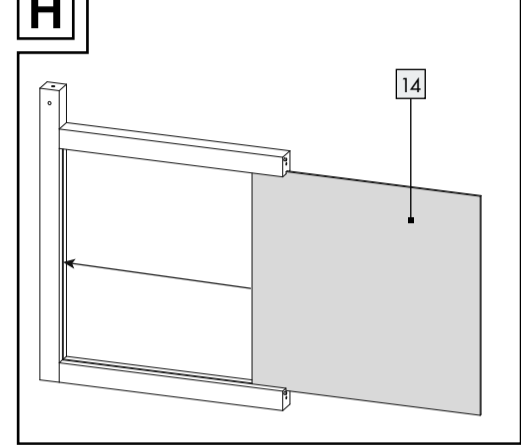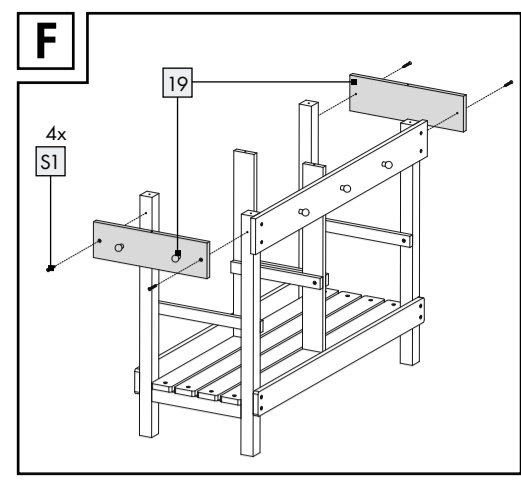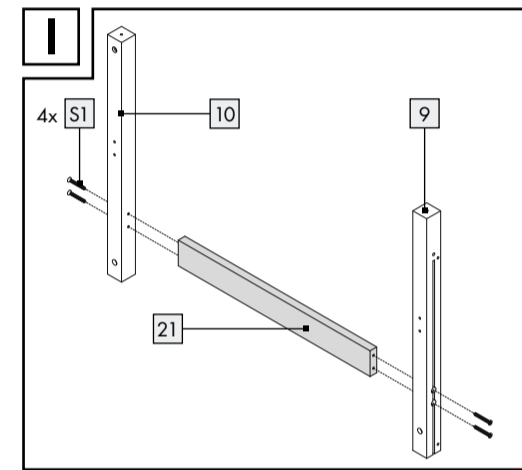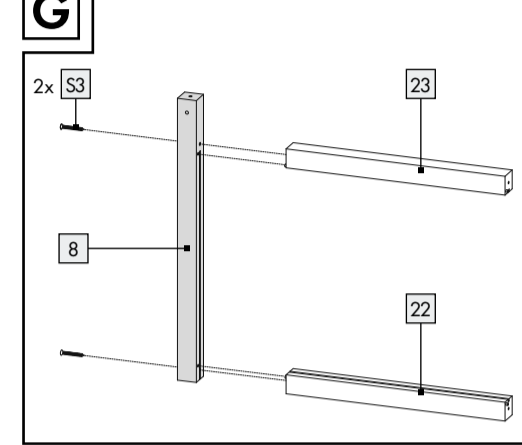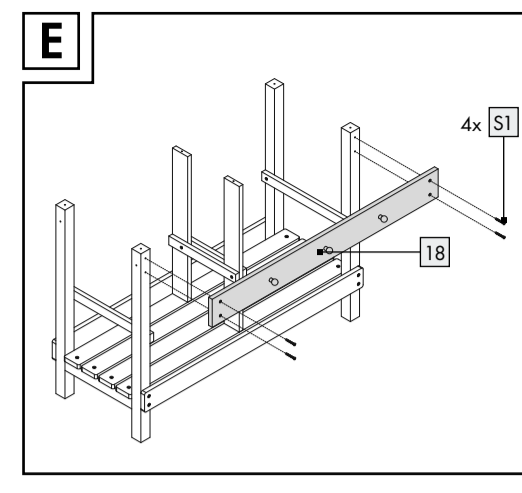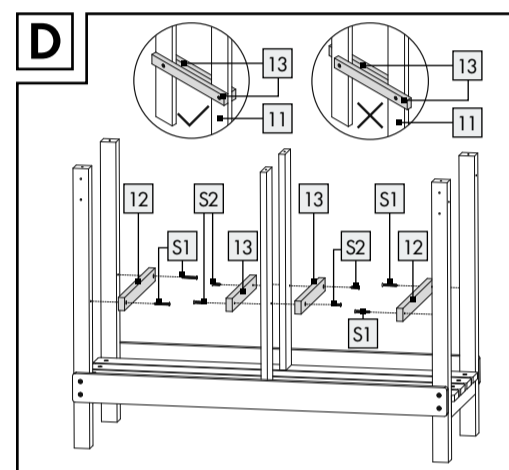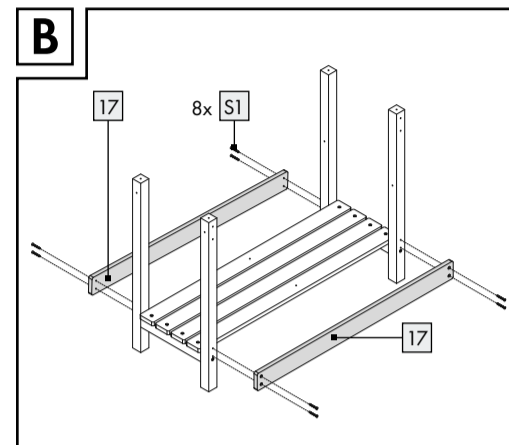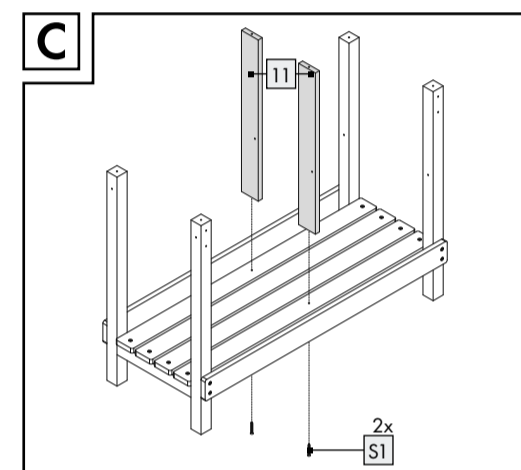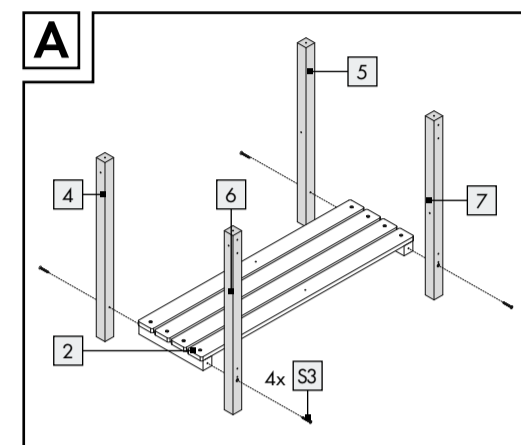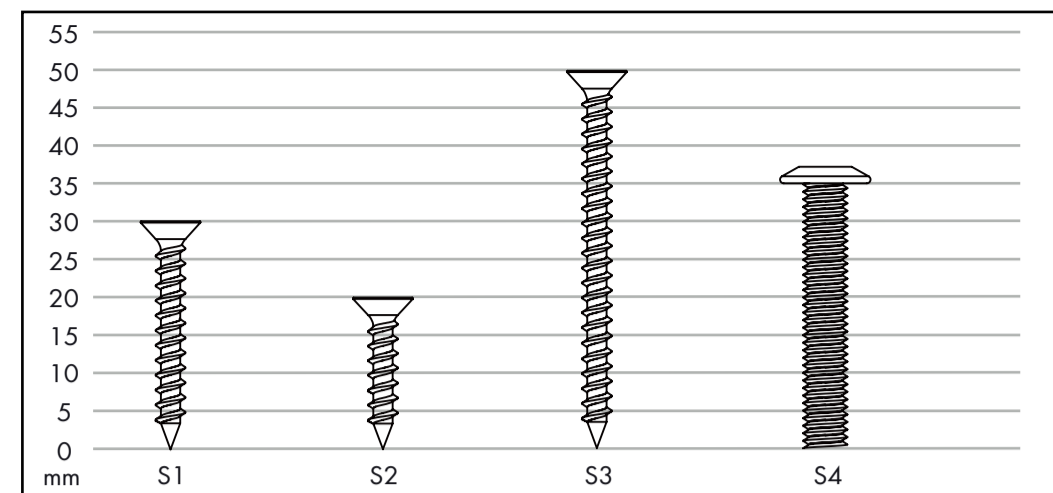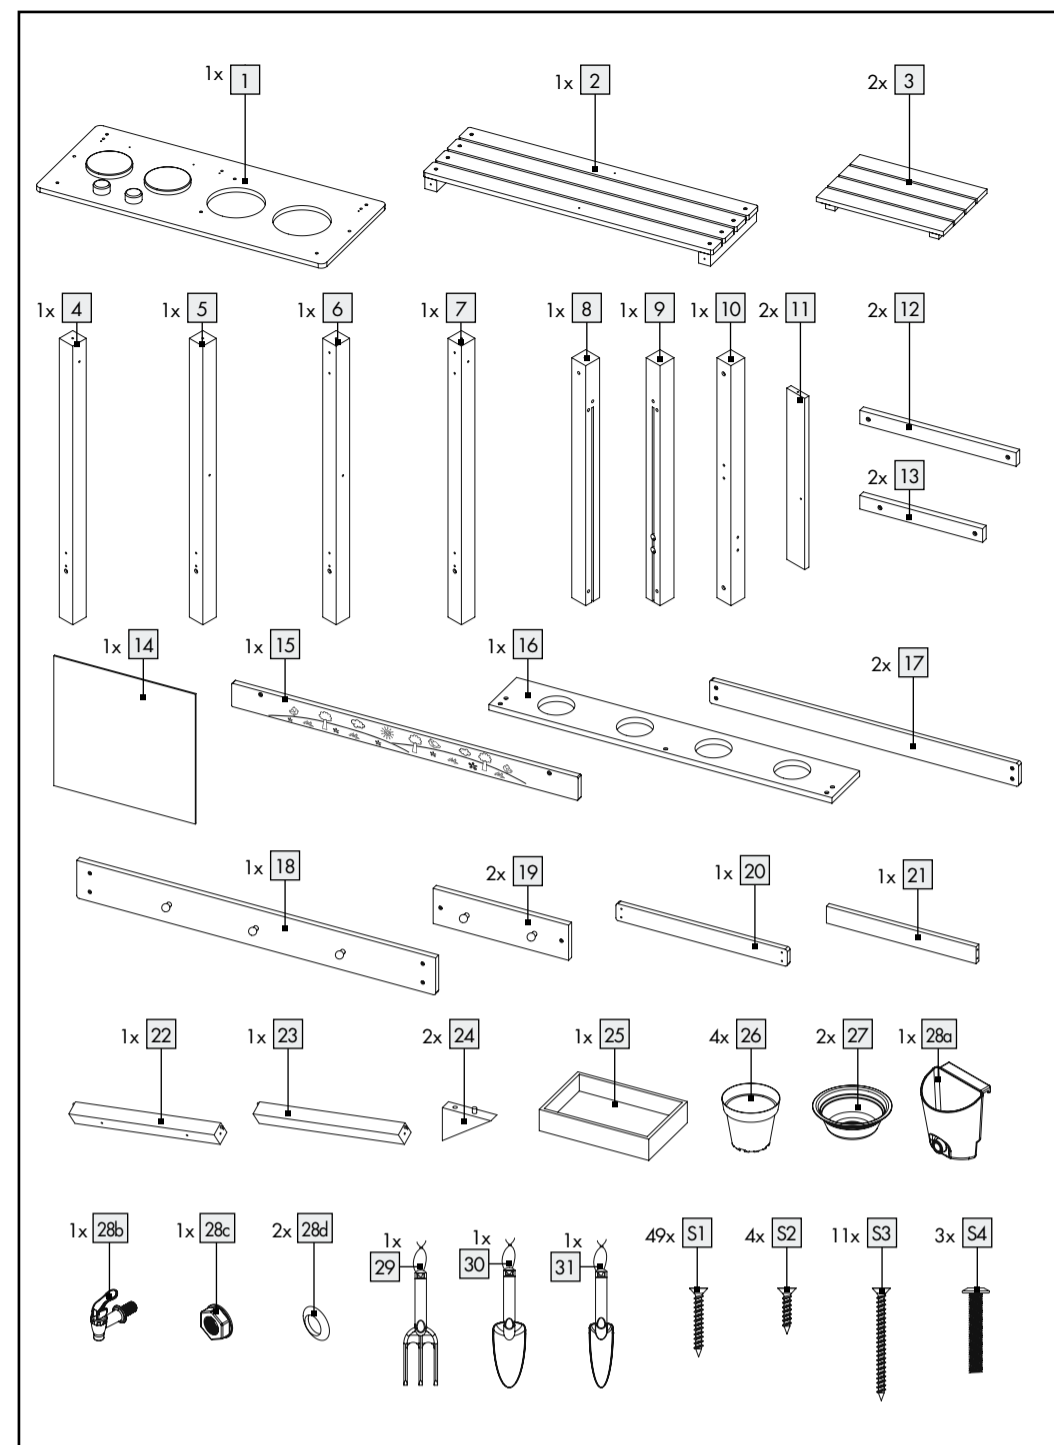

IAN 345903\_2004

GB IE NI BE NL

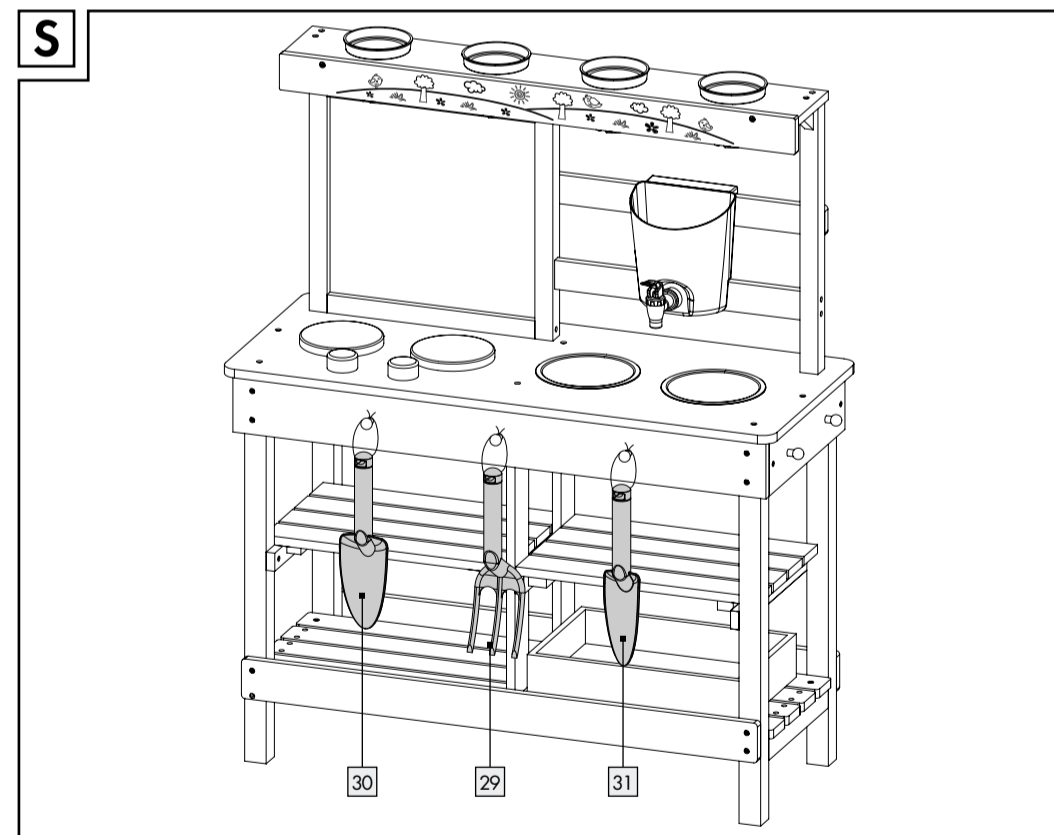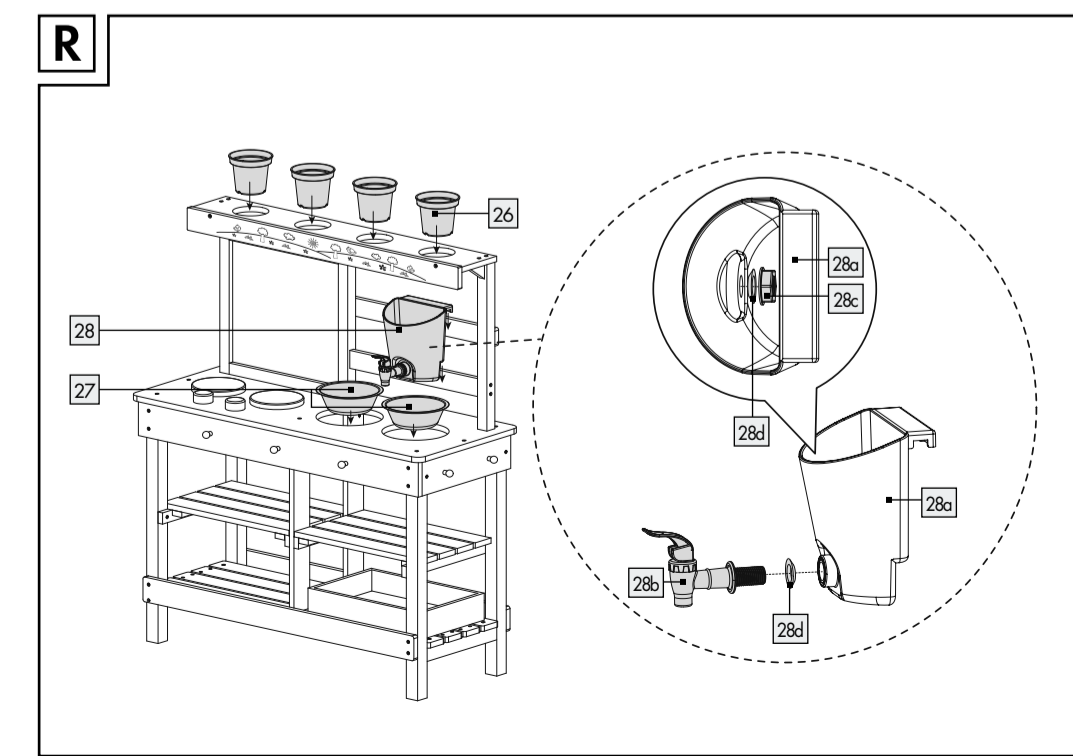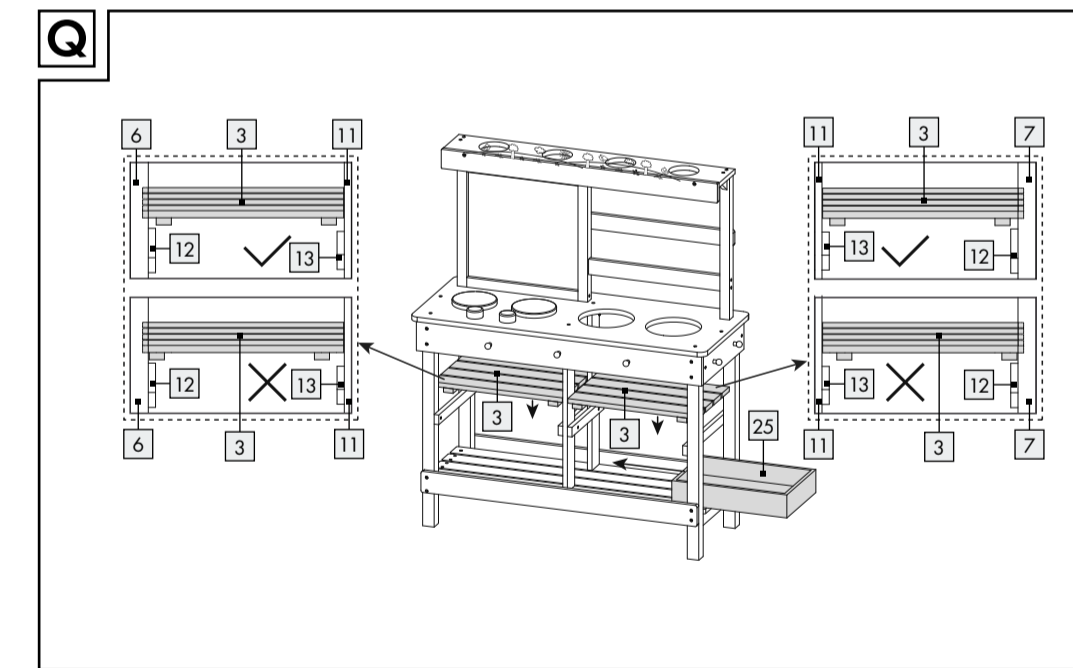

## Wooden Mud Kitchen

### Introduction

**i** We congratulate you on the purchase of your new product. You have chosen a high quality product. Familiarise yourself with the product before using it for the first time. In addition, please carefully refer to the operating instructions and the safety advice below. Only use the product as instructed and only for the indicated field of application. Keep these instructions in a safe place. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

### Intended use

The product is only intended for private household use. This product is not intended for commercial use.

### Scope of delivery

- 28 individual parts 1 - 2 4 - 13 15 - 24
- 2 shelves 3
- 1 tray 25
- 1 blackboard 14
- 4 flower pots 26
- 2 sinks 27
- 1 water bucket 28a
- 1 top 28b
- 1 bolt 28c
- 2 washers 28d
- 3 garden tools 29 - 31

- 49 screws Ø 6.8 x 30 mm S1
- 4 screws Ø 6.8 x 20 mm S2
- 11 screws Ø 7 x 49 mm S3
- 3 screws Ø 12 x 37 mm S4
- 1 set of assembly and operating instructions

### Safety notices

- WARNING.** Not suitable for children under 36 months. Choking hazard.
- WARNING.** To be used under the direct supervision of an adult.
- WARNING.** The packaging and fastening materials are not part of the toy and for safety reasons must be removed before handing the product to children to play with.
- Assembly / Disassembly by adults only due to the presence of small parts!
- Retain packaging for future reference.
- The product is suitable for children aged from 3 years old.
- The product may become unstable if used incorrectly. This could result in injuries or property damage.
- During the assembly children must be kept away due to possible risk of injury.
- Do not use the product near open fire.
- Verify the product is stable before use.
- Be sure to set the product on a level and firm surface.
- Check the product for damage or wear before every use. Only use the product in good condition.
- Do not use the product if damage is visible or suspected.
- Risk of property damage!**
  - We are not liable for accidents resulting from failure to comply with the above safety instructions or improper handling.

### Assembly

- It is recommended to assemble this product by two adults.
- Do not fully tighten screws when assembling, tighten all screws when each section completed.
- Note:** Remove all packaging materials from the product.
- Note:** You will need an additional screwdriver in order to assemble the product.

- Follow the steps shown in figures A-S for the assembly of the product.

### Care and storage

- Do not use harsh or aggressive cleaning agents.
- Clean the product only with a soft, dry cloth.
- Always store the product clean and dry and at room temperature.
- To help extend the life of this product it will need covering or sheltering during heavy rain and strong sunlight.
- Avoid locating this product in full sun.
- Secure the product in extreme weather, e.g. strong wind. Store the product in protected areas.

### Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities. Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.

### Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of product defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. This document is required as your proof of purchase.

Should this product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it - at our choice - free of charge to you. This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty applies to defects in material or manufacture. This warranty does not cover product parts subject

to normal wear, thus possibly considered consumables (e.g. batteries) or for damage to fragile parts, e.g. switches, rechargeable batteries or glass parts.

### Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions: Please have the till receipt and the item number (e.g. IAN 123456\_7890) available as proof of purchase. You will find the item number on the rating plate, an engraving on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product. If functional or other defects occur, please contact the service department listed either by telephone or by e-mail. You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

### Service

**GB Service Great Britain**  
Tel.: 08000569216  
E-Mail: owim@lidl.co.uk

**IE Service Ireland**  
Tel.: 1800 200736  
E-Mail: owim@lidl.ie

**NL Service Northern Ireland**  
Tel.: 0800927852  
E-Mail: owim@lidl.ie

## Udendørskøkken

### Indledning

**i** Hjerteligt tillykke med købet af deres nye produkt. Du har besluttet dig for et produkt af høj kvalitet. Gør Dem fortrolig med apparatet inden første ibrugtagning. Læs derfor den efterfølgende brugsvejledning og sikkerhedsanvisningerne omhyggeligt. Brug kun produktet som beskrevet og kun til de angivne anvendelsesområder. Opbevar denne vejledning på et sikkert sted. Hvis De giver produktet videre til andre, skal alle dokumenter følge med.

### Formålsbestemt anvendelse

Produktet er udelukkende beregnet til brug i private hjem. Produktet er ikke beregnet til erhvervmæssig brug.

### Leverede dele

- 28 enkeltdele 1 - 2 4 - 13 15 - 24
- 2 reolbunde 3
- 1 bakke 25
- 4 urtepotter 26
- 2 vaske 27
- 1 vandspand 28a
- 1 vandhane 28b
- 1 skrue 28c
- 2 mellemægskiver 28d
- 3 haveværktøjer 29 - 31

- 49 skruer Ø 6.8 x 30 mm S1
- 4 skruer Ø 6.8 x 20 mm S2
- 11 skruer Ø 7 x 49 mm S3
- 3 skruer Ø 12 x 37 mm S4
- 1 monterings- og betjeningsvejledning

### Sikkerhedshenvisninger

**⚠ OBS.** Ikke egnet til børn under 36 måneder. Små dele. Kvælningsfare.

- OBS.** Skal anvendes under umiddelbart opsyn af voksne.
- OBS.** Alle emballage- og fastgørelsesmaterialer er ikke bestanddel af legetøjet og skal altid fjernes på grund af sikkerhedsmæssige årsager, inden produktet gives til børn til leg.
- På grund af smådele bør monteringen / demonteringen kun foretages af voksne!
- Opbevar emballagen med henblik på senere anvendelse.
- Produktet er egnet til børn fra 3 år.
- Ved uopsigtsmæssig anvendelse kan produktet blive ustabil. Dette kan føre til kvæstelser eller materielle skader.
- Hold børn væk fra arbejdsområdet, mens produktet monteres. Ellers er der fare for tilskadekomst.
- Anvend aldrig produktet i nærheden af åben ild.
- Vær opmærksom på produktets rette stabilitet inden brug.
- Sørg for at stille produktet på et jævnt og stabilt underlag.
- Kontroller produktet inden hver anvendelse for beskadigelse eller slitage. Anvend kun produktet i fejlfri tilstand.
- Anvend ikke produktet, hvis der er synlige skader eller der er en formodning om, at der er skader.
- Fare for materielle skader!**
  - Vi hæfter ikke for ulykker, som optræder i forbindelse med ikke-overholdelse af de ovennævnte sikkerheds-henvisninger eller gennem forkert håndtering.

### Montage

- Det anbefales at to voksne bygger produktet sammen.
- Spænd ikke skruerne for meget ved monteringen. Spænd først skruerne fast, når de forskellige elementer er færdig monteret.
- Bemærk:** Fjern alt emballage fra produktet.
- Bemærk:** Til montage af produktet skal du bruge en skruetrækker.
- Følg trinene i afbildningerne A-S for at montere produktet.

