



 
PREMIUM STEAM IRON SDBB 2800 A1

GB IE NI MT

PREMIUM STEAM IRON



Operating instructions

IAN 506820_2507



GB IE NI

Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

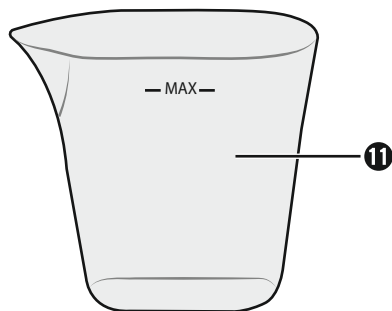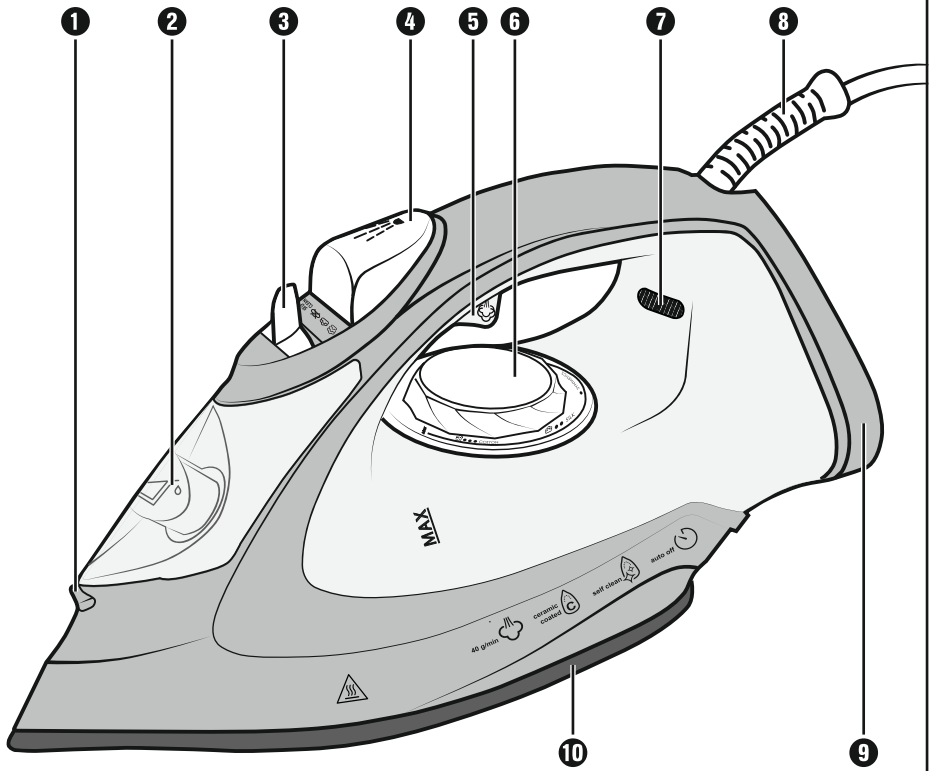

Contents

1. Introduction	2
1.1. Information about these operating instructions	2
1.2. Intended use	2
1.3. Warnings and symbols used	2
2. Safety information	3
3. Package contents and transport inspection	6
4. Appliance description	6
5. Symbols on the appliance	6
6. Before first use	6
7. Filling the water tank	6
8. Care instructions	7
9. Plugging in and ironing	7
10. Steam ironing	8
11. Ironing with steam blast	8
12. Putting the steam iron down	9
13. After use	9
14. Automatic switch-off	9
15. Anti-drip system	9
16. Tips for energy-saving ironing	10
17. Cleaning	10
17.1. Cleaning the housing and soleplate	10
17.2. Self-cleaning function (self clean)	10
18. Descaling	11
18.1. Anti-limescale function	11
18.2. Using a descaling agent	11
19. Storage	12
20. Troubleshooting	12
21. Technical specifications	12
22. Disposal	12
23. Kompernass Handels GmbH warranty	13
23.1. Service	14
23.2. Importer	14

1. Introduction

1.1. Information about these operating instructions



Congratulations on the purchase of your new appliance! You have chosen a modern, high-quality product. These operating instructions are part of the product. They contain important information about safety, usage and disposal. Before using the product, please familiarise yourself with all operating and safety instructions. This product may only be used as described and for the purposes indicated. Please also pass these operating instructions on to any future owner.

1.2. Intended use

The steam iron is intended exclusively for the ironing of textiles. The iron may only be used indoors and in private households. Any other use is deemed improper. The appliance is not intended for use in commercial or industrial environments.

Claims of any kind for damage resulting from misuse, incompetent repairs, unauthorised modification or the use of unauthorised replacement parts will not be accepted. The operator bears sole liability.

1.3. Warnings and symbols used

The following warnings and symbols are used in these operating instructions, on the packaging and on the appliance (where applicable):

	<p>DANGER! A warning with this symbol and the signal word "DANGER" indicates an imminently hazardous situation that will result in death or serious injury if not avoided.</p>
	<p>WARNING! A warning with this symbol and the signal word "WARNING" indicates a potentially hazardous situation that could result in death or serious injury if not avoided.</p>

	<p>ATTENTION! A warning with this symbol and the signal word "ATTENTION" indicates a potential situation that could result in property damage if not avoided.</p>
	<p>Note: A note identifies additional information that facilitates the use of the appliance.</p>
	<p>AC current/voltage</p>
	<p>This product satisfies the requirements of the applicable European and national regulations.</p>
	<p>Do not dispose of electrical appliances in the household waste!</p>
	<p>Dispose of the packaging in an environmentally-responsible manner.</p>
	<p>The packaging is made of recyclable materials. Observe the labelling on the packaging material when sorting for disposal: The material is labelled with abbreviations (a) and numbers (b) with the following meanings: 1-7: plastics, 20-22: paper and cardboard, 80-98: composites.</p>
	<p>This mark confirms that the product complies with the product safety requirements applicable in the UK.</p>

2. Safety information

⚠ DANGER! RISK OF ELECTRIC SHOCK!

- The voltage of the power source must correspond with the details given on the type plate of the appliance.
- To avoid potential risks, arrange for a defective appliance to be checked and possibly repaired by qualified technicians, or contact our Customer Service Department.
- To prevent accidents, have defective plugs and/or power cables replaced immediately by an authorised specialist, our Customer Service or a similarly qualified person.
- When disconnecting the appliance from the power source, pull only on the plug itself, never on the cable.
- Never bend (kink) or crush the power cable, and always route it in such a way that it cannot come into contact with hot surfaces and so that no one can step on or trip over it.
- After every use, before cleaning and when refilling with tap water, always remove the plug from the mains power socket.
- Always unroll the power cable fully before switching on and do not use an extension cable.
- Never touch the power cable or the plug with wet hands.
- Never use the steam iron adjacent to water contained in a bath, shower, wash basin or other vessels. The proximity of water is hazardous, even if the appliance is switched off.
- Never immerse the steam iron in any liquid or permit liquids to penetrate into the housing of the steam iron. Do not expose the appliance to humidity and do not use it outdoors. If any liquid gets into the housing, disconnect the appliance from the mains power socket immediately and have it repaired by a qualified technician.

- Do not open the steam iron housing. Have a defective steam iron repaired only by an authorised technician.
- Do not use the steam iron if it is visibly damaged, has been dropped or is leaking water. Have it repaired by qualified specialists.
- Stop using the appliance if the anti-kink protection on the power cable is damaged.
- Always pull the plug out of the power socket before filling the water tank with water.
- This appliance may be used by children aged 8 years or older and by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge, if they are supervised or have been instructed in the safe use of the appliance and understand the potential risks. Do not allow children to use the appliance as a toy. Cleaning and user maintenance tasks may not be carried out by children unless they are supervised.

⚠ WARNING! RISK OF INJURY!



Caution, hot surfaces!


- When the steam iron is hot, hold it only by the handle.
- Children should be supervised to ensure that they do not play with the appliance.
- Never place your hands in the steam spray or on hot metal parts.
- Do not open the filler opening for the water tank while the iron is in use. Allow the steam iron to cool down first and remove the plug from the power socket.

- The iron and its connecting cable must be kept out of the reach of children under the age of 8 while the iron is switched on or cooling down.
- This steam iron should only be used and set down on stable surfaces.
- Place the steam iron only on level and heat-resistant surfaces. The steam iron must be stable.
- When you want to put the steam iron down, always stand it on its base.

⚠ WARNING! RISK OF FIRE!

- Never leave a hot steam iron unattended if it is switched on or connected to the mains power supply.
- Do not put the steam iron away until it has cooled down completely.

⚠ ATTENTION! PROPERTY DAMAGE!

- If the clothing care instructions forbid ironing, ( symbol), the clothing item may not be ironed. Ignoring this warning could lead to permanent damage to the clothing item.
- Use only the ironing temperatures stated in the care instructions as suitable for the material. Otherwise, you could damage the textiles. If you do not know the correct care instructions, start with the lowest temperature setting.
- The water tank should only be filled with tap water or distilled water. Otherwise, you will damage the steam iron.
- Do not clean the steam iron with solvents, alcohol or abrasive cleaning agents. They could damage it.

3. Package contents and transport inspection

- ◆ Remove all parts of the appliance and the operating instructions from the packaging.
- ◆ Remove all packaging material and any films and stickers.

Check the contents of the package. The package contents include the following components (see fold-out page for illustrations):




- Steam iron
- Measuring cup
- Operating instructions

i Note:





- ▶ Check the package for completeness and signs of visible damage. If the delivery is incomplete or damage has occurred as a result of defective packaging or during transport, contact the customer service hotline (see section **23.1. Service**).

4. Appliance description



(See fold-out page for illustrations)

- 1 Water jet
- 2 Filler opening for the water tank 
- 3 Steam control | **SELF CLEAN** (self-cleaning function)
- 4 Spray button 
- 5 Steam blast button 
- 6 Temperature control
- 7 Control lamp
- 8 Power cable with plug and anti-kink protection
- 9 Base
- 10 Soleplate
- 11 Measuring cup

5. Symbols on the appliance

Symbol	Meaning
	Continuous steam volume (40 g/min)
	Ceramic-coated soleplate
	Self clean
	Automatic switch-off

6. Before first use

- 1) Fill the water tank with water (See the section **7. Filling the water tank**).
- 2) Insert the plug into a mains power socket supplying an electrical current corresponding to that given on the rating plate.
- 3) Set the steam control | **SELF CLEAN** **3** to the highest level  (maximum steam).
- 4) Turn the temperature control **6** to the highest level **MAX**. The control lamp **7** lights up during heating. As soon as the selected temperature has been reached, the control lamp **7** goes out.
- 5) Press the steam blast button  **5** a couple of times so that steam comes out of the soleplate **10**.
- 6) Iron over a piece of scrap material, to remove any production residues that may remain on the soleplate **10**.

7. Filling the water tank

⚠ RISK OF ELECTROCUTION!

- ▶ Always disconnect the plug from the mains socket before filling the water tank. There is a risk of electric shock!

⚠ WARNING! RISK OF INJURY!

- ▶ Allow the appliance to cool down before filling the water tank. Otherwise, there is risk of burns!

! ATTENTION! PROPERTY DAMAGE!

- ▶ Fill the water tank only with tap water or distilled water. Otherwise, you will damage the steam iron.
- 1) Make sure that the temperature control **6** is set to the position **MIN**.
- 2) Hold the iron in your hand at an angle and open the lid of the filler opening for the water tank ↙ **2**.
- 3) Use the measuring cup **11** to fill the water tank ↙ **2** up to no more than the **MAX** marking (see fig. 1).

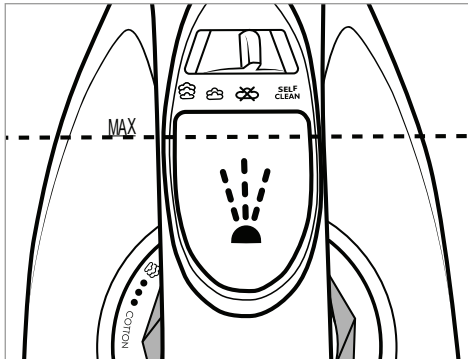


Fig. 1

- 4) Close the cover of the filler opening for the water tank ↘ **2**.

i Note:

- ▶ If the mains water in your location is rated as hard, we recommend that you mix the mains water with some distilled water. Otherwise, the jets for the steam blast function could become blocked with limescale prematurely. To extend the optimal steam blast function, mix mains water with distilled water according to the table.
- ▶ Ask your local water utility about the water hardness in your area.

Water hardness	Ratio of distilled water to tap water
very soft/soft	0
medium	1 : 1
hard	2 : 1
very hard	3 : 1

8. Care instructions

! ATTENTION! PROPERTY DAMAGE!

- ▶ If the clothing care instructions forbid ironing (~~☒~~), the garment may not be ironed. Ignoring this warning could lead to permanent damage to the clothing item.
- ▶ If you do not find any care instructions on the garment, first start ironing a usually invisible, inconspicuous part of the garment.
- ▶ Check the care instructions on the labels in the garment to see if the garment is suitable for steam ironing/ironing with steam blast (see table):

Symbol	Material	Steam ironing	Ironing with steam blast
		No	No
	Synthetics	No	No
	Silk, wool	Yes (medium steam)	Yes
	Cotton, linen	Yes (maximum steam)	Yes

9. Plugging in and ironing

! ATTENTION! PROPERTY DAMAGE!

- ▶ If the clothing care instructions forbid ironing (~~☒~~), the garment may not be ironed. Ignoring this warning could lead to permanent damage to the clothing item.
- ▶ Iron silk textiles inside out directly after washing (while still damp). Do not use the highest temperature setting. When ironing particularly high-quality silk textiles, place a pale-coloured cotton cloth or parchment paper under and on top of the textiles before ironing.

i Note:

- ▶ Dry ironing without steam is possible at all temperatures. Steam ironing is only possible from the setting ●● on the temperature control **6**.

- 1) Insert the plug into a mains power socket.
- 2) Check the care instructions on the labels in garments to see if they are suitable for being ironed, and at which temperature setting.
- 3) Select the appropriate temperature setting using the temperature control **6** (see table below and fig. 2).

Temperature control symbol 6	Temperature	Material type
●	70–120°C	Synthetics
● ●	100–160°C	Silk, wool
● ● ●	140–210°C	Cotton, linen

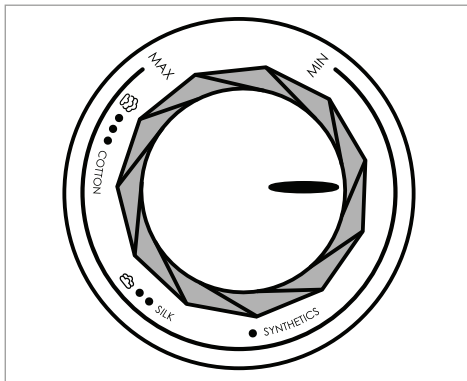


Fig. 2

- Note:**
- ▶ While it is heating up, always place the steam iron on its base **9**. If you place the steam iron down on its soleplate **10** and do not move it, the automatic switch-off will be activated after 30 seconds (see section **14. Automatic switch-off**) and the appliance stops heating up.
 - ◆ The control lamp **7** lights up during heating. As soon as the selected temperature has been reached, the control lamp **7** goes out.

- ◆ To moisten textiles, e.g. items made of linen, press the spray button **4**. This function is suitable for very dry and very crumpled garments, however, not for items made of silk.
- ◆ When using the steam iron in the setting range ● of the temperature control **6**, you should evenly moisten the garment with the spray button **4** or a spray bottle before ironing.

10. Steam ironing

⚠ ATTENTION! PROPERTY DAMAGE!

- ▶ If the care instructions in the garment prohibit steam ironing (see table in section **8. Care instructions**), do not steam iron the garment. Ignoring this warning could lead to permanent damage to the clothing item.

ⓘ Note:

- ▶ The temperature control **6** must be set to at least the ● ● setting. Otherwise, no steam will be produced.

- 1) Set the steam control | **SELF CLEAN 3** to the desired steam setting:

		
No steam	Medium steam	Maximum steam


- 2) Allow the steam iron to heat up until the control lamp **7** goes out.
- 3) Steam comes out of the soleplate **10** as soon as you hold the steam iron horizontally. Start ironing.


11. Ironing with steam blast

⚠ ATTENTION! PROPERTY DAMAGE!

- ▶ Do not use the steam blast on silk textiles.

ⓘ Note:

- ▶ The temperature control **6** must be set to at least the ● ● setting. Otherwise, no steam will be produced. To generate the maximum quantity of steam, the steam control | **SELF CLEAN 3** must be set to the highest level .
- ▶ The steam blast function is ideal for smoothing difficult-to-reach parts of a garment.

- 1) Allow the steam iron to heat up until the control lamp **7** goes out.
- 2) Lift the steam iron slightly and hold it a few centimetres above the garment.
- 3) Briefly press the steam blast button  **5** repeatedly at intervals of around 5 seconds.
- 4) Touch the garment lightly with the soleplate **10** and steam it to remove wrinkles.

i Note: Vertical ironing with steam blast

- ▶ Proceed exactly as previously described in this section, with the difference that you hang the garment you want to iron on a hanger from a heat-resistant surface. Also hold the steam iron in a vertical position a few centimetres in front of the garment.

12. Putting the steam iron down

⚠ WARNING! RISK OF FIRE!

- ▶ Never leave a hot steam iron unattended if it is switched on or connected to the mains power supply.
- 1) Set the temperature control **6** to the **MIN** setting.
 - 2) Stand the steam iron only on its base **9**.

13. After use

- 1) Set the temperature control **6** to the **MIN** setting.
- 2) Remove the plug from the mains power socket.
- 3) Stand the steam iron on its base **9** and allow it to cool down completely.
- 4) Empty the water tank via the filling opening **2** and clean the soleplate **10** (see section **17.1. Cleaning the housing and soleplate**).
- 5) Place the steam iron back on its base **9**.

14. Automatic switch-off

This steam iron is fitted with an automatic switch-off system. This stops the steam iron from heating up if it is not moved within a certain amount of time:

- If the iron is resting on its soleplate **10** and is not moved for about 30 seconds, the control lamp **7** starts flashing. The steam iron will automatically stop heating up. To deactivate the automatic switch-off, lift up the steam iron and move it gently from side to side. The steam iron will heat up again.
- If the steam iron is standing on its base **9** and is not moved for about 8 minutes, the control lamp **7** starts flashing. The steam iron will automatically stop heating up. To deactivate the automatic switch-off, lift up the steam iron and move it gently from side to side. The steam iron will heat up again.


i Note:

- ▶ The automatic switch-off is not intended as a substitute for removing the plug from the mains power! It is merely intended to reduce the fire hazard if you forget to switch off the steam iron.

15. Anti-drip system

The steam iron has an anti-drip system that automatically switches off the steam blast at low temperatures. If this happens, you will hear a click. You must then set a suitable temperature with the temperature control **6**. As soon as this temperature is reached, steam production is resumed.

i Note:

- ▶ Wait until the set temperature has been reached and the control lamp **7** goes out before pressing the steam blast button  **5** again. Otherwise, water may drip from the soleplate **10**.

16. Tips for energy-saving ironing

- Iron once a week rather than every day. This reduces the amount of energy required, as you only need to heat up the iron once.
- Pre-sort the washing: first iron the washing that requires a low temperature. You will find the temperature recommendation for ironing on the care label of the laundry items.
- Steam is not always necessary. Many items of laundry can be ironed flat even without a steam blast.
- Clean and descale the iron regularly so that the nozzles do not become clogged. If the nozzles become clogged, ironing takes a great deal more time and energy.

17. Cleaning

RISK OF ELECTROCUTION!


- ▶ Before cleaning, always disconnect the mains plug from the mains socket (except when using the self-cleaning function). There is a risk of electric shock!

WARNING! RISK OF INJURY!

- ▶ Allow the appliance to cool down before cleaning it. Otherwise, there is risk of burns!


 








 
 


 


 
 

 






17.1. Cleaning the housing and soleplate

ATTENTION! PROPERTY DAMAGE!

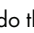- ▶ Do not use abrasive, aggressive or chemical cleaning agents. They can damage the surface and also lead to irreparable damage to the appliance.
- ◆ Clean the housing with a soft, dry cloth only.
- ◆ Clean the soleplate  using a damp cloth and a mild, non-scouring detergent.

17.2. Self-cleaning function (self clean)

Note:

- ▶ Use the self-clean function to remove limescale and dirt from the water tank and from the soleplate .
- ▶ We recommend self-cleaning every 10–15 days.
 - 1) Fill the water tank to the **MAX** marking.
 - 2) Plug the power plug into the mains socket.
 - 3) Set the temperature control  to the **MAX** setting.
 - 4) Set the steam control | **SELF CLEAN**  to the highest level .
 - 5) Allow the steam iron to heat up until the control lamp  goes out.
 - 6) Pull the mains plug out of the mains socket as soon as the steam iron has heated up.
 - 7) Hold the steam iron horizontally over a sink or suitable container.
 - 8) Set the steam control | **SELF CLEAN**  to the **SELF CLEAN** position and hold this position. Move the steam iron back and forth a little. Swivel and tilt it slightly so that the contents of the water tank emerge from the steam outlets in the soleplate .
 - 9) Any impurities that may be present are flushed out.
 - 10) Release the steam control | **SELF CLEAN**  as soon as no more steam or boiling water comes out. Pour out any water left in the water tank through the filler opening for the water tank                 
 - 11) Dry the soleplate  thoroughly. To do this, move the soleplate  back and forth several times over a towel or an old piece of material.
 - 12) Remove the power plug from the mains power socket and allow the steam iron to cool down before placing it in storage.

18. Descaling

18.1. Anti-limescale function

i Note:

- ▶ The steam iron has an integrated anti-limescale function to reduce the formation of limescale when steam is released, thus extending the life of the appliance. However, the anti-limescale function cannot completely prevent the natural process of limescale formation and deposition. Therefore, use the self-cleaning function regularly (see section **17.2. Self-cleaning function (self clean)**).

18.2. Using a descaling agent




! ATTENTION! PROPERTY DAMAGE!

- ▶ Do not use the descaling agent until the steam iron has cooled down completely. Otherwise, heating increases the aggressiveness of the acid of the descaling agent. This may cause damage to parts of the appliance.

i Note:

- ▶ The steam iron is designed for use with tap water or distilled water (see section **7. Filling the water tank**). However, it is necessary to descale the steam chamber regularly with a descaling agent to remove limescale residues and thus maintain the maximum performance of the steam iron.
- ▶ The frequency of descaling depends on the hardness of the water and how often the appliance is used. We recommend descaling at least once every two months or as soon as you notice that the appliance is generating less steam.
- ▶ We recommend using the descaling agent **DURGOL Universal Fast Decalcifier** to descale the steam iron.

To descale the steam iron, proceed as follows:

- 1) Pull the plug out of the mains socket. Make sure that the steam iron has completely cooled down.
- 2) Empty the water tank of the steam iron completely into a sink via the filler opening for the water tank  **2**.
- 3) Mix 160 ml of tap water with 160 ml of **DURGOL Universal Fast Decalcifier** (ratio 1:1) and pour half of the mixture into the water tank using the measuring cup **1**. Pour the other half of the descaling mixture into a shallow, sufficiently large container (e.g. a shallow bowl) for subsequent descaling of the iron soleplate **10**.
- 4) Leave the descaling mixture to soak in for approx. 5 minutes.
- 5) Point the water jet **1** at a towel and press the button for the spray function  **4** about 20 times.
- 6) Hold the steam iron horizontally over a sink or suitable container.
- 7) Set the steam control | **SELF CLEAN 3** to the **SELF CLEAN** position and hold this position. Move the steam iron back and forth a little. Swivel and tilt it slightly so that the contents of the water tank emerge from the steam outlets in the soleplate **10**.
- 8) Release the steam control | **SELF CLEAN 3** as soon as noticeably less liquid flows out of the steam outlets in the soleplate **10**. Empty the remaining contents of the water tank completely into a sink via the filler opening for the water tank  **2**.

i Note:

- ▶ After descaling the steam iron, always carry out two rinsing operations by setting the steam control | **SELF CLEAN 3** to the **SELF CLEAN** position and hold this position. Do not use a descaling agent without subsequently thoroughly rinsing the water tank with tap water or distilled water.

- 9) Use the measuring cup **11** to fill tap water or distilled water up to the **MAX** mark in the water tank (see section **7. Filling the water tank**). Repeat steps 5 to 8 two times.
- 10) To decalcify the soleplate **10**, place the steam iron in a shallow, sufficiently large container (e.g. a shallow bowl). into which you previously put the remaining descaling mixture (see step 3).
- 11) Leave the descaling mixture to soak in for approx. 5 minutes.
- 12) Remove the steam iron from the container and empty the descaling mixture into a sink.
- 13) Put fresh water in the container and dip the soleplate **10** in a few times to rinse it off.
- 14) Remove the steam iron from the container and dry the soleplate **10** with a soft cloth.

19. Storage

- i Note:**
- ▶ Clean the appliance as described in the section **17.1. Cleaning the housing and soleplate** before storing it.
 - ◆ Store the cooled-down appliance in a clean, dust-free and dry location.

20. Troubleshooting

Problem	Cause	Solution
The steam iron blasts out no steam/very little steam.	The steam iron's water tank is empty.	Fill the water tank with tap water (See section 7. Filling the water tank).
	Limescale deposits reduce the steam output.	Descal the steam iron (see section 18.2. Using a descaling agent).
The steam iron does not get hot.	The steam iron is not plugged in or is not switched on.	Insert the plug into a wall power socket and adjust the temperature control 6 to the desired ironing temperature.
The steam iron cannot be switched on.	The steam iron is defective.	Have the steam iron repaired by a qualified technician (see section 23.1. Service).

21. Technical specifications

Supply voltage	220–240 V ~, 50–60 Hz
Power consumption	2380–2830 W
Power consumption in off mode	≤0,5 W

22. Disposal



The symbol of the crossed-out wheeled bin means that this appliance may not be disposed of in regular household waste at the end of its service life. The appliance must be deposited at an established collection point, recycling centre or disposal company. Please erase all personal data before returning an appliance.

The packaging is made from environmentally friendly material which can be disposed of at your local recycling plant.

Dispose of the packaging in an environmentally friendly manner.

23. Komperness Handels GmbH warranty

Dear Customer,

This appliance has a 3-year warranty valid from the date of purchase. If this product has any faults, you, the buyer, have certain statutory rights. Your statutory rights are not restricted in any way by the warranty described below.

Warranty conditions

The warranty period starts on the date of purchase. Please keep your receipt in a safe place. This will be required as proof of purchase.

If any material or manufacturing fault occurs within three years of the date of purchase of the product, we will either repair or replace the product for you or refund the purchase price (at our discretion).

This warranty service requires that you present the defective appliance and the proof of purchase (receipt) within the three-year warranty period, along with a brief written description of the fault and of when it occurred.

If the defect is covered by the warranty, your product will either be repaired or replaced by us. The repair or replacement of a product does not signify the beginning of a new warranty period.

Warranty period and statutory claims for defects

The warranty period is not prolonged by repairs effected under the warranty. This also applies to replaced and repaired components. Any damage and defects present at the time of purchase must be reported immediately after unpacking. Repairs carried out after expiry of the warranty period shall be subject to a fee.

Scope of the warranty

This appliance has been manufactured in accordance with strict quality guidelines and inspected meticulously prior to delivery.

The warranty covers material faults or production faults. The warranty does not extend to product parts subject to normal wear and tear or to fragile parts which could be considered as consumable parts such as switches or parts made of glass.

The warranty does not apply if the product has been damaged, improperly used or improperly maintained. The directions in the operating instructions for the product regarding proper use of the product are to be strictly followed. Uses and actions that are discouraged in the operating instructions or which are warned against must be avoided.

This product is intended solely for private use and not for commercial purposes. The warranty shall be deemed void in cases of misuse or improper handling, use of force and modifications / repairs which have not been carried out by one of our authorised Service centres.

Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions:

- Please have the till receipt and the item number (IAN) 506820_2507 available as proof of purchase.
- You will find the item number on the type plate on the product, an engraving on the product, on the front page of the operating instructions (below left) or on the sticker on the rear or bottom of the product.
- If functional or other defects occur, please contact the service department listed either by **telephone** or by **e-mail**.
- You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.



You can download these instructions along with many other manuals, product videos and installation software at www.lidl-service.com.

This QR code will take you directly to the Lidl service page (www.lidl-service.com) where you can open your operating instructions by entering the item number (IAN) 506820_2507.

23.1. Service

GB Service Great Britain

Tel.: 0800 404 7657

E-Mail: kompernass@lidl.co.uk

IE Service Ireland

Tel.: 1800 101010

E-Mail: kompernass@lidl.ie

MT Service Malta

Tel.: 80062230

E-Mail: kompernass@lidl.com.mt

IAN 506820_2507

23.2. Importer

Please note that the following address is not the service address. Please use the service address provided in the operating instructions.

For EU market

KOMPERNASS HANDELS GMBH

BURGSTRASSE 21

44867 BOCHUM

GERMANY

www.kompernass.com

For GB market

Lidl Great Britain Ltd

Lidl House 14 Kingston Road

Surbiton

KT5 9NU

KOMPERNASS HANDELS GMBH

BURGSTRASSE 21

44867 BOCHUM

GERMANY

www.kompennass.com

Last Information Update:

09/2025 · Ident.-No.: SDBB2800A1-082025-1

IAN 506820_2507