
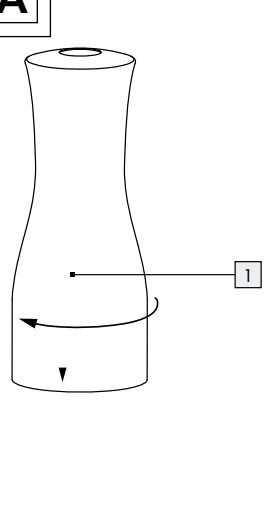 
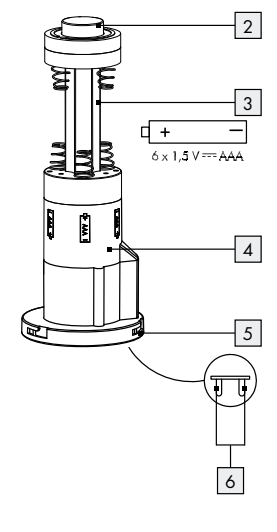 
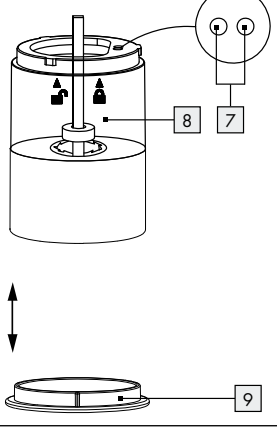 
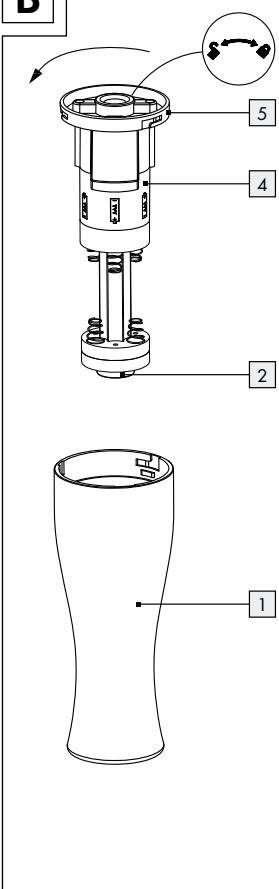 
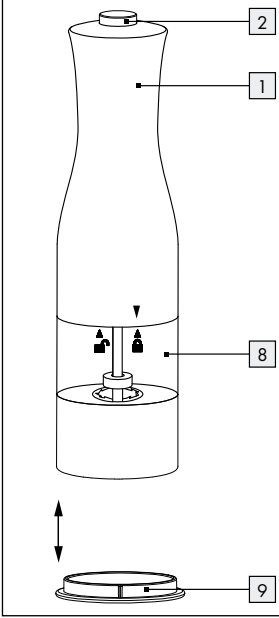 
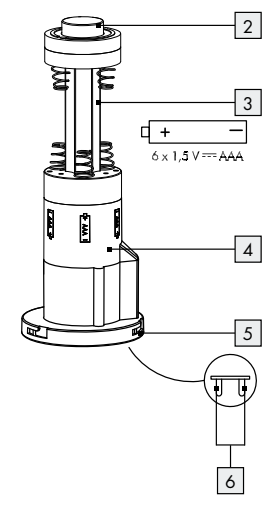 
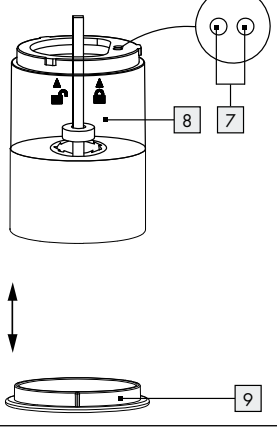 
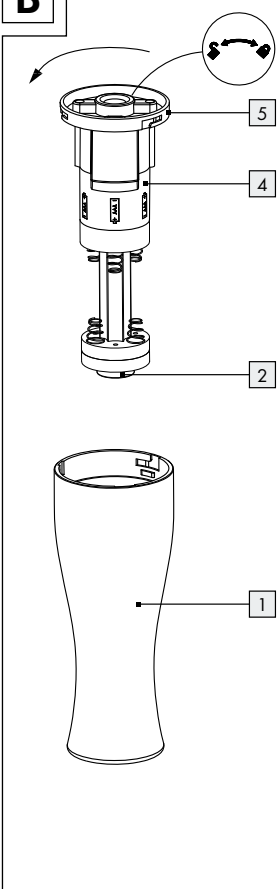 
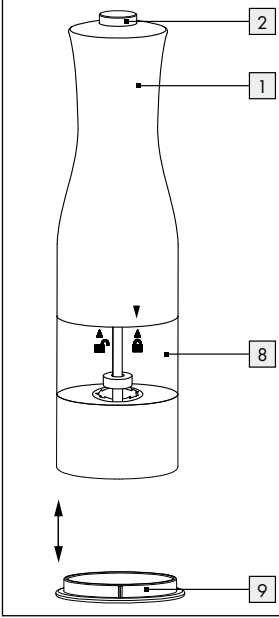 
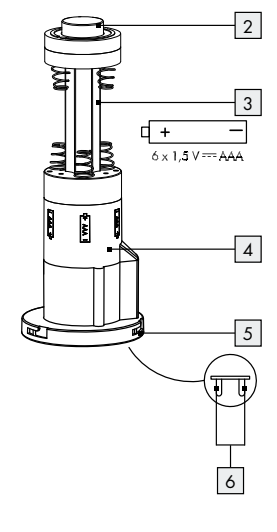 
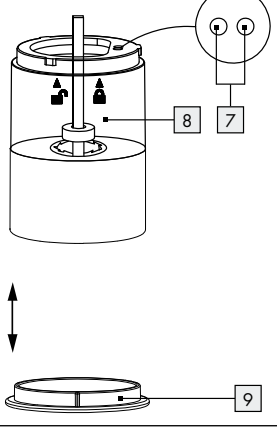 
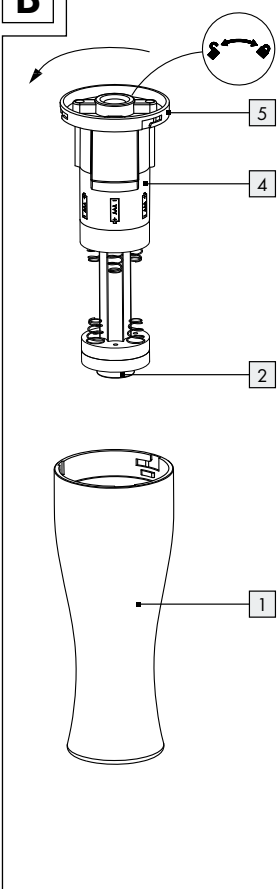 
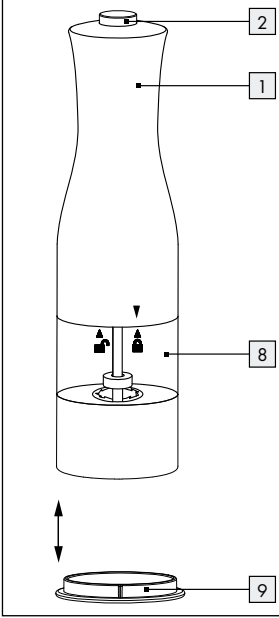 
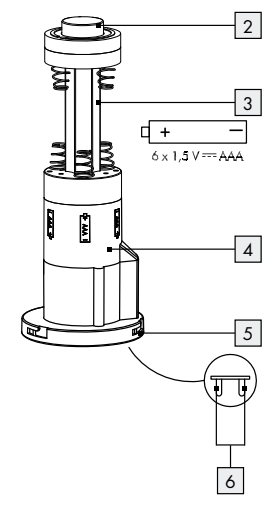 
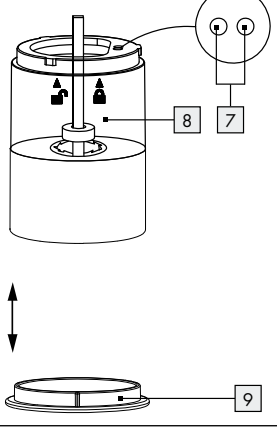 
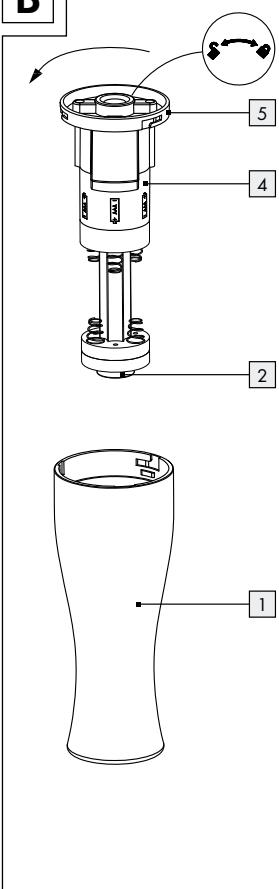 
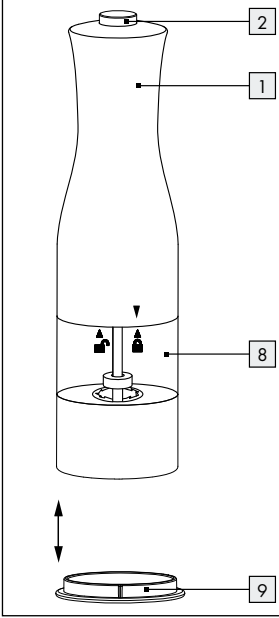 
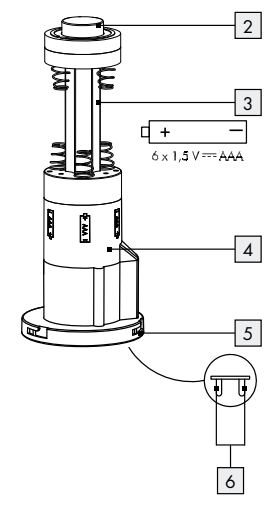 
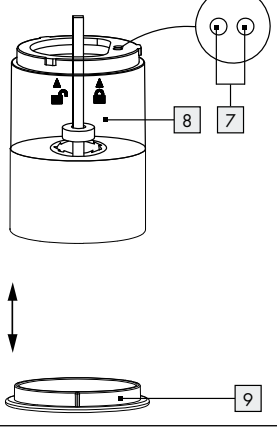 
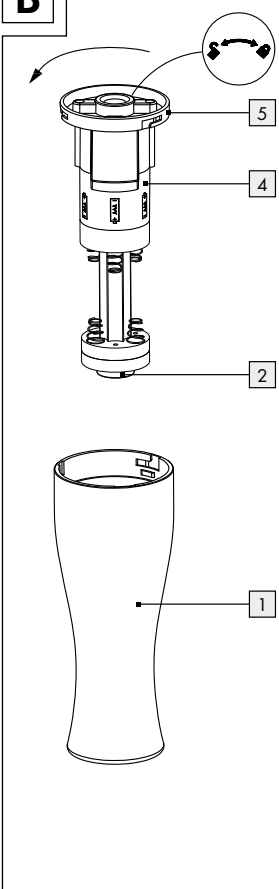 
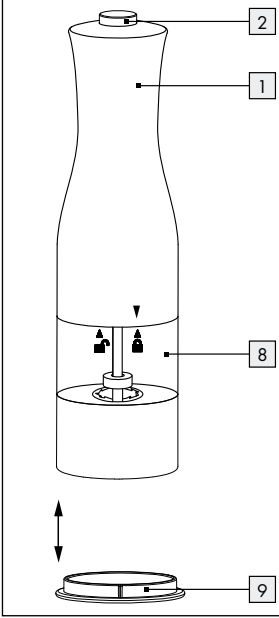 
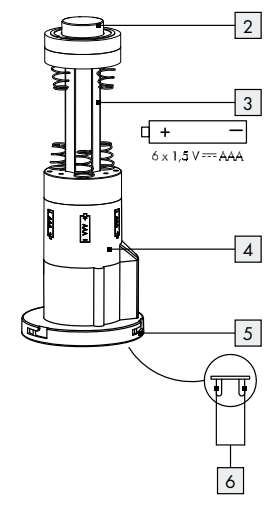 
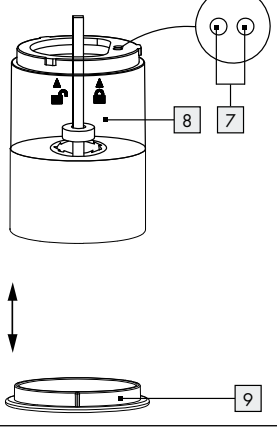 
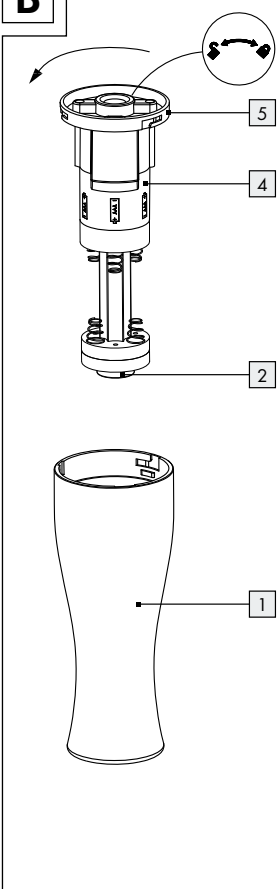 
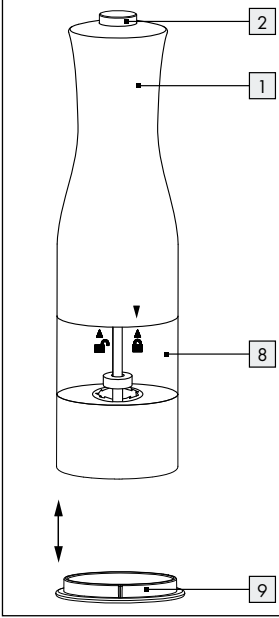 
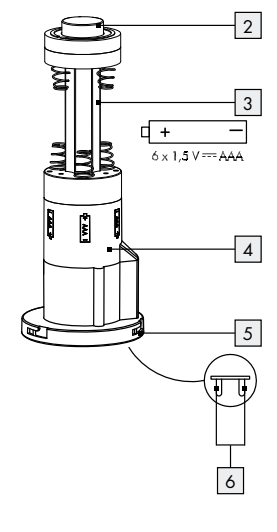 
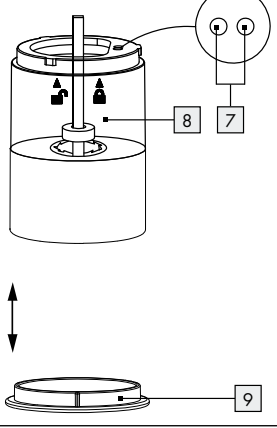 
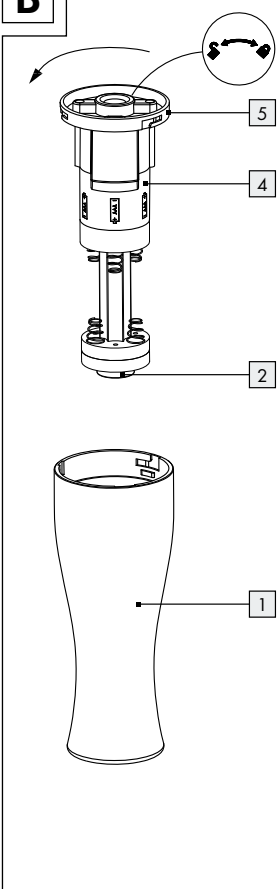 
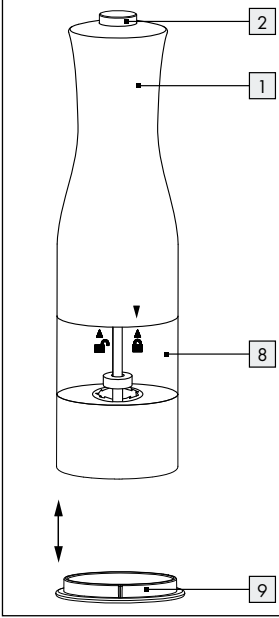 


	A		B		C
					
ELECTRIC SALT OR PEPPER MILL Operation and safety notes					
MÖLLEN À SEL/POIVRE ÉLECTRIQUE Instructions d'utilisation et consignes de sécurité					
ELEKTRISK SALT-ELLER PEBERKVÆRN Brugs- og sikkerhedsanvisninger					
ÉLÉKTRISKE PEPEP- EN ZOUTMOLEN Bedienings- en veiligheidsinstructies					
ELEKTRISCHE SALZ- ODER PFEFFERMÜHLE Bedienungs- und Sicherheitshinweise					
IAN 351936_2007					

- Hold the base with container **8** firmly and turn the top **1** counter-clockwise (see fig. B) until the arrow on the top **1** aligns with the symbol **■** on the base with container **8**.

● Using of the product

- Pull off the aroma seal cover **2** from the bottom of the base with container **8** before use (see fig. B).
- Please keep the switch **2** pushed to activate the product. The bulb **11** on the base of the product will then be simultaneously activated.

● Adjusting the grinding level

- Turn the adjustable screw **10** clockwise to receive a finer grinding level (see fig. C).
- Turn the adjustable screw **10** anticlockwise to receive a coarser grinding level (see fig. C).

Note: Choose a coarser setting if the grinding mechanism stops rotating when you are using a very fine setting. If the grinding mechanism still refuses to rotate, then it may be choked or blocked. Unscrew the adjustable screw **10** and loosen the grinding mechanism. Release the stuck pieces by shaking the grinding mechanism, then tighten the adjustable screw **10** again.

● Cleaning and maintenance

- Under no circumstances should you use liquids or detergents, as these will damage the product.
- The product should only be cleaned on the outside with a soft dry cloth.

● Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.

- Observe the marking of the packaging materials for waste separation, which are marked with abbreviations (a) and numbers (b) with following meaning: 1–7: plastics / 20–22: paper and fibreboard / 80–98: composite materials.

- The product and packaging materials are recyclable, dispose of it separately for better waste treatment. The Triman logo is valid in France only.

- Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.

- To help protect the environment, please dispose of the product properly when it has reached the end of its useful life and not in the household waste. Information on collection points and their opening hours can be obtained from your local authority.

Faulty or used batteries / rechargeable batteries must be recycled in accordance with Directive 2006/66/EC and its amendments. Please return the

	B		C
