



CORDLESS CYCLONE VACUUM CLEANER SHAZ 22.2 G8

 
GB IE NI

CORDLESS CYCLONE VACUUM CLEANER

Operating instructions







IAN 500198_2504

GB IE NI






GB IE NI

  Before reading, unfold the page containing the illustrations and familiarise yourself with all functions of the device.

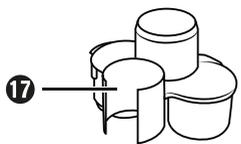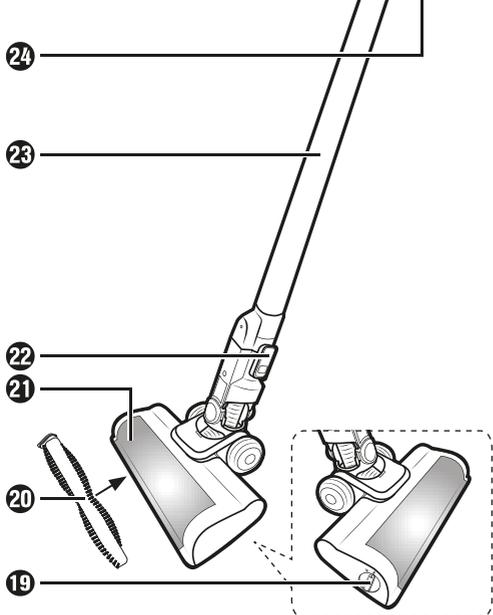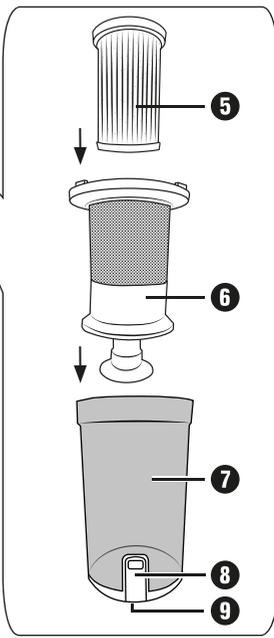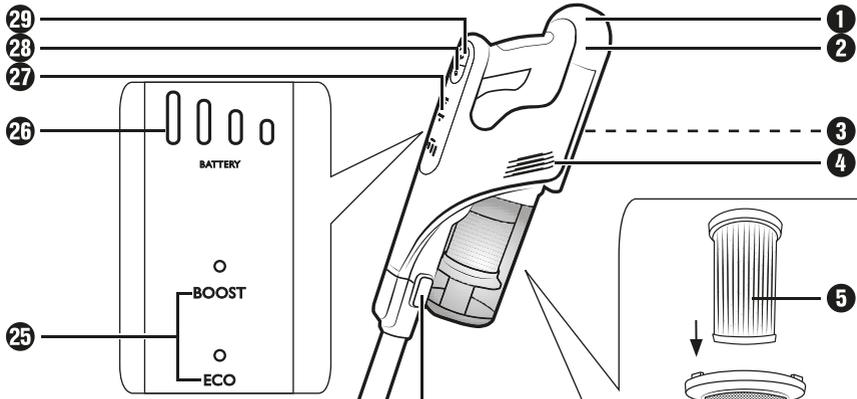

4x

  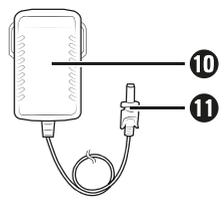

Contents

1. Introduction	2
2. Intended use	2
3. Warnings and symbols used	2
4. Important safety instructions	3
5. Package contents and transport inspection	6
6. Appliance description	6
7. Technical data	7
8. Before first use	8
8.1. Setting up the appliance	8
8.2. Mounting the wall bracket and accessories holder	8
9. Getting started	9
9.1. Information about the battery	9
9.2. Charging the battery	9
10. Operation and use	10
10.1. Switching the appliance on	10
10.2. Selecting an operating mode	11
10.3. Dismantling the appliance	11
10.4. Using the accessories	11
10.5. After use	12
11. Cleaning	13
11.1. Emptying the dust container and cleaning the filter	13
11.2. Cleaning the rotary brush	15
11.3. Cleaning the appliance	16
12. Storage	16
13. Disposal	16
13.1. Disposal of the appliance and packaging	16
13.2. Disposal of batteries	16
14. Ordering replacement parts	17
15. Kompnass Handels GmbH warranty	17
15.1. Service	18
15.2. Importer	18

1. Introduction

Congratulations on the purchase of your new appliance. You have selected a high-quality product.



The operating instructions are part of this product. They contain important information about safety, usage and disposal. Before using the product, please familiarise yourself with all operating and safety instructions. Use the product only as described and for the specified range of applications. Please also pass on all documents to any future owner.

2. Intended use

This appliance may only be used for vacuuming dry surfaces or dry vacuumed material. Do not vacuum people or animals with this appliance. Any other usage or modification of the appliance is deemed to be improper and carries a significant risk of accidents. The manufacturer accepts no liability for damages caused by improper use or incorrect operation of the appliance. The appliance is not intended for commercial use.

3. Warnings and symbols used

The following warnings and symbols are used in these operating instructions, on the packaging and on the appliance (where applicable):

	<p>DANGER! A warning with this symbol and the signal word "DANGER" indicates an imminently hazardous situation that will result in death or serious injury if not avoided.</p>
	<p>WARNING! A warning with this symbol and the signal word "WARNING" indicates a potentially hazardous situation that could result in death or serious injury if not avoided.</p>

	<p>CAUTION! A warning with this symbol and the signal word "CAUTION" indicates a potentially hazardous situation that could result in a minor or moderate injury if not avoided.</p>
	<p>ATTENTION! A warning with this symbol and the signal word "ATTENTION" indicates a potential situation that could result in property damage if not avoided.</p>
	<p>Note: A note identifies additional information that facilitates the use of the appliance.</p>
	<p>DC current/voltage</p>
	<p>AC current/voltage</p>
	<p>Read the instructions.</p>
	<p>This product satisfies the requirements of the applicable European and national regulations.</p>
	<p>Do not dispose of electrical appliances/rechargeable batteries in the household waste!</p>
	<p>Dispose of the packaging in an environmentally-responsible manner.</p>
	<p>The packaging is made of recyclable materials. Observe the labelling on the packaging material when sorting for disposal: The material is labelled with abbreviations (a) and numbers (b) with the following meanings: 1-7: plastics, 20-22: paper and cardboard, 80-98: composites.</p>
	<p>This mark confirms that the product complies with the product safety requirements applicable in the UK.</p>

4. Important safety instructions

DANGER! ELECTRIC SHOCK!

- Check the appliance for visible external damage before use.
Do not operate an appliance that has been damaged or dropped.
- Do not use the mains adapter if it has a damaged plug or cable.
- The mains adapter and the permanently affixed connection cable may not be repaired. In the event of a defect, the entire mains adapter must be replaced with another of identical design.
- To prevent accidents, have defective plugs and/or power cables replaced immediately by an authorised specialist, our Customer Service or a similarly qualified person.
- Have all repairs carried out by a specialist workshop. Under no circumstances should you open the appliance yourself. Repairs that are not carried out by a specialist workshop could lead to physical injuries.
- Before switching on the appliance, make sure that the mains voltage corresponds to the voltage indicated in the technical data for the appliance.
- Never touch the mains adapter or the appliance with wet or damp hands.
- Do not use the mains adapter with an extension cable; connect the mains adapter directly to a power socket.



Do not charge or use the appliance outdoors.

WARNING! RISK OF INJURY!

- Do not change any accessories while the appliance is switched on.
- Do not use the vacuum cleaner for vacuuming up water or other liquids.
- Do not use the vacuum cleaner for vacuuming up sharp objects or glass shards.

- Do not use the vacuum cleaner for vacuuming up burning matches, glowing embers or cigarette butts.
- Do not use the vacuum cleaner for vacuuming up chemical products, stone dust, gypsum, cement or similar particles.
- This appliance is not suitable for use with inflammable and explosive substances or chemical and aggressive liquids.
- Always store the appliance indoors. To prevent accidents, keep the appliance in a dry location when not in use.
- Under extreme conditions, leaks in the battery cells may occur. In the event that battery fluid comes into contact with skin or eyes, the affected area must be rinsed off with water immediately. Contact a physician.
- This appliance may be used by children aged 8 years and above and by persons with limited physical, sensory or mental capabilities or lack of experience and knowledge, provided that they are under supervision or have been told how to use the appliance safely and are aware of the potential risks.
- Do not allow children to play with the appliance. Cleaning and user maintenance tasks may not be carried out by children unless they are supervised.
- Take special care when using the vacuum cleaner on stairs.

! **ATTENTION! PROPERTY DAMAGE!**

- Use only accessories recommended by the manufacturer.
- The mains adapter may not be used for other purposes. Never carry the wall bracket or the mains adapter by the cable. Do not pull on the cable when you want to move the appliance.
- Always grip the power plug to disconnect the appliance from the power supply.
- Always be sure to keep the vacuum cleaner away from heating elements, ovens or other heated appliances and surfaces.
- Make sure that the ventilation slits are never obstructed. A blocked ventilation circuit can result in overheating and damage to the appliance.



- The product is equipped or supplied with a lithium-ion battery. Do not throw the rechargeable battery into a fire and do not subject it to high temperatures. There is a risk of an explosion!
- Do not use the vacuum cleaner without the EPA filter inserted.
- Do not use the mains adapter for a different product and do not attempt to charge this appliance with a different mains adapter. Use only the mains adapter supplied with this appliance (model SHAZ 22.2 G8-2).
- Never store the device when it is discharged. Prolonged storage in a discharged state can cause permanent damage to the battery. If the device is stored for a longer period of time, the charge level of the battery must be checked regularly. The optimum charge level is between 50 % and 80 %.

5. Package contents and transport inspection

- 1) Remove all parts of the appliance and the operating instructions from the packaging.
- 2) Remove all packaging materials and any films and labels.

The package contents include the following components (see fold-out page for illustrations):

- Cordless Cyclone Vacuum Cleaner
- Suction pipe
- Floor brush
- Crevice nozzle
- Round brush nozzle (with brush attachment)
- 2-in-1 combination brush
- Wall bracket
- Accessories holder
- Installation materials (4 screws, 4 wall plugs)
- Mains adapter
- Replaceable battery
- Operating instructions

Note

- ▶ Check the package for completeness and signs of visible damage.
- ▶ If any items are missing or damaged as a result of defective packaging or transportation, please contact the Service Hotline (see section **15.1. Service**).

6. Appliance description

(See fold-out page for illustrations)

- 1 Battery release button
- 2 Replaceable battery
- 3 Charging socket
- 4 Ventilation slits
- 5 EPA filter
- 6 Stainless steel filter
- 7 Dust container
- 8 Dust container release button
- 9 Dust container lid
- 10 Mains adapter
- 11 Barrel plug
- 12 2-in-1 combination brush
- 13 Crevice nozzle
- 14 Round brush nozzle (with brush attachment)
- 15 Screws
- 16 Wall plug
- 17 Accessories holder
- 18 Wall bracket
- 19 Rotary brush release
- 20 Rotary brush
- 21 Floor brush
- 22 Floor brush release button
- 23 Suction pipe
- 24 Suction pipe release button
- 25 Operating mode
- 26 Battery indicator
- 27 Display panel
(battery indicator/operating mode)
- 28 On/Off switch 
- 29 Operating mode button **+/-** (Eco/Boost)

7. Technical data

Appliance	
Input voltage	27 V $\overline{\text{---}}$
Input current	0.5 A
Rated power	130 W (floor brush 15 W)
Polarity	

Batteries	
Model	SHAZ 22.2 G8-B
Capacity	2500 mAh/55.5 Wh
Battery	22.2 V $\overline{\text{---}}$ (6 x 3.7 V lithium-ion batteries)
Running time with full battery charge	Eco: approx. 45 minutes Boost: approx. 25 minutes

Mains adapter	
Manufacturer	KOMPERNASS HANDELS GMBH, BURGSTRASSE 21, 44867 BOCHUM, GERMANY Registered court: AG Bochum, Register number: HRB 4598
Model	SHAZ 22.2 G8-2
Input voltage	100-240 V \sim
Input AC frequency	50/60 Hz
Output voltage	27.0 V $\overline{\text{---}}$
Output current	0.5 A
Output power	13.5 W
Average efficiency in operation	84.1 %
Efficiency at low load (10 %)	68.1 %
Power consumption at no load	0.1 W
Power consumption during operation	20 W
Polarity	
Protection class	II/  (double insulation)
Efficiency class	6 
Fuse	

Note

- ▶ No user action is required to switch the product between 50 and 60 Hz. The product switches automatically to either 50 or 60 Hz.

8. Before first use

8.1. Setting up the appliance

- 1) Push the suction pipe 23 onto the appliance until it audibly clicks into place (see Fig. 1).

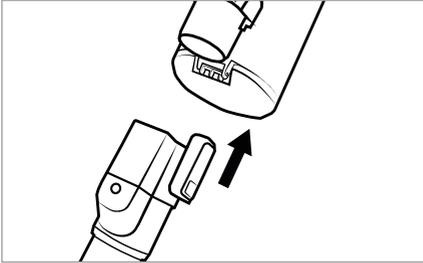


Fig. 1

- 2) Push the suction pipe 23 into the floor brush 21 until it audibly clicks into place (see Fig. 2).

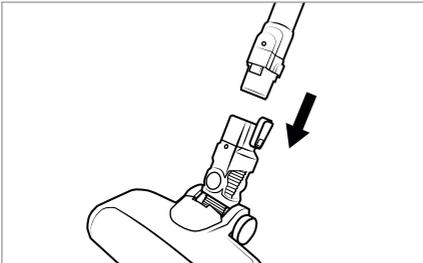


Fig. 2

- 3) Push the battery 2 into the appliance until it audibly clicks into place (see Fig. 3).

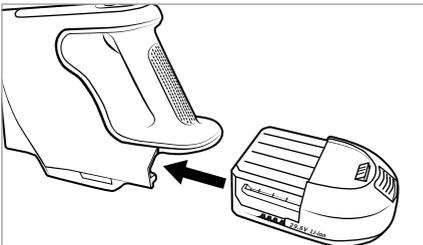


Fig. 3

8.2. Mounting the wall bracket and accessories holder

⚠ DANGER!

- ▶ Ensure that there are no power cables or other conduits or pipes in the wall at the location where you intend to bore the holes for the wall bracket 18. Drilling into a current-carrying electric cable can be potentially fatal!

- 1) Insert the barrel plug 11 of the mains adapter 10 into the wall bracket 18 (see Fig. 4). Secure the barrel plug 11 by turning it.

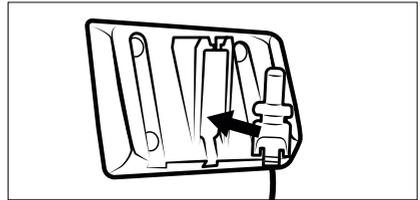


Fig. 4

- 2) Find a suitable mounting location for the wall bracket 18:

- The wall bracket 18 must be mounted with sufficient distance to the floor to ensure easy insertion and removal of the appliance from the wall bracket 18.
- A mains socket must be accessible for the mains adapter 10.

- 3) Use the wall bracket 18 to mark the four drill holes on the wall (see Fig. 5).

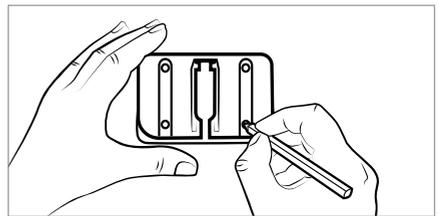


Fig. 5

- 4) Drill the marked holes with a 5-mm drill.
- 5) Push the supplied wall plugs **16** into the holes.
- 6) Screw the wall bracket **18** in place using the screws **15** provided.
- 7) Connect the mains adapter **10** to a mains socket.

9. Getting started

9.1. Information about the battery

- ◆ The vacuum cleaner is powered by a rechargeable, replaceable lithium-ion battery. Before using the vacuum cleaner for the first time, the battery **2** must be charged for around 6 hours.
- ◆ To care for the battery **2**, we recommend the following:
Disconnect the mains adapter **10** from the mains socket after the battery **2** is charged.

i Note

- ▶ The appliance is equipped with a temperature monitor to protect the battery **2**. At high ambient temperatures, the charging process may be interrupted or the appliance may switch off automatically in rare cases:
 - The battery indicator **26** flashes at one second intervals during charging. Charging is interrupted and automatically resumed as soon as the temperature of the appliance has dropped.
 - The battery indicator **26** flashes five times at one second intervals during operation. The appliance switches off automatically. Allow the appliance to cool down for about 20-30 minutes before switching it on again.

9.2. Charging the battery

- ◆ Place the vacuum cleaner in the wall bracket **18** from above so that the barrel plug **11** slips into the charging socket **3** on the bottom of the appliance. The battery indicator **26** starts flashing and the charging process starts (see Fig. 6 and 7).

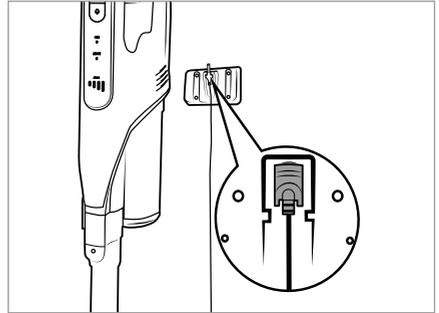


Fig. 6

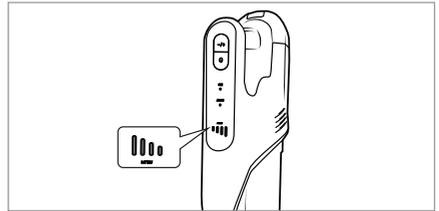


Fig. 7

- ◆ When charging is complete, which can take about 6 hours if the battery **2** is completely discharged, the battery indicator **26** lights up.

Battery indicators

The display panel **27** features five different battery indicators **26** to show the actual charging status of the battery **2**:

- ▬▬▬▬ The battery is fully charged.
- ▬▬▬▬ The battery is charged to approx. 50 %.
- ▬▬▬▬ The battery is charged to approx. 25 %.
- ▬▬▬▬ The battery has only a small amount of charge left.
- ▬▬▬▬ The battery is empty.

i Note

- ▶ Recharge the battery **2** as soon as the battery indicator **25** shows a low remaining charge of the battery **2** .
- ▶ The appliance switches off shortly after an empty battery **2**  is displayed.
- ▶ The vacuum cleaner can also be charged directly via the mains adapter **10**. To do this, remove the barrel plug **11** from the wall bracket **18** by turning it slightly and insert it into the charging socket **3** on the appliance (see Fig. 8).

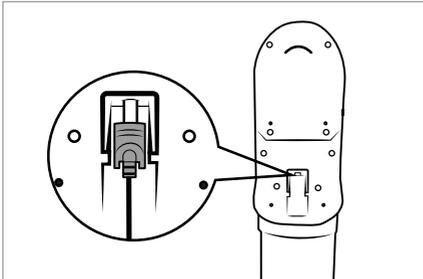


Fig. 8

10. Operation and use

i ATTENTION!

- ▶ The suction openings of the appliance and the floor brush **21** and the suction pipe **23** must be free at all times and must not be blocked. Blockages lead to overheating and damage to the motor.
- ▶ Make certain that the EPA dust filter **5** is always inserted before using the appliance.
- ▶ Do not try to place the vacuum cleaner upright when you want to put it down or take it out of your hand in the meantime. To do this, place the vacuum cleaner in the wall bracket **18** or lay it on the floor (see Fig. 9 and 10). Due to its high centre of gravity, the vacuum cleaner may otherwise tip over and be damaged and possibly damage other objects when tipping over.

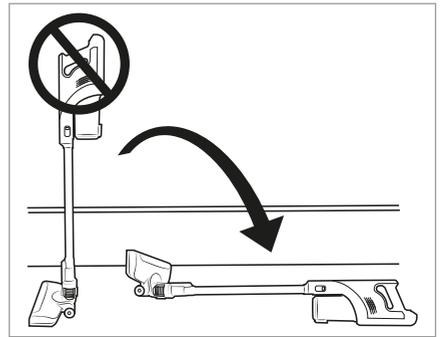


Fig. 9

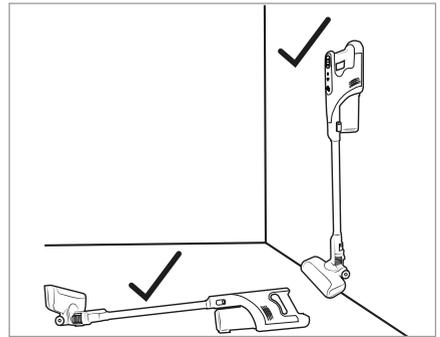


Fig. 10

10.1. Switching the appliance on

- 1) Remove the vacuum cleaner from the wall bracket **18**. When you are not using the wall bracket **18**, pull the barrel plug **11** out of the charging socket **3** on the underside of the appliance.
- 2) Press the On/Off switch  **28** to switch on the appliance. The display panel **27** shows the battery indicator **25** and operating mode **25** (Eco/Boost).

i Note

- ▶ The appliance always starts in operating mode **Eco** after being switched on.

10.2. Selecting an operating mode

The appliance has two different operating modes, each of which differs in terms of suction power and running time. Press the **+/-** **24** button to select the operating mode:

Eco

- For vacuuming hard floors, delicate carpets and rugs with low to medium soiling.
- The appliance consumes less battery power and the running time is therefore longer.
- Running time with fully charged battery approx. 45 minutes.

Boost

- For vacuuming hard floors and carpeting with heavy soiling
- Due to the high suction power, the best suction result is achieved with a short running time.
- Running time with fully charged battery approx. 25 minutes.

10.3. Dismantling the appliance

Suction pipe

- ◆ To remove the suction pipe **23** from the appliance, hold down the suction pipe release button **24** and pull the suction pipe **23** off the suction opening of the appliance (see Fig. 11).

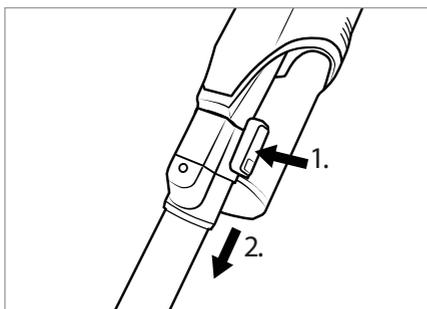


Fig. 11

Floor brush

- ◆ To remove the floor brush **21** from the suction pipe **23**, hold down the floor brush release button **22** and pull the suction pipe **23** off the floor brush **21** (see Fig. 12).

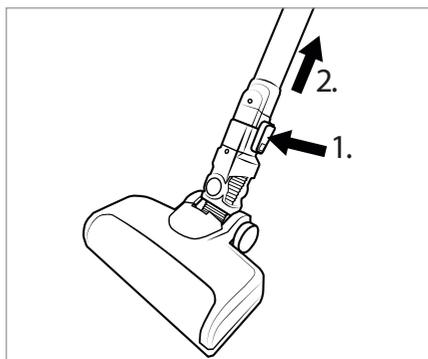


Fig. 12

Battery

- ◆ To remove the battery **2** from the appliance, press and hold the battery release button **1** and pull the battery **2** out of the appliance (see Fig. 13).

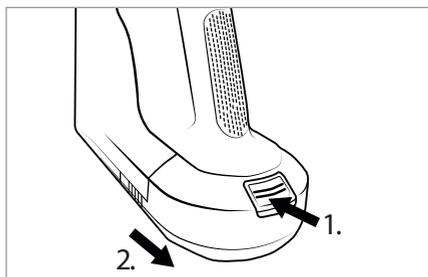


Fig. 13

10.4. Using the accessories

ⓘ Note

- ▶ Before using an accessory, you must remove the floor brush **21**.
To remove the floor brush **21**, see section **10.3. Dismantling the appliance**.
- ▶ You can use the accessories with or without the suction pipe **23** as required.
To remove the suction pipe **23**, see section **10.3. Dismantling the appliance**.

The package contents include three different nozzles/brushes for different areas of application as accessories:

Crevice nozzle

- Use the crevice nozzle 13 to clean narrow, hard-to-reach places such as joints or corners.

2-in-1 combination brush

- The 2-in-1 combination brush 12 can be used as a wide nozzle or as a brush. Press and hold the release button and slide the brush attachment forward or backward as needed. Use the 2-in-1 combination brush 12 to vacuum drawers or storage compartments, for example, or to dust keyboards or delicate surfaces with the soft brush attachment.

Round brush nozzle (with brush attachment)

- Use the round brush nozzle 14 with its hard bristles for deep-seated dirt on coarse carpets or heavily soiled car interiors. The brush attachment can be removed from the nozzle to vacuum rounded inserts or storage compartments in the car, for example.
- ◆ Push the accessory onto the suction pipe 23 or onto the suction opening of the appliance until it clicks into place (see Fig. 14). Make sure that the locking mechanism is in the correct position.

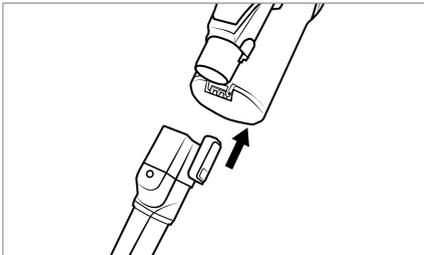


Fig. 14

- ◆ To remove the accessory, press and hold the release button on the accessory, then pull the accessory off the suction pipe 23 or the suction opening of the appliance (see Fig. 15).

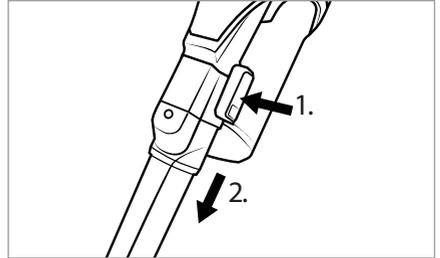


Fig. 15

10.5. After use

- ◆ After use, press the On/Off switch 28 to switch off the appliance. The display panel 27 goes out.
- ◆ Attach the accessories holder 17 to the suction pipe 23 (see Figure 16).

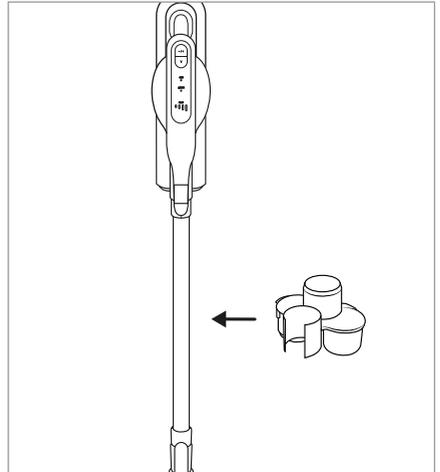


Fig. 16

- ◆ Remove accessories from the appliance and place them on the accessories holder **17** for storage (see Figure 17).

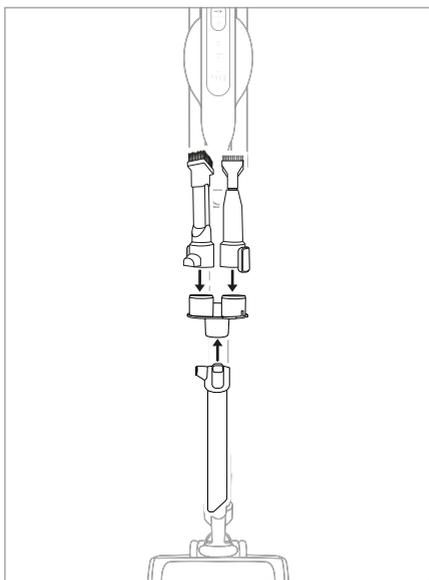


Fig. 17

- ◆ Place the vacuum cleaner in the wall bracket **18**. Start charging when the battery **2** has only a small amount of charge left .

11. Cleaning

WARNING!

- ▶ Always switch off the appliance before cleaning it.

11.1. Emptying the dust container and cleaning the filter

Note

- ▶ Empty the dust container **7** and clean the stainless steel filter **6** and the EPA filter **5** when the dust container **7** level reaches the **MAX** mark.

- 1) Hold the dust container **7** in a waste bin and press the release button for the dirt container lid **8**. The dust container lid **9** opens and the contents are emptied into the waste bin (see Fig. 18). Then close the dust container lid **9**.



Fig. 18

- 2) To remove the dust container **7** from the appliance, turn it towards the symbol  (open) until it can be detached from the appliance (see Fig. 19).

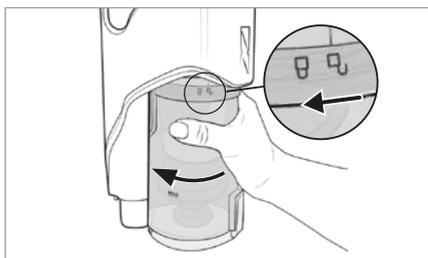


Fig. 19

- 3) Remove the stainless steel filter **6** from the dust container **7** by pressing the dirt container lid release button **8**. Then slide the stainless steel filter **6** out of the dust container **7** from below (see Fig. 20).

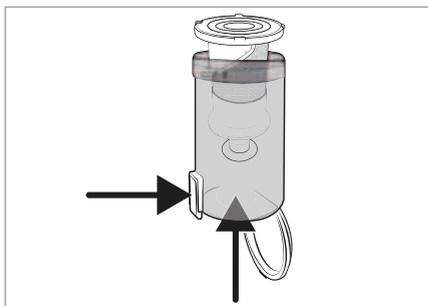


Fig. 20

- 4) Remove the EPA filter **5** from the stainless steel filter **6** by reaching into the opening of the EPA filter **5** and pulling it out of the stainless steel filter **6** (see Fig. 21).

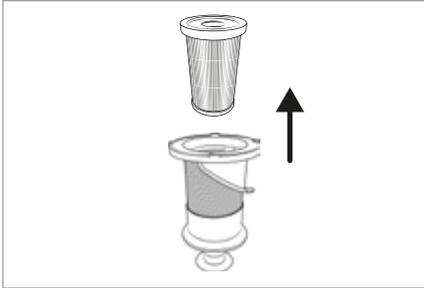


Fig. 21

- 5) Rinse the EPA filter **5** and the stainless steel filter **6** under cold or lukewarm water. Allow the EPA filter **5** and stainless steel filter **6** to air dry completely before putting them back into the dust container **7** (see Fig. 22).

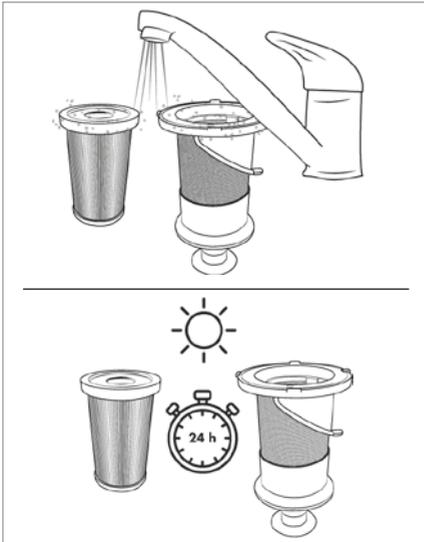


Fig. 22

Note

- ▶ When cleaning the stainless steel filter **6**, take care not to lose the rubber supports on the lower opening.

- 6) Insert the stainless steel filter **6** into the dust container **7** and push it all the way down (see Fig. 23). Pay attention to the different sized locks on the stainless steel filter **6**. The stainless steel filter **6** can only be inserted into the dust container **7** in one position due to these locks.

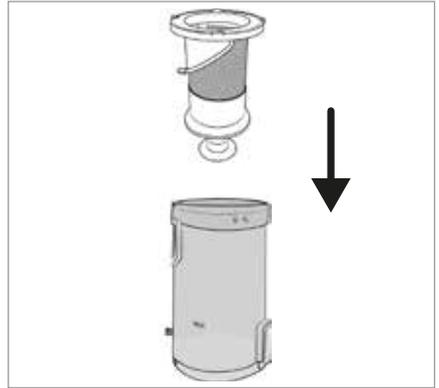


Fig. 23

Note

- ▶ Do not turn the stainless steel filter **6** while inserting it into the dust container **7**. Pay attention to the two markings on the stainless steel filter **6** and on the dust container **7** to insert the stainless steel filter **6** correctly.

- 7) Insert the EPA filter **5** into the stainless steel filter **6** (see Fig. 24).

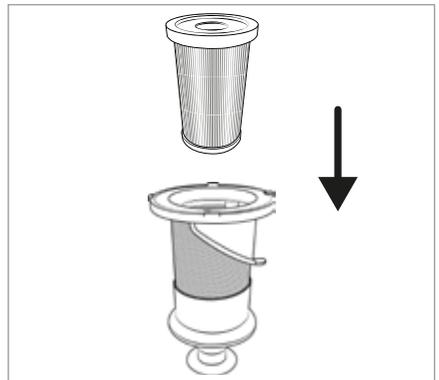


Fig. 24

- 8) Put the dust container **7** back into the appliance and turn it in the direction of the symbol  (close) until it is firmly seated in the appliance (see Fig. 25).

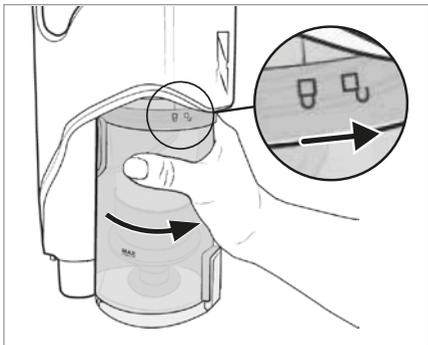


Fig. 25

11.2. Cleaning the rotary brush

! ATTENTION!

- ▶ Only use the appliance with the rotary brush **20** properly mounted.

i Note

- ▶ Clean the rotary brush **20** regularly to ensure proper operation of the appliance and avoid malfunctions.

- 1) Remove the floor brush **21** from the suction pipe **23** or from the appliance (see section **10.3. Dismantling the appliance**).
- 2) Unlock the rotary brush **21** by turning the rotary brush release **19** towards the symbol  (open) (see Fig. 26).

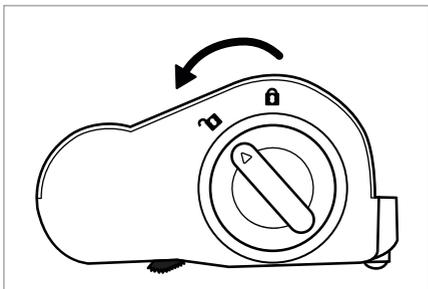


Fig. 26

- 3) Pull the rotary brush **20** out of the floor brush **21** (see Fig. 27).

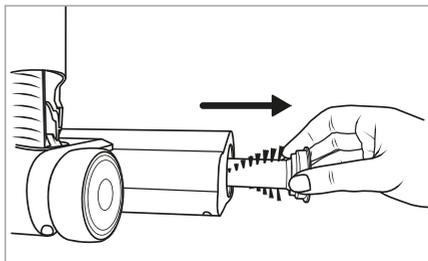


Fig. 27

- 4) Cut threads and hairs along the bristles of the rotary brush **20** with scissors (see Fig. 28). Remove threads and hair from the rotary brush **20**.

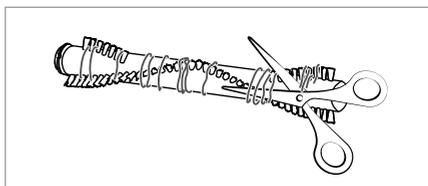


Fig. 28

- 5) Insert the rotary brush **20** into the floor brush **21** and turn the rotary brush release **19** in the direction of the symbol  (close) (see Fig. 29).

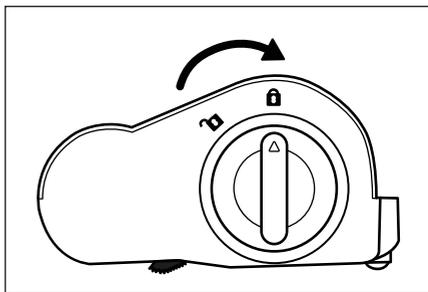


Fig. 29

11.3. Cleaning the appliance

DANGER!

- ▶ Always remove the barrel plug **11** of the mains adapter **10** from the charging socket **3** of the appliance before cleaning it. There is a risk of electric shock!

ATTENTION!

- ▶ Do not use aggressive, chemical or abrasive cleaning agents. They could damage the outer surfaces of the appliance.
- ▶ To avoid irreparable damage to the appliance, ensure that no moisture gets into it during cleaning.
- ◆ Clean the appliance housing and the attachments with a slightly damp cloth. For stubborn soiling use a mild detergent on the cloth.
- ◆ Dry all parts thoroughly before using the appliance again or storing it.

12. Storage

ATTENTION!

- ▶ Never store the device when it is discharged. Prolonged storage in a discharged state can cause permanent damage to the battery. If the device is stored for a longer period of time, the charge level of the battery must be checked regularly. The optimum charge level is between 50 % and 80 %.
- ◆ Place the appliance on the wall bracket **13** when you are not using it.
- ◆ Attach the accessories holder **17** to the suction pipe **23** and place the accessory on the accessories holder **17** for storage (see section **10.5. After use**).
- ◆ Store the appliance in a dust-free and dry location out of direct sunlight.

13. Disposal

13.1. Disposal of the appliance and packaging



The symbol of the crossed-out wheellie bin means that this appliance may not be disposed of in regular household waste at the end of its service life.

The appliance must be deposited at an established collection point, recycling centre or disposal company.

Please erase all personal data before returning an appliance.

Before returning an appliance, please remove any batteries that are not permanently enclosed within the old appliance as well as any light sources that can be removed without destroying the appliance. Then dispose of these items separately.

If the rechargeable batteries are permanently installed, you must indicate during disposal that the appliance contains a battery.

The packaging is made from environmentally friendly material which can be disposed of at your local recycling plant.

Dispose of the packaging in an environmentally friendly manner.

13.2. Disposal of batteries



Batteries/rechargeable batteries must be treated as hazardous waste and must therefore be disposed of in an environmentally sound manner by appropriate bodies (dealers, specialist dealers, public municipal bodies, commercial disposal companies). Batteries/rechargeable batteries may contain toxic heavy metals.

The heavy metals contained are identified by letters below the symbol: Cd = cadmium, Hg = mercury, Pb = lead.

For this reason, do not dispose of batteries/rechargeable batteries in domestic waste. Take them to a specialist collection point.

Only return batteries that are fully discharged.

14. Ordering replacement parts

You can order replacement parts for this product on the Internet at www.kompernass.com.



Scan the QR code with your smartphone/tablet.

You can use this QR code to go directly to our website to view and order the available spare parts.

Note

- ▶ If you have problems with your online order, you can contact our service centre by phone or e-mail.
- ▶ Always quote the article number (IAN) **500198_2504** in your order.
- ▶ Please note that online ordering of replacement parts is not possible for all countries.

15. Kompernass Handels GmbH warranty

Dear Customer,

This appliance has a 3-year warranty valid from the date of purchase. If this product has any faults, you, the buyer, have certain statutory rights. Your statutory rights are not restricted in any way by the warranty described below.

Warranty conditions

The warranty period starts on the date of purchase. Please keep your receipt in a safe place. This will be required as proof of purchase.

If any material or manufacturing fault occurs within three years of the date of purchase of the product, we will either repair or replace the product for you or refund the purchase price (at our discretion).

This warranty service requires that you present the defective appliance and the proof of purchase (receipt) within the three-year warranty period, along with a brief written description of the fault and of when it occurred.

If the defect is covered by the warranty, your product will either be repaired or replaced by us. The repair or replacement of a product does not signify the beginning of a new warranty period.

Warranty period and statutory claims for defects

The warranty period is not prolonged by repairs effected under the warranty. This also applies to replaced and repaired components. Any damage and defects present at the time of purchase must be reported immediately after unpacking. Repairs carried out after expiry of the warranty period shall be subject to a fee.

Scope of the warranty

This appliance has been manufactured in accordance with strict quality guidelines and inspected meticulously prior to delivery.

The warranty covers material faults or production faults. The warranty does not extend to product parts subject to normal wear and tear or to fragile parts which could be considered as consumable parts such as switches or parts made of glass.

The warranty does not apply if the product has been damaged, improperly used or improperly maintained. The directions in the operating instructions for the product regarding proper use of the product are to be strictly followed. Uses and actions that are discouraged in the operating instructions or which are warned against must be avoided.

This product is intended solely for private use and not for commercial purposes. The warranty shall be deemed void in cases of misuse or improper handling, use of force and modifications/repairs which have not been carried out by one of our authorised Service centres.

Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions:

- Please have the till receipt and the item number (IAN) 500198_2504 available as proof of purchase.
- You will find the item number on the type plate on the product, an engraving on the product, on the front page of the operating instructions (below left) or on the sticker on the rear or bottom of the product.
- If functional or other defects occur, please contact the service department listed either by **telephone** or by **e-mail**.
- You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.



You can download these instructions along with many other manuals, product videos and installation software at www.lidl-service.com.

This QR code will take you directly to the Lidl service page (www.lidl-service.com) where you can open your operating instructions by entering the item number (IAN) 500198_2504.

15.1. Service

GB Service Great Britain

Tel.: 0800 404 7657

E-Mail: kompennass@lidl.co.uk

IE Service Ireland

Tel.: 1800 101010

E-Mail: kompennass@lidl.ie

IAN 500198_2504

15.2. Importer

Please note that the following address is not the service address. Please use the service address provided in the operating instructions.

For EU market



KOMPERNASS HANDELS GMBH
BURGSTRASSE 21
44867 BOCHUM
GERMANY
www.kompennass.com

For GB market

Lidl Great Britain Ltd
Lidl House 14 Kingston Road
Surbiton
KT5 9NU

KOMPERNASS HANDELS GMBH

BURGSTRASSE 21

44867 BOCHUM

GERMANY

www.kompernass.com

Last Information Update:

07/2025 · Ident.-No.: SHAZ22.2G8-062025-1

IAN 500198_2504