



SANDPIT WITH WATER WALL

GB

IE

NL

SANDPIT WITH WATER WALL

Assembly and safety instructions

FR

BE

BAC À SABLE AVEC MUR D'EAU

Instruction de montage et de sécurité

DE

AT

CH

SANDKASTEN MIT WASSERSPIELWAND

Montage- und Sicherheitshinweise

DK

SANDKASSE MED VANDLEGEVÆG

Monterings- og sikkerhedshenvisninger

NL

BE

ZANDBAK MET WATERSPEELWAND

Montage- en veiligheidsinstructies



 
IAN 465987_2404

GB


DK

BE


Sie benötigen - Il vous faut - Vi servono:

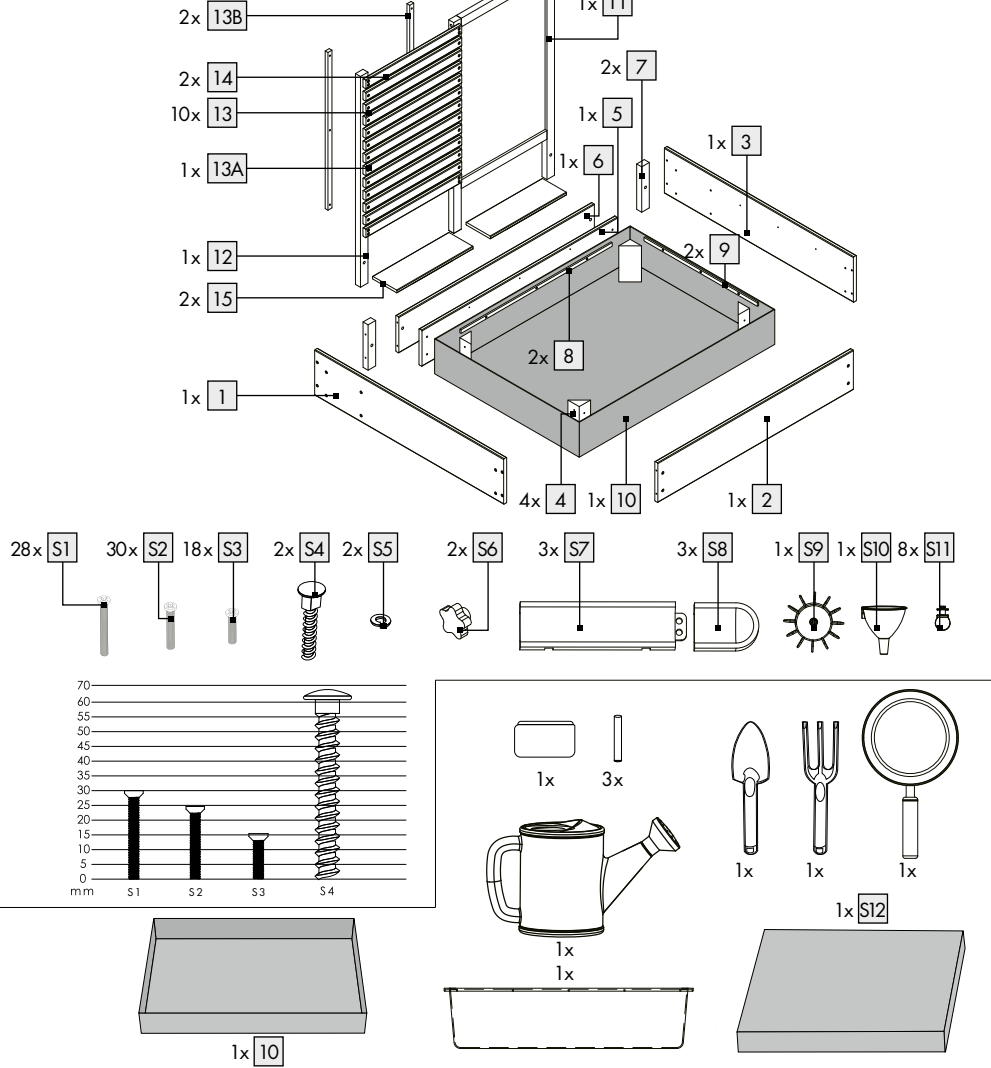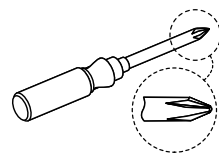


A

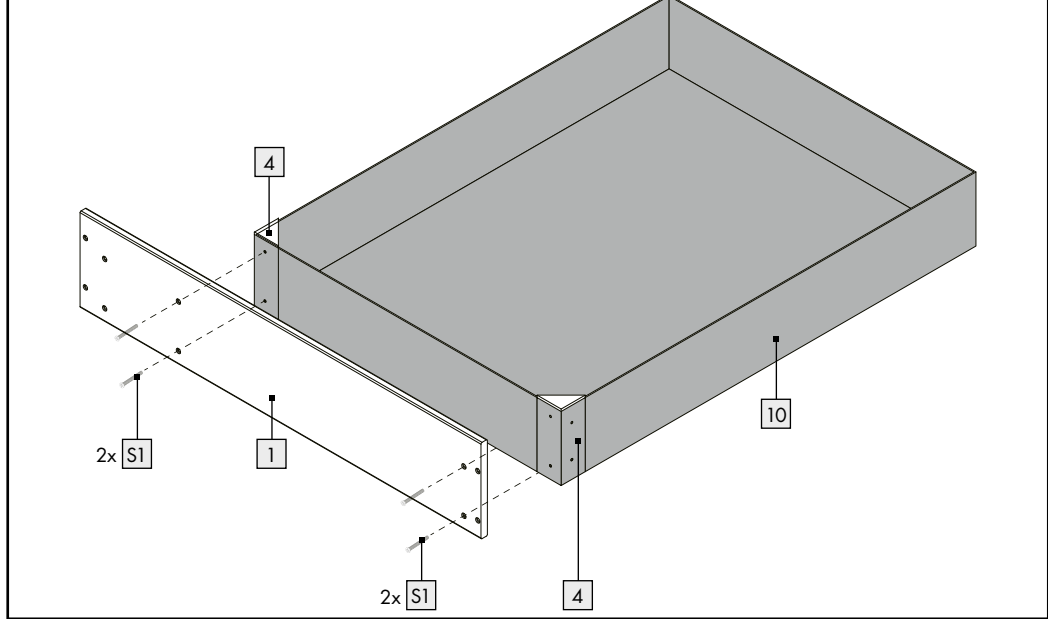


B

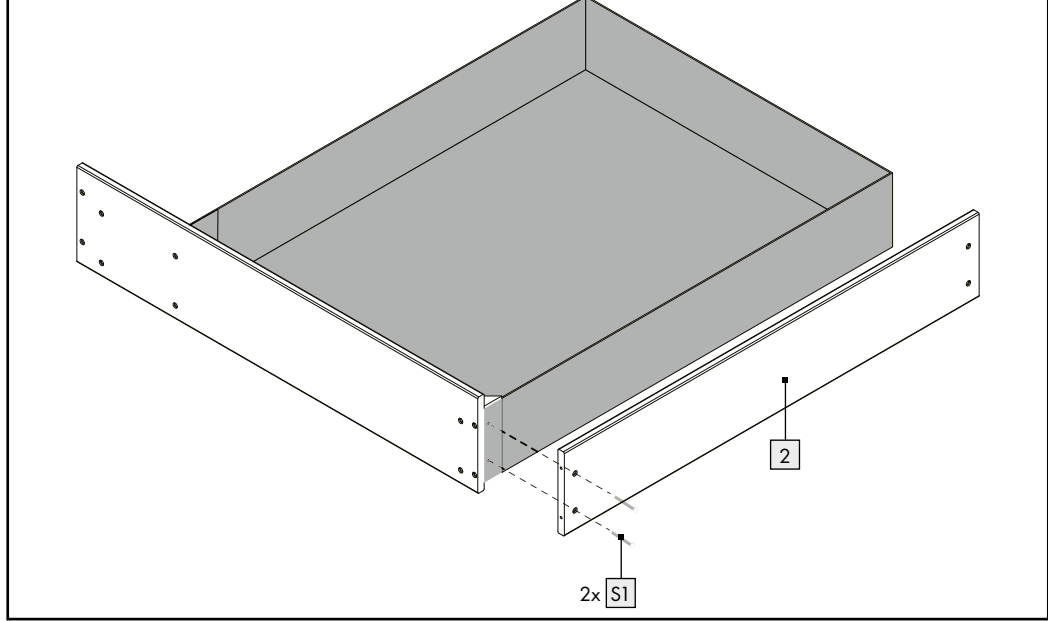


C

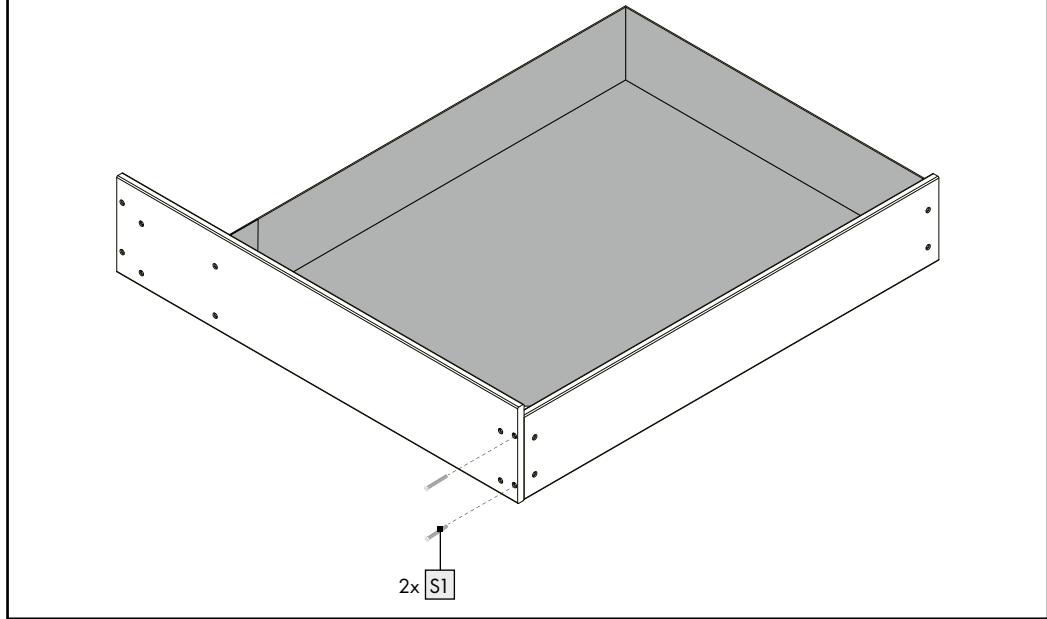


D

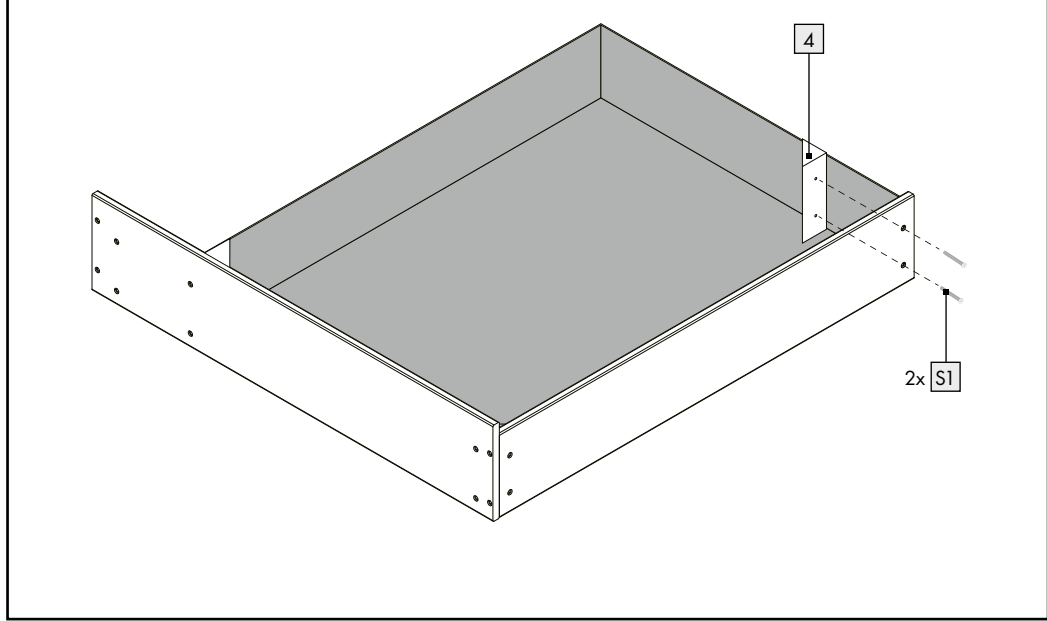


E

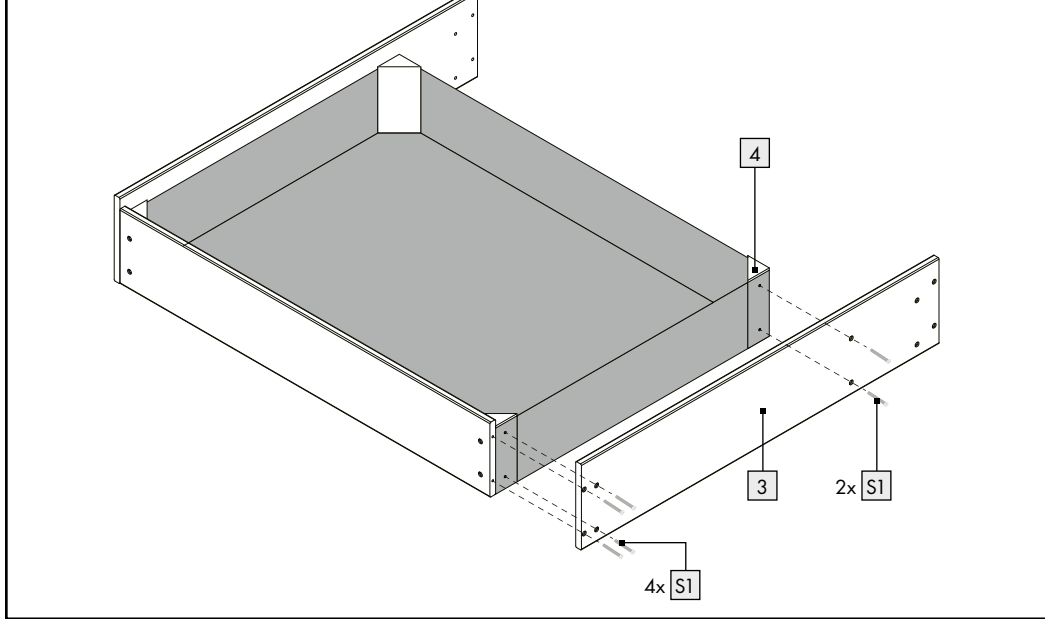


F

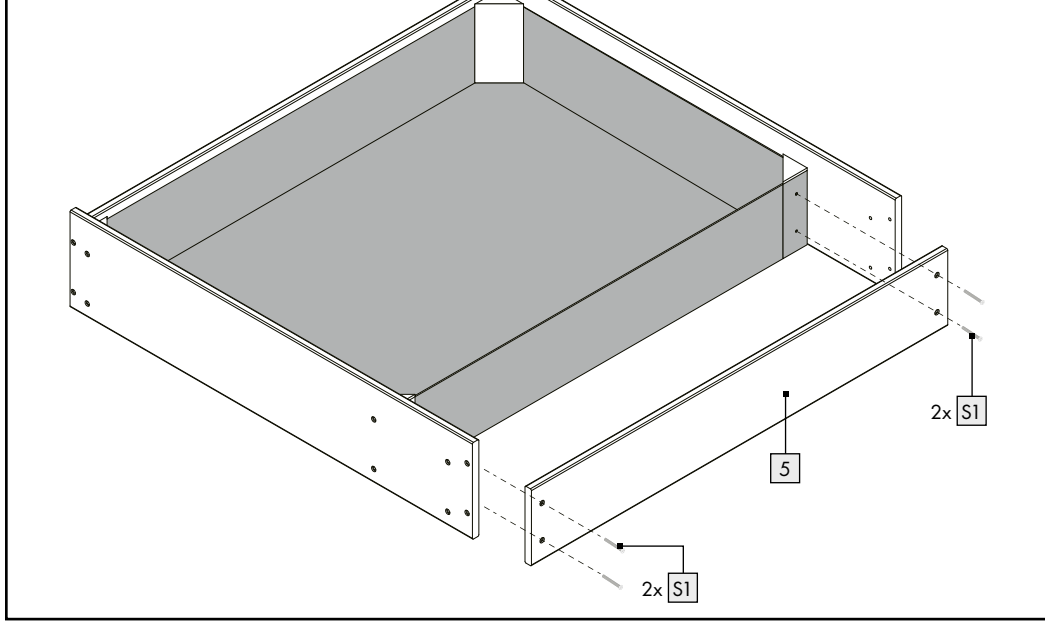


G

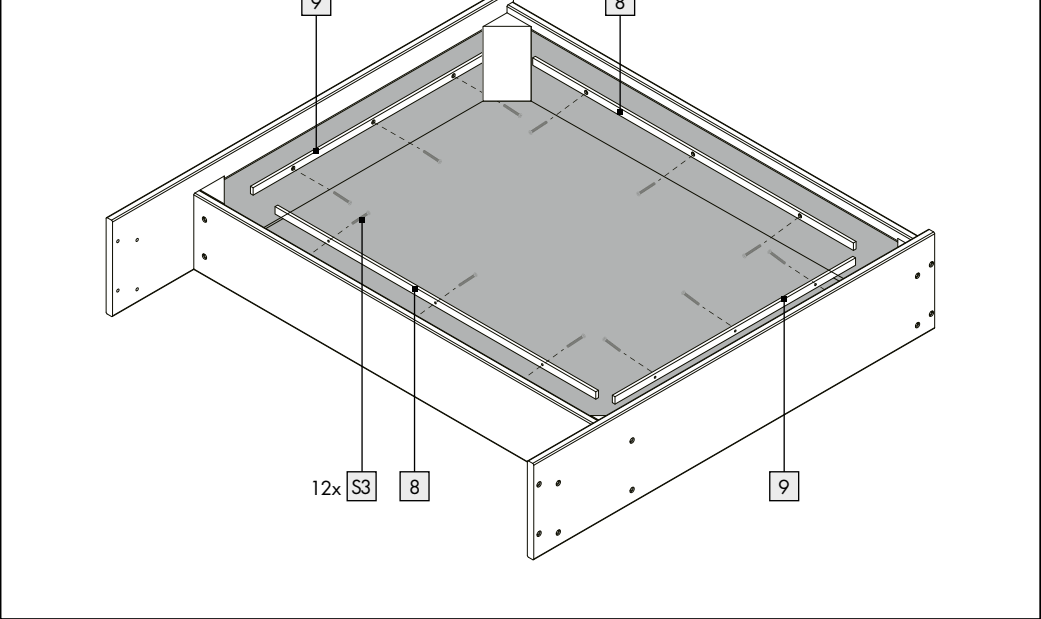


H

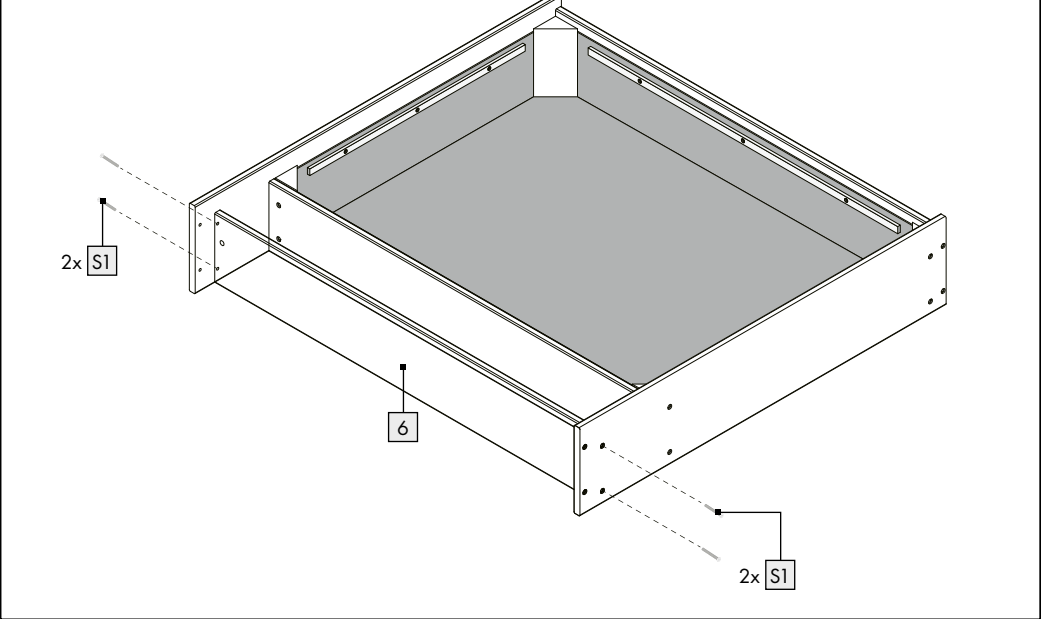


I

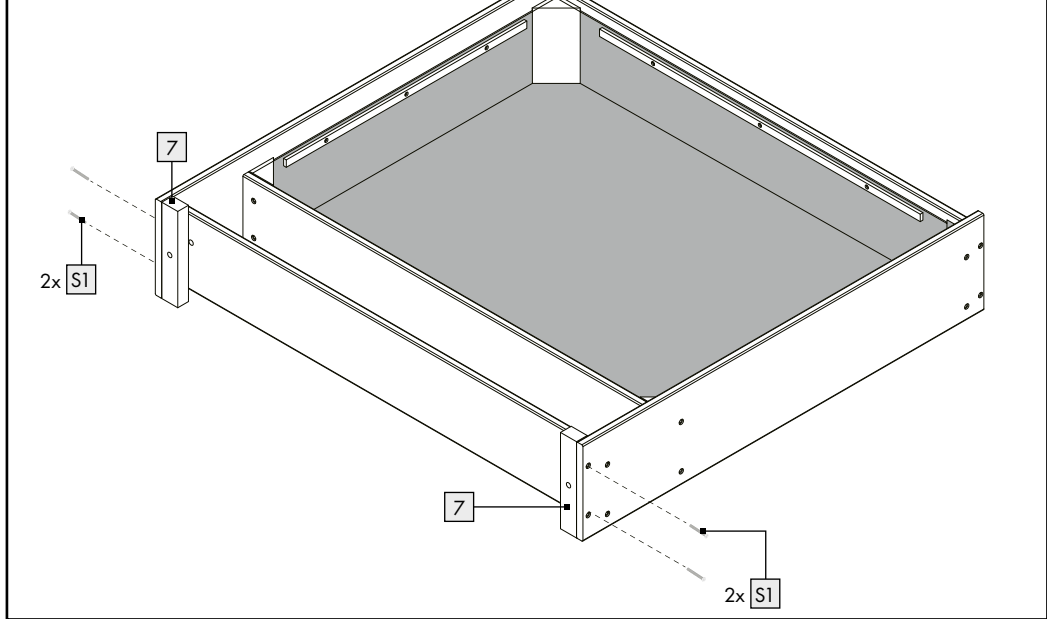


J

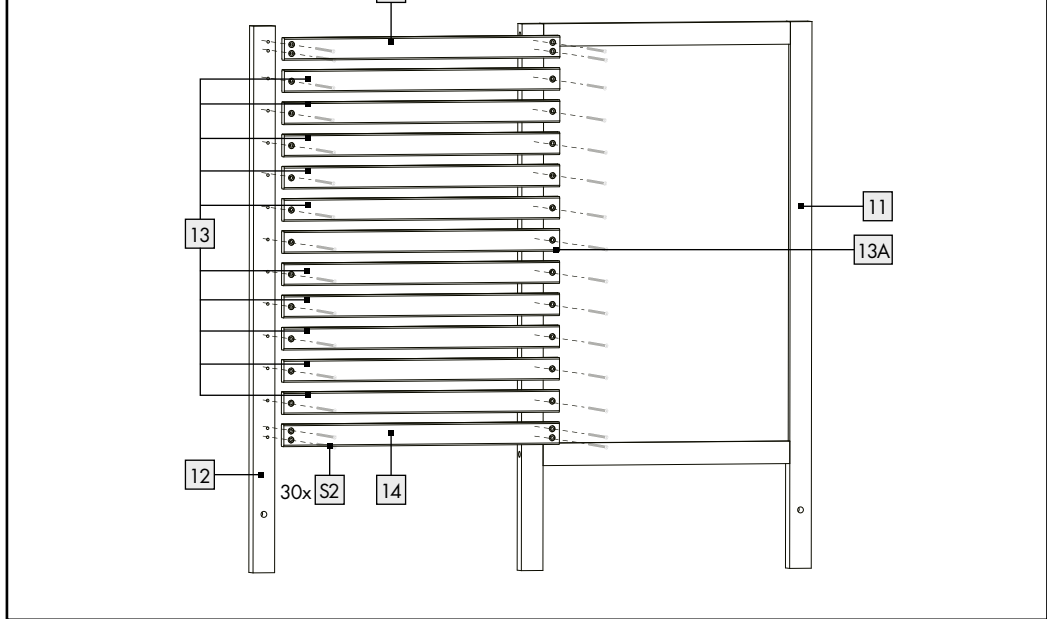


K

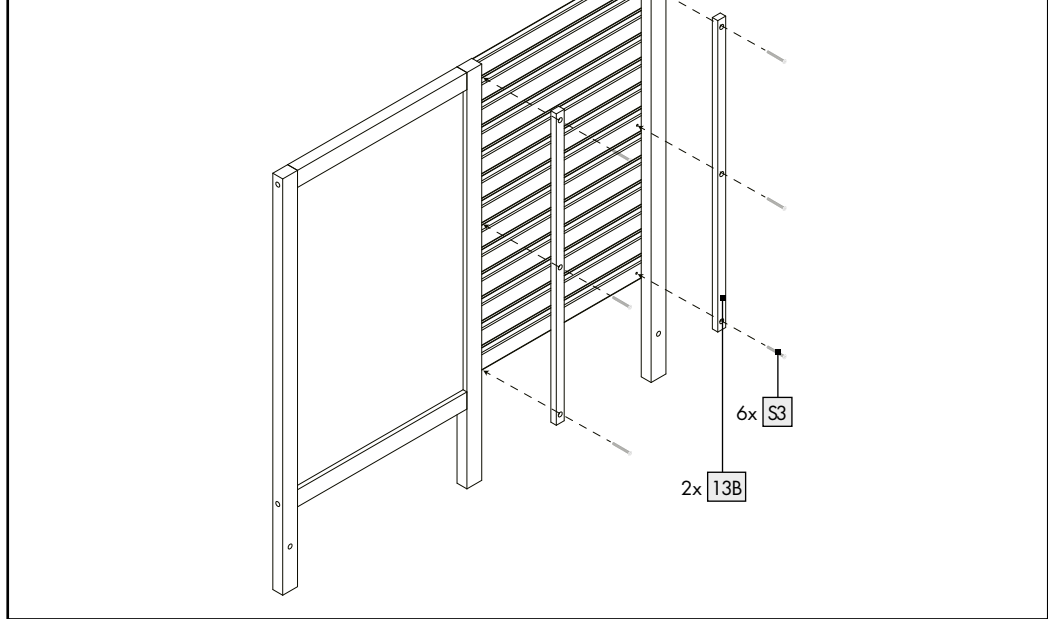


L

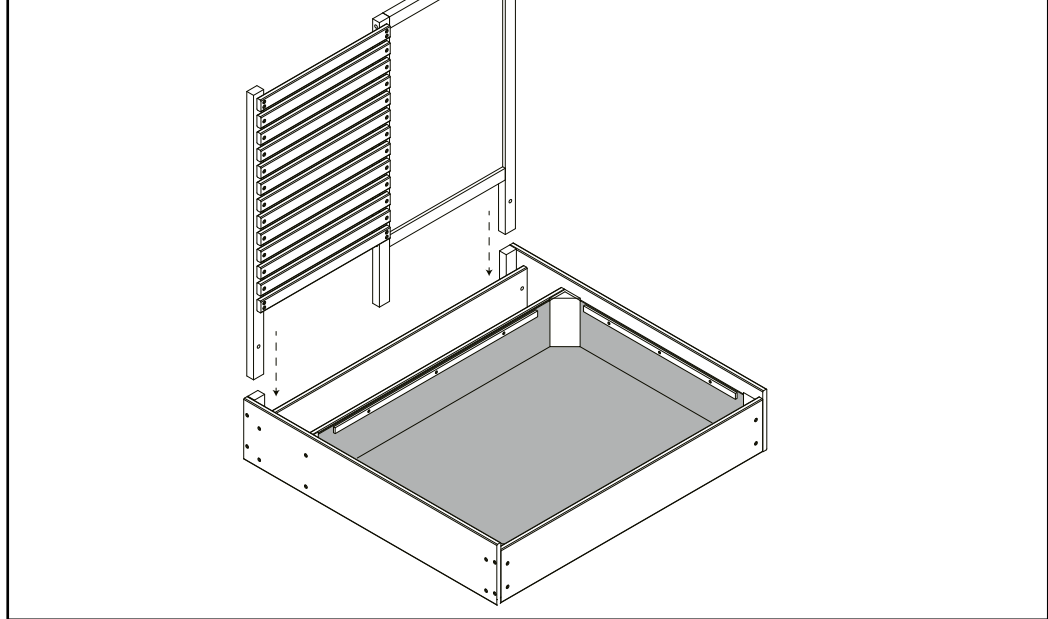


M

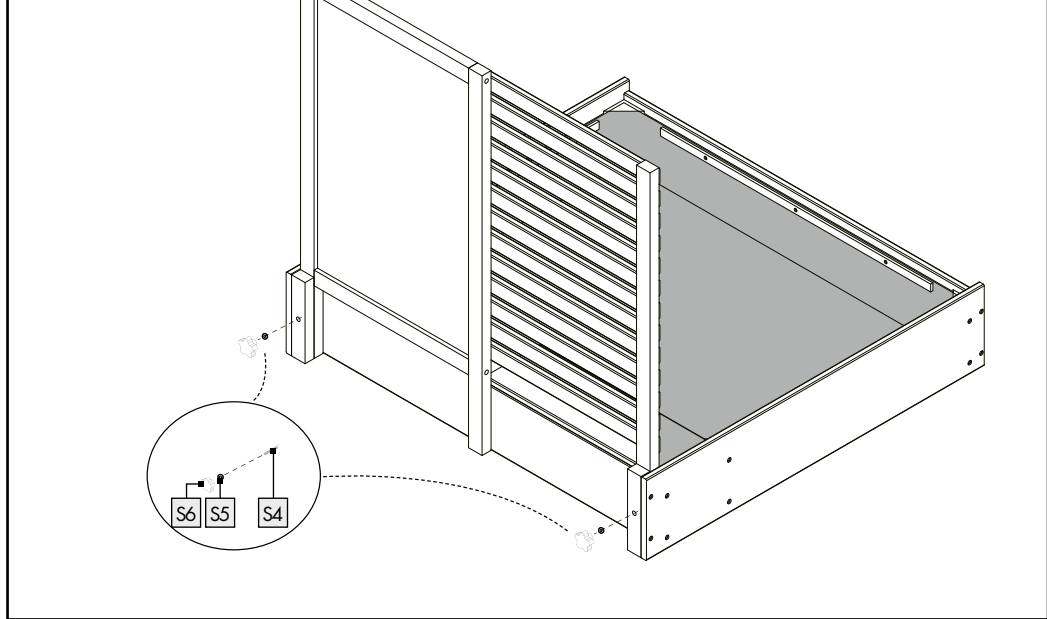


N

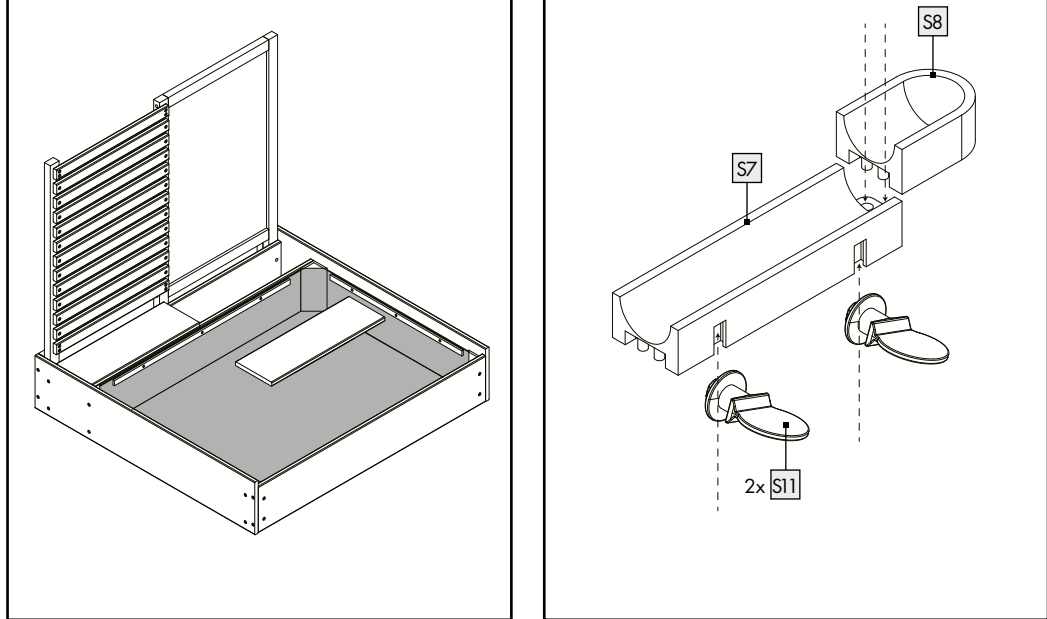


O

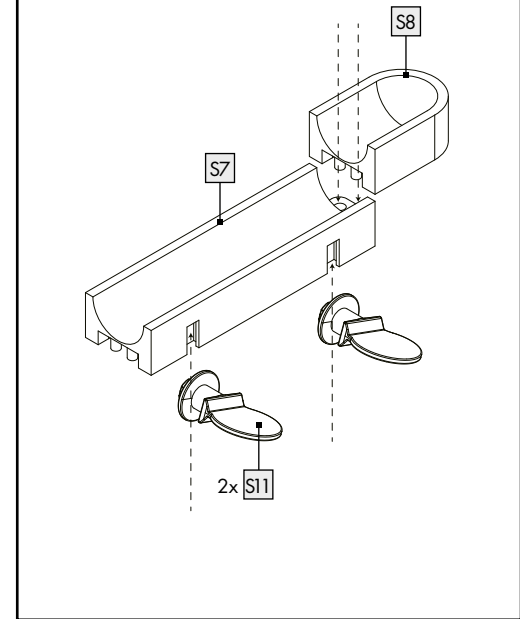


P

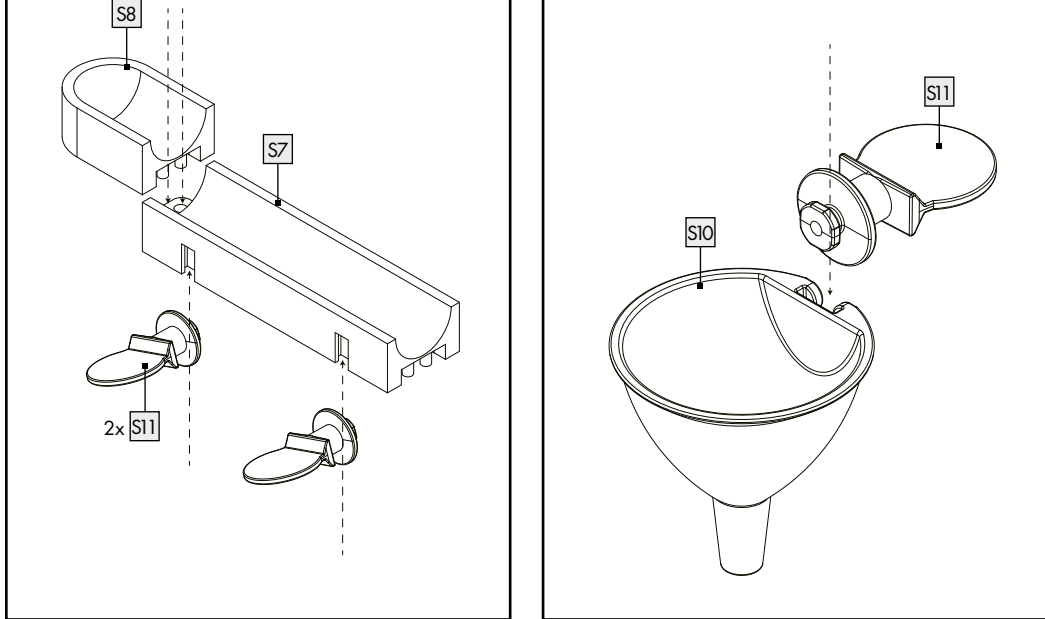


Q

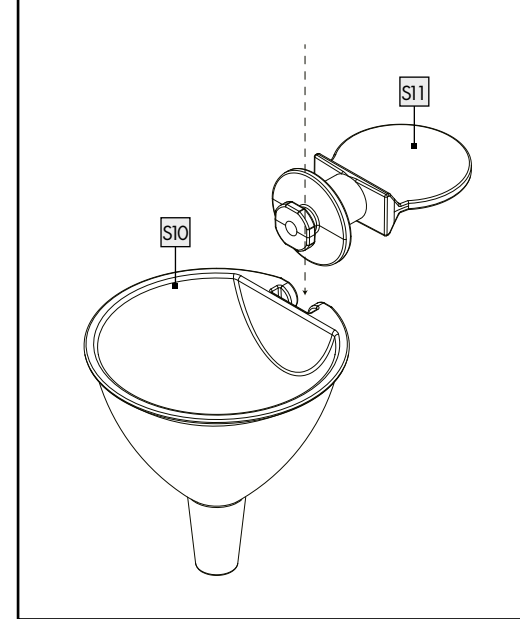


T

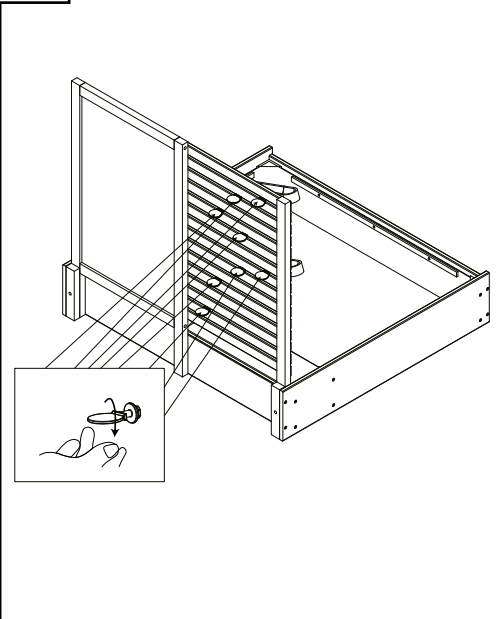


U

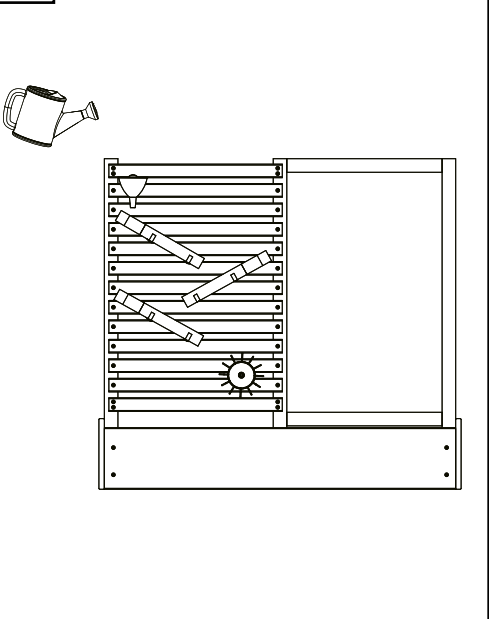


V

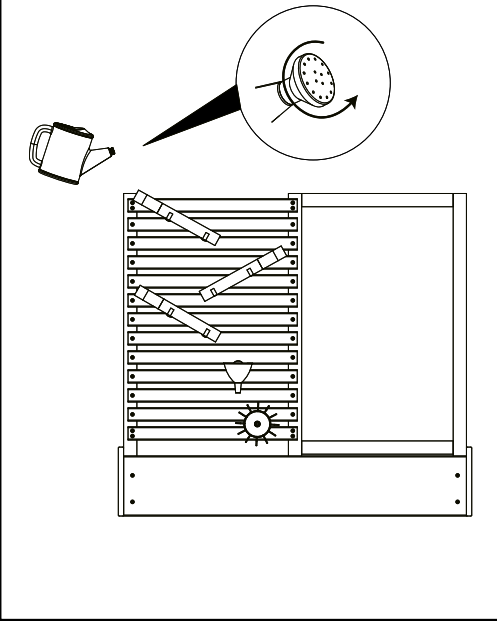

W

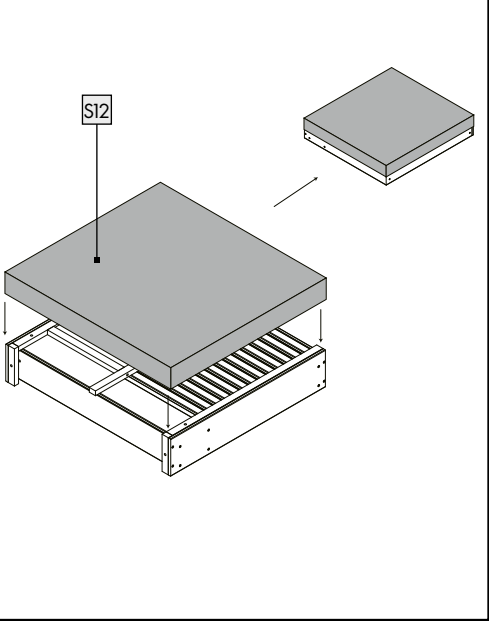

List of pictograms used

 

Sandpit With Water Wall

Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. Familiarise yourself with the product before using it for the first time. In addition, please carefully refer to the operating instructions and the safety advice below. Only use the product as instructed and only for the indicated field of application. Keep these instructions in a safe place. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

Intended use
The product is only intended for private household use. This product is not intended for commercial use.

Scope of delivery

- 1 Left side panel [1]
- 1 Front side panel [2]
- 1 Right side panel [3]
- 4 Fixed triangular blocks [4]
- 1 Inner back side panel [5]
- 1 Outer back side panel [6]
- 2 Fixed square blocks [7]
- 2 Fixed crossbars (long) [8]
- 2 Fixed crossbars (short) [9]
- 1 Groundsheet [10]
- 1 Blackboard (with frame parts) [11]
- 1 Left upright [12]
- 10 Cross struts (with 2 fixing holes) [13]
- 1 Cross strut (with 4 fixing holes) [13A]
- 2 Cross struts (with 4 fixing holes) [14]
- 2 Cover panels [15]
- 1 Water basin
- 1 Cover
- 28 Screws, Ø 4 x 30 mm [S1]
- 30 Screws, Ø 4 x 24 mm [S2]
- 18 Screws, Ø 4 x 16 mm [S3]
- 2 Screws, Ø 8 x 65 mm [S4]
- 2 Washers, Ø 14 x 5 mm [S5]

- 2 Nuts, Ø 38 x 20,5 mm [S6]
- 16 Play elements (3 [S7], 3 [S8], 1 [S9], 1 [S10], 3 chinks, 1 eraser, 1 watering can, 2 tools, 1 pan)
- 8 Fasteners [S11]
- 1 Cover (sandpit) [S12]

Safety notices

- WARNING.** To be used under the direct supervision of an adult.
- WARNING.** Only for domestic use.
- WARNING.** This product is only suitable for children between 18 and 48 months of age.
- WARNING.** Maximum user weight: 30 kg on one seat of the bench. Only one child can sit on one of the seats at a time.
- WARNING.** All packaging are not part of the toy and for safety reasons should always be removed before it is handed over to children to play with.
- The product is suitable for children aged from 1.5 year old.
- Around 140 kg of sand is required to reach the filling level of 12 cm.
- The product may become unstable if used incorrectly. This could result in injuries or property damage.
- During the assembly children must be kept away due to possible risk of injury.
- Do not use the product near open fire.
- Adult assembly is required.
- Verify the product is stable before use.
- Be sure to set the product on a level and firm surface.
- Check the product for damage or wear before every use. Only use the product in good condition.
- Do not use the product if damage is visible or suspected.
- Risk of property damage!**
We are not liable for accidents resulting from failure to comply with the above safety instructions or improper handling.
- The activity toy shall be placed on a level surface at least 2 m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- The toy shall not be installed over concrete, asphalt or any other hard surface.
- Do not modify the product.

- Check all nuts and bolts for tightness and tighten when required.
- Check all covers and screws for sharp edges and replace them if required.
- Replace defective parts in accordance with the manufacturer's instructions.
- Before storing, empty out the water completely and allow the product to dry.

Assembly

- Do not fully tighten the screws immediately when assembling. Only tighten all screws when each section is completed.
- Note:** Remove all packaging materials from the product.
- Note:** You will need an additional cross-head screwdriver in order to assemble the product.
- Follow the steps shown in figures A-T for the assembly of the product.

How to play

- This activity toy allows children to create individual waterfall paths.
- With the watering can, they can try out different ways to activate the installed wheels with water so that they turn smoothly.
- Note:** Remove the sprinkler head of the watering can when playing with the waterfall path. When using the watering can for watering, put the sprinkler head back on.
- Figures U and V show examples of waterfall path combinations. If necessary, give your child some guidance.

Care and storage

- Do not use harsh or aggressive cleaning agents.
- Clean the product only with a soft, dry cloth.
- Always store the product clean and dry and at room temperature after use.
- To help extend the life of this product it will need covering or sheltering during heavy rain and strong sunlight. For this purpose, use the cover [S12] (see fig. W).
- Secure the product in extreme weather, e.g. strong wind. Store the product in protected areas.

Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.

Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.

Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of material or manufacturing defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Keep the original sales receipt in a safe location as this document is required as proof of purchase.

Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.

Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it - at our choice - free of charge to you. The warranty period is not extended as a result of a claim being granted. This also applies to replaced and repaired parts.

This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty covers material or manufacturing defects. This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g. batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g. switches or glass parts.

Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions.

Please have the till receipt and the item number (IAN 465987_2404) available as proof of purchase.

You will find the item number on the rating plate, an engraving on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product. If functional or other defects occur, please contact the service department listed either by telephone or by email. You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

Service

Service Great Britain
Tel.: 0800 0569216
E-Mail: owim@lidl.ie

Service Ireland
Tel.: 1800 200736
E-Mail: owim@lidl.ie

Service Northern Ireland
Tel.: 0800 0927852
E-Mail: owim@lidl.ie

De anvendte piktogrammers legende

Sikkerhedsanvisninger

Handlingsanvisninger

Sandkasse med vandlegevæg

Indledning

Hjerteligt tillykke med købet af deres nye produkt. Du har besluttet dig for et produkt af høj kvalitet. Gør Dem fortrolig med apparatet inden første brugtagning. Læs derfor den efterfølgende brugsvejledning og sikkerhedsanvisningerne omhyggeligt. Brug kun produktet som beskrevet og kun til de angivne anvendelsesområder. Opbevar denne vejledning på et sikkert sted. Hvis De giver produktet videre til andre, skal alle dokumenter følge med.

Formålsbestemt anvendelse
Produktet er udelukkende beregnet til brug i private hjem. Produktet er ikke beregnet til erhvervmæssig brug.

Leverede dele

- 1 venstre sidevæg [1]
- 1 forreste sidevæg [2]
- 1 højre sidevæg [3]
- 4 faste trekantede blokke [4]
- 1 indvendig bogvæg [5]
- 1 udvendig bogvæg [6]
- 2 faste firkantede blokke [7]
- 2 faste tværlister (lang) [8]
- 2 faste tværlister (kort) [9]
- 1 bundpresning [10]
- 1 tavle (med rammedele) [11]
- 1 venstre stolpe [12]
- 10 tværstolpe (med 2 fastgørelsesshuller) [13]
- 1 tværstolpe (med 4 fastgørelsesshuller) [13A]
- 2 faste tværlister (tavle) [13B]
- 2 tværstolpe (med 4 fastgørelsesshuller) [14]
- 2 dæklader [15]
- 1 vandbasin
- 1 ukrudtsdug
- 28 skruer, Ø 4 x 30 mm [S1]
- 30 skruer, Ø 4 x 24 mm [S2]
- 18 skruer, Ø 4 x 16 mm [S3]
- 2 skruer, Ø 8 x 65 mm [S4]
- 2 underlagsskiver, Ø 14 x 5 mm [S5]
- 2 møtrikker, Ø 38 x 20,5 mm [S6]

- 16 legetøjsejle (3 [S7], 3 [S8], 1 [S9], 1 [S10], 3 kridt, 1 gummi, 1 vandkande, 2 værktøj, 1 ponde)
- 8 lukninger [S11]
- 1 overdækning (sandkasse) [S12]

Sikkerhedsanvisninger

- Skal anvendes under umiddelbart opsyn af voksne.
- Kun til hjemmebrug.
- Kun til udendørs brug.
- Produktet er kun egnet til børn fra 18 til 48 måneder.
- Maks. brugervægt: 30 kg på bankens sæde. Der må kun sidde et barn ad gangen på sædet.
- Alle emballage- og fastgørelsesmaterialer er ikke bestanddel af legetøjet og bør altid fjernes på grund af sikkerhedsmæssige årsager, inden produktet gives til børn til leg.
- Opbevar emballagen til senere henvendelser!
- Produktet er egnet til børn fra 1,5 år.
- For at nå påfyldningshøjden på 12 cm, kræves der ca. 140 kg sand.
- Ved uhensigtsmæssig anvendelse kan produktet blive ustabil. Dette kan føre til kvæstelser eller materielle skader.
- Hold børn væk fra arbejdsområdet, mens produktet monteres. Ellers er der fare for tilkadekomst.
- Anvend aldrig produktet i nærheden af åben ild.
- Samling af sandkassen skal foretages af en voksen.
- Vær opmærksom på produktets rette stabilitet inden brug.
- Sørg for at stille produktet på et jævnt og stabilt underlag.
- Kontroller produktet inden hver anvendelse for beskadigelse eller slitage. Anvend kun produktet i fejlfri tilstand.
- Anvend ikke produktet, hvis der er synlige skader eller der er en formodning om, at der er skader.
- Fare for materielle skader!**
Vi hæfter ikke for ulykker, som optræder i forbindelse med ikke-overholdelse af de ovennævnte sikkerhedsanvisninger eller gennem forkert håndtering.
- Opstil aktivitetslegetøjet på en jævn undergrund og med minimum 2 m afstand til andre strukturer eller forhindringer; f.eks. hegn, garager, huse, udværgende grene, tårerore eller elektriske ledninger.

