



ROCKET & GLIDER / MINI GLIDER ON WHEELS / SLINGSHOT GLIDER

GB

ROCKET & GLIDER /
MINI GLIDER ON WHEELS /
SLINGSHOT GLIDER

Instructions for use

CZ

RAKETA A KLUZÁK /
MINI VĚTROŇ NA KOLEČKÁCH/
KATAPULTOVÝ KLUZÁK

Návod k použití

SK

RAKETA A KLZÁK / MINI
VETRONE NA KOLIESKACH /
KATAPULTOVÝ KLZÁK

Navod na používanie

DE

AT

CH

RAKETE UND GLEITER /
MINI WURFGLEITER AUF RÄDERN
/ KATAPULT GLEITER

Gebrauchsanweisung

CE

IAN 466911_2404





DELTA-SPORT HANDELSKONTOR GMBH
Wragekamp 6 • 22397 Hamburg
GERMANY
11/2024
Delta-Sport-Nr.: FS-15575, FS-15576, FS-15577





IAN 466911_2404




FS-15575

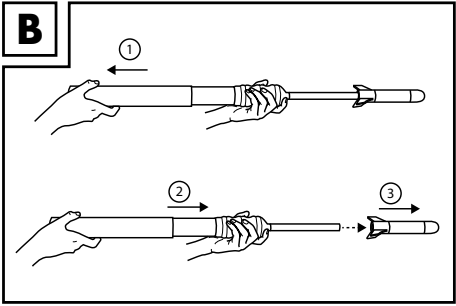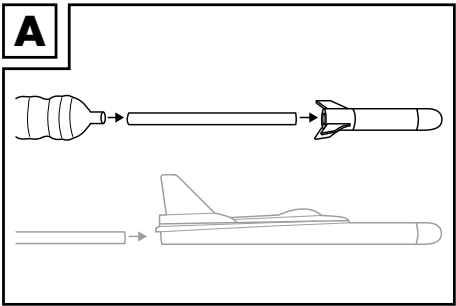

FS-15576

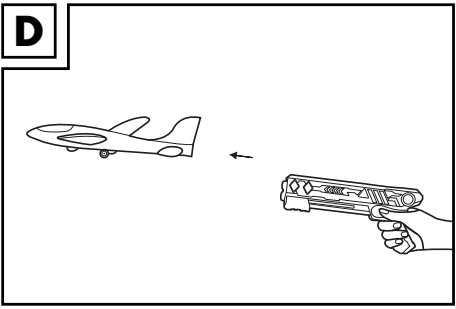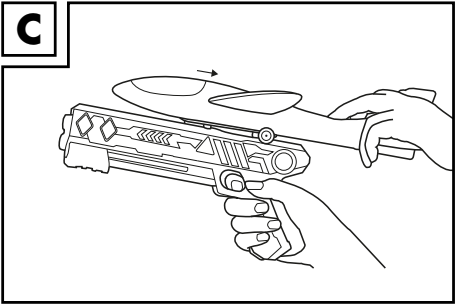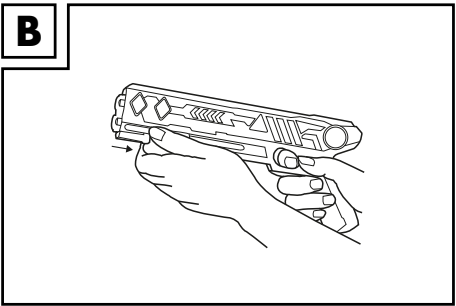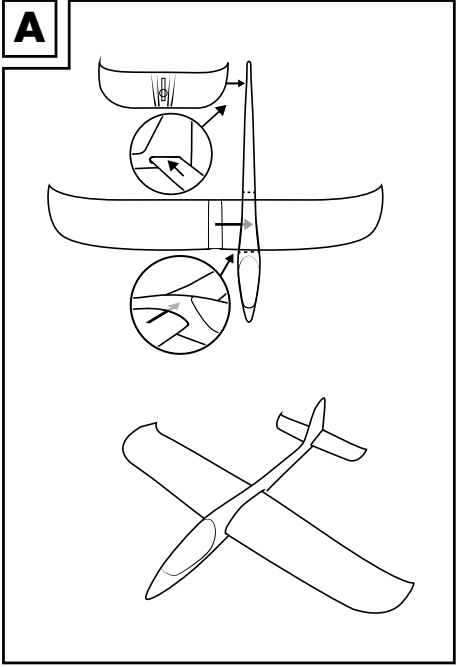

FS-15577

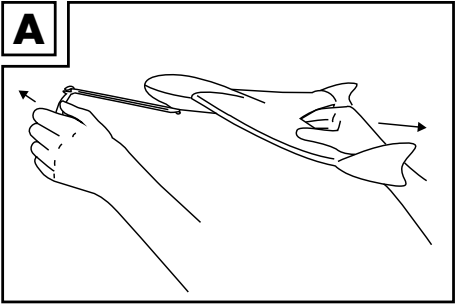

Congratulations!
You have chosen to purchase a high-quality product. Familiarise yourself with the product before using it for the first time.
Read the following instructions for use carefully.
Use the product only as described and only for the given areas of application. Store these instructions for use carefully. When passing the product on to third parties, please also hand over all accompanying documents.

Scope of delivery FS-15575

- 1 x air pressure pump
- 1 x attachment
- 1 x rocket
- 1 x glider
- 1 x instructions for use

- FS-15576**
- 1 x fuselage
- 1 x wing
- 1 x rudder
- 1 x launch pistol
- 1 x instructions for use

- FS-15577**
- 1 x glider
- 1 x rubber catapult (3-part)
- 1 x instructions for use

Technical data

Date of manufacture (month/year): 11/2024

CE Delta-Sport Handelskontor GmbH hereby declares that this product complies with the essential requirements and the other relevant provisions. UK Conformity Assessed
UK CA Delta-Sport Handelskontor GmbH hereby declares that this product complies with the essential requirements and the other relevant provisions.

Intended use

This product is a toy for private use and for children aged 5 years and above.

Notes on the guarantee and service handling

The product was produced with great care and under continuous quality control. DELTA-SPORT HANDELSKONTOR GmbH gives private end customers a three-year guarantee on this product from the date of purchase (guarantee period) in accordance with the following provisions. The guarantee is only valid for material and manufacturing defects. The guarantee does not cover parts subject to normal wear and tear that are thus considered wear parts (e.g. batteries) or fragile parts such as switches, rechargeable batteries, or parts made of glass. Claims under this guarantee are excluded if the product has been used incorrectly, improperly, or contrary to the intended purpose, or if the provisions in the instructions for use were not observed, unless the end customer proves that a material or manufacturing defect exists that was not caused by one of the aforementioned circumstances. Claims under the guarantee can only be made within the guarantee period by presenting the original sales receipt. Please therefore keep the original sales receipt. The guarantee period is not extended by any repairs carried out under the guarantee, under statutory guarantees, or as a gesture of goodwill. This also applies to replaced and repaired parts. If you wish to make a claim please first contact the service hotline mentioned below or contact us by e-mail. If there is a guarantee case, then the product will be repaired or replaced free of charge to you or the purchase price will be refunded, depending on our choice. Your legal rights, in particular guarantee claims against the respective seller, are not limited by this guarantee.

IAN: 466911_2404

GB Service Great Britain
Tel.: 0800 404 7657
E-Mail: deltasport@lidl.co.uk

Srdečně blahopřejeme!
Svým nákupem jste se rozhodli pro kvalitní výrobek. Před prvním použitím se prosím seznámte s tímto výrobkem.
Pozorně si přečtete následující návod k použití.
Používejte tento výrobek pouze tak, jak je popsáno, a pro uvedené účely. Uchovávejte si tento návod k použití pro budoucí použití. Pokud výrobek předáte třetí osobě, předejte jí i veškerou dokumentaci.

Rozsah dodávky FS-15575

- 1 x tlaková pumpička
- 1 x nástavec
- 1 x raketa
- 1 x kluzák
- 1 x návod k použití

- FS-15576**
- 1 x trup
- 1 x křídlo
- 1 x kormidlo
- 1X odpalovací pistole
- 1 x návod k použití

- FS-15577**
- 1 x kluzák
- 1 x katapult s gumičkou (3dílná)
- 1 x návod k použití

Technická data

Datum výroby (měsíc/rok): 11/2024

CE Společnost Delta-Sport Handelskontor GmbH tímto prohlašuje, že tento výrobek splňuje základní požadavky a další příslušná ustanovení.

Použití ke stanovenému účelu

Tento výrobek je hračka pro děti od 5 let pro privátní potřebu.

Safety instructions

- Warning. Not suitable for children under 36 months. Choking hazard. Small parts.
- Warning. Do not aim at eyes or face.
- Use of this product requires care and practice.
- Children may only play with the product under adult supervision.
- Never let the product fly in nature reserves, scenic areas, bird sanctuaries, above roads or wherever flying is expressly prohibited!
- Never let the product fly in the vicinity of overhead power lines!
- Never let the product fly in the vicinity of trees!
- Let it fly only in open areas, at sufficient distance from people and animals!
- Do not attach any additional loads to the product!
- When landing on hard surfaces such as asphalt, pavement, stone or the like, the material may become worn by abrasion.
- Warning. The packaging and mounting materials are not a constituent part of the toy and they must be removed in all cases for safety reasons before the product is given to children to play with.
- Check the product for damage and wear before each use. The product may only be used in good order and condition!

FS-15575

Assembly (fig. A)

Put the attachment on the air pressure pump, as shown in fig. A. Then place either the rocket or the glider on the attachment.

Use (fig. B)

- Pull back the rear section of the air pressure pump.
Note: Pull the rear section of the air pressure pump back but not too far. It might damage the material.
- In one quick and forceful move press the rear part of the air pressure pump forwards to launch the rocket or glider.

Bezpečnostní pokyny

- Upozornění. Nevhodné pro děti mladší 36 měsíců. Nebezpečí zalknutí. Malé části.
- Upozornění. Nemířte na oči nebo na obličej.
- Zacházení s tímto výrobkem vyžaduje obezřetnost a cvik.
- Děti si smí s výrobkem hrát pouze pod dohledem dospělých.
- Výrobek nikdy nevypouštějte v přírodních rezervacích, chráněných krajinných oblastech a v ptačích rezervacích, nad silnicemi nebo tam, kde je létání výslovně zakázáno!
- Výrobek nikdy nevypouštějte v blízkosti volných elektrických vedení!
- Výrobek nikdy nevypouštějte v blízkosti stromů!
- Vypouštějte pouze na volných plochách, s dostatečným odstupem od osob a zvířat!
- Na výrobek neupevňujte žádné přídatné zátěže!
- Při přistávání na tvrdých podkladech jako asfaltu, dlažbě, kamenité půdě nebo podobných může dojít k opotřebením materiálu působením drhnutí.
- Upozornění. Veškeré obalové a upevňovací materiály nejsou součástí hračky a z bezpečnostních důvodů musí být vždy odstraněny před tím, než je výrobek předán dětem na hraní.
- Ověřte před každým použitím, zda výrobek není poškozen nebo opotřeben. Výrobek smí být používán pouze v bezvadném stavu!

FS-15575

Montáž (obr. A)

Nasaďte nástavec tak, jak znázorňuje obrázek A, na tlakovou pumpičku. Následně nasaďte na nástavec buď raketu nebo kluzák.

Používání (obr. B)

- Vytáhněte zadní část tlakové pumpičky dozadu.
- Upozornění:** Nevytahujte zadní část tlakové pumpičky příliš daleko. Mohlo by dojít k poškození materiálu.
- K vystřelení rakety, případně kluzáku zatlačte zadní část tlakové pumpičky dopředu rychlým a silným pohybem.

06.13.2024 / AM 10:21

GB

GB

CZ

CZ

