

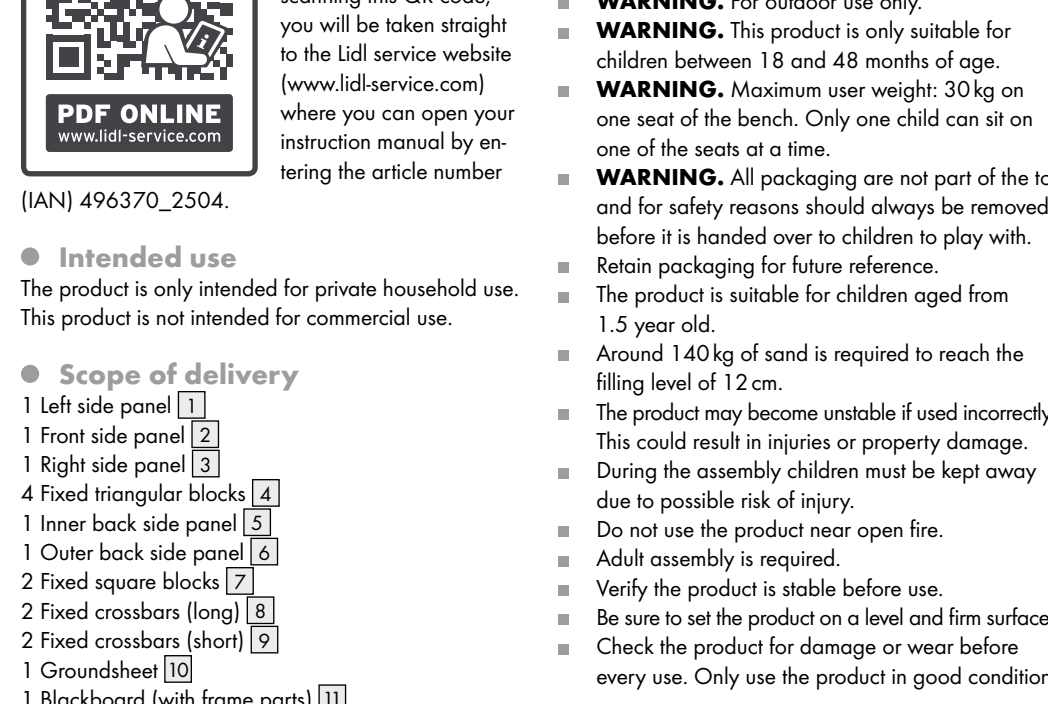
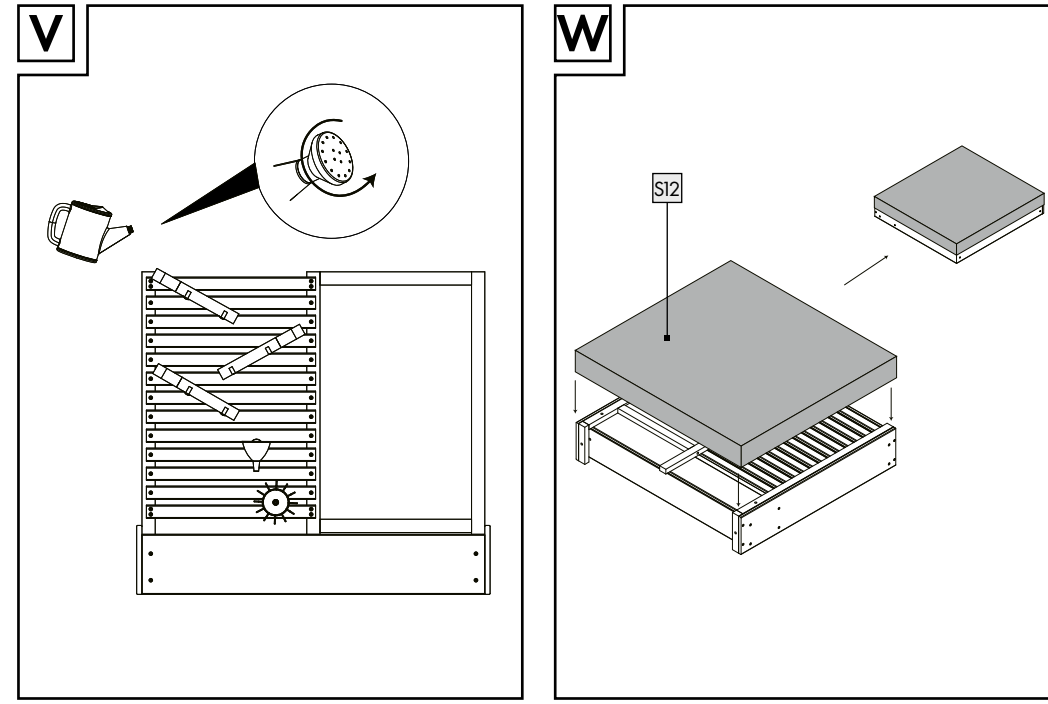
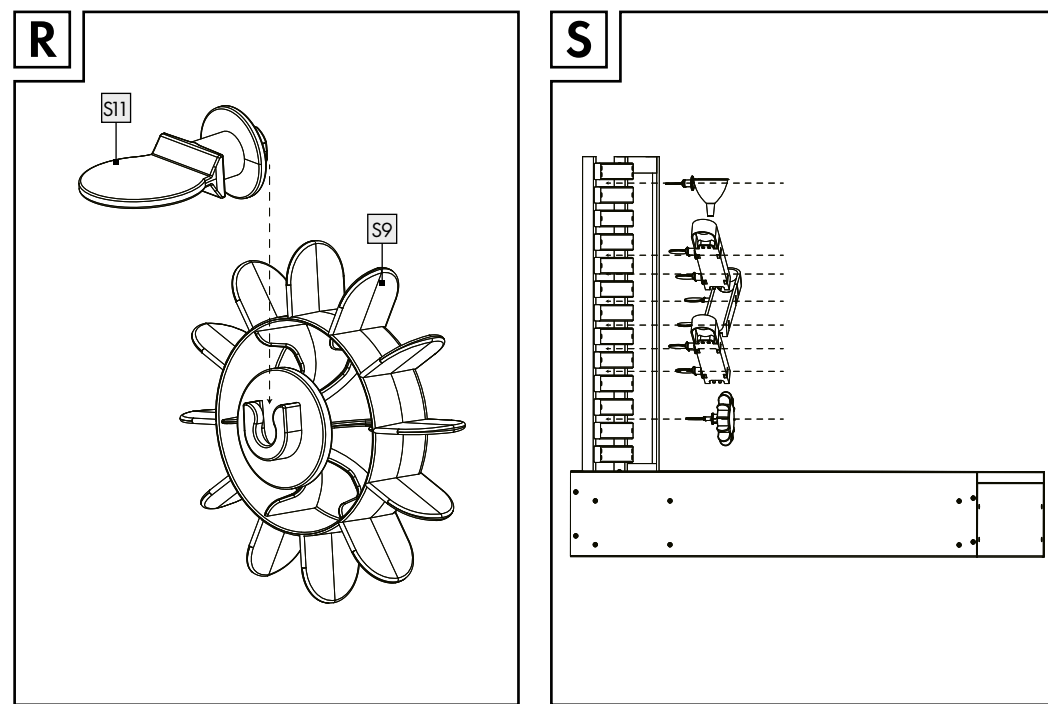
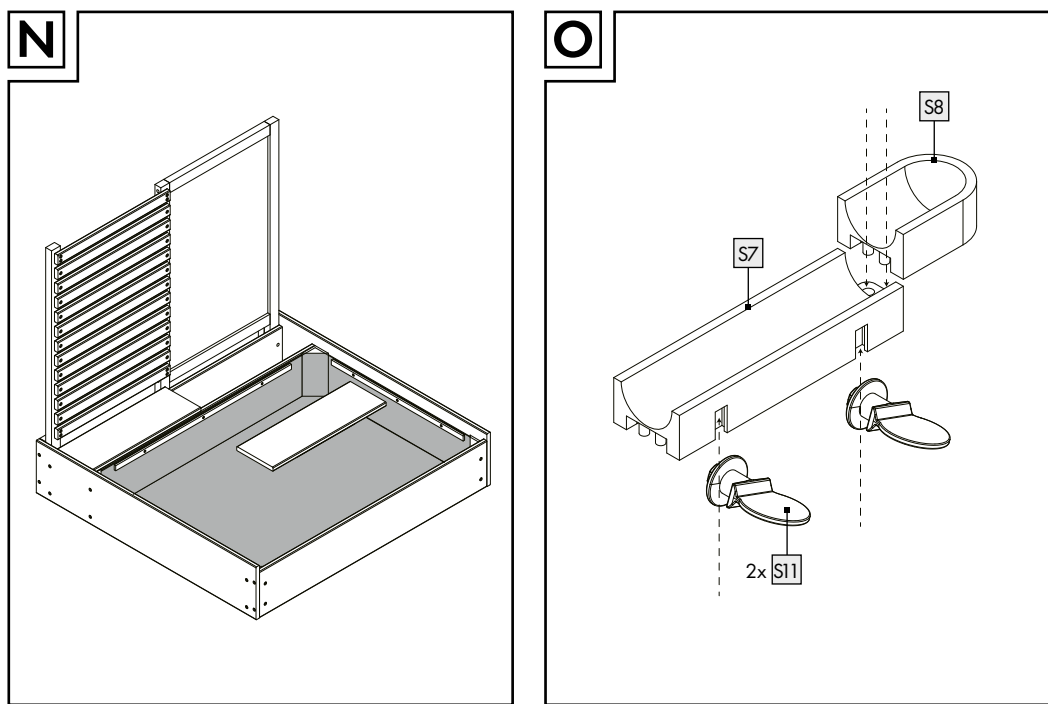
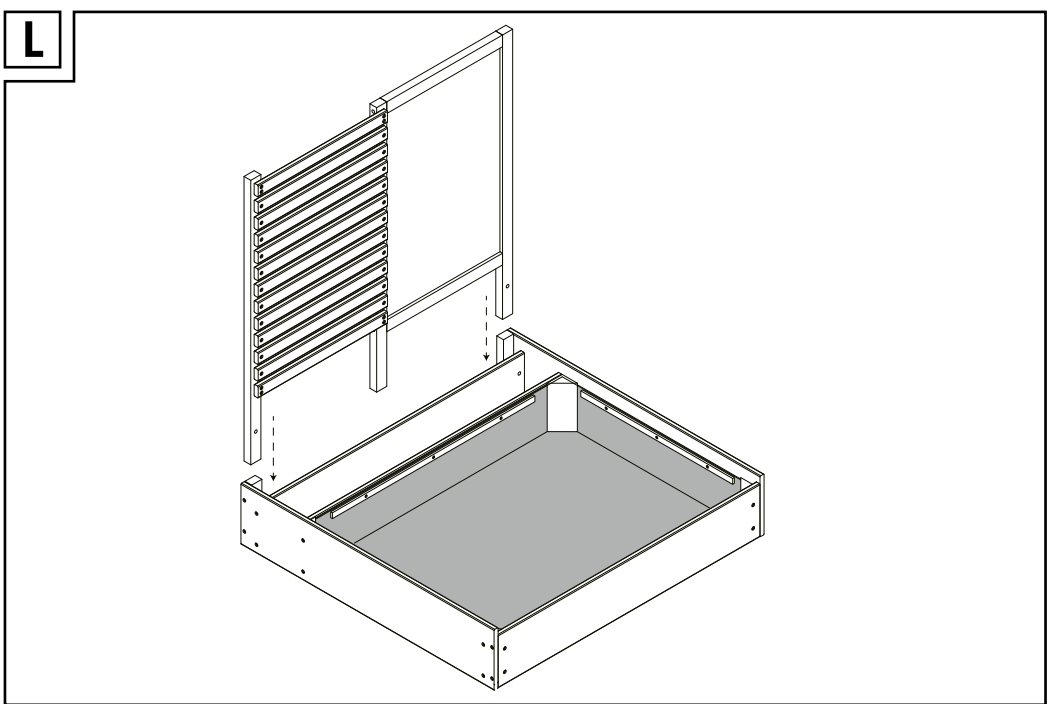
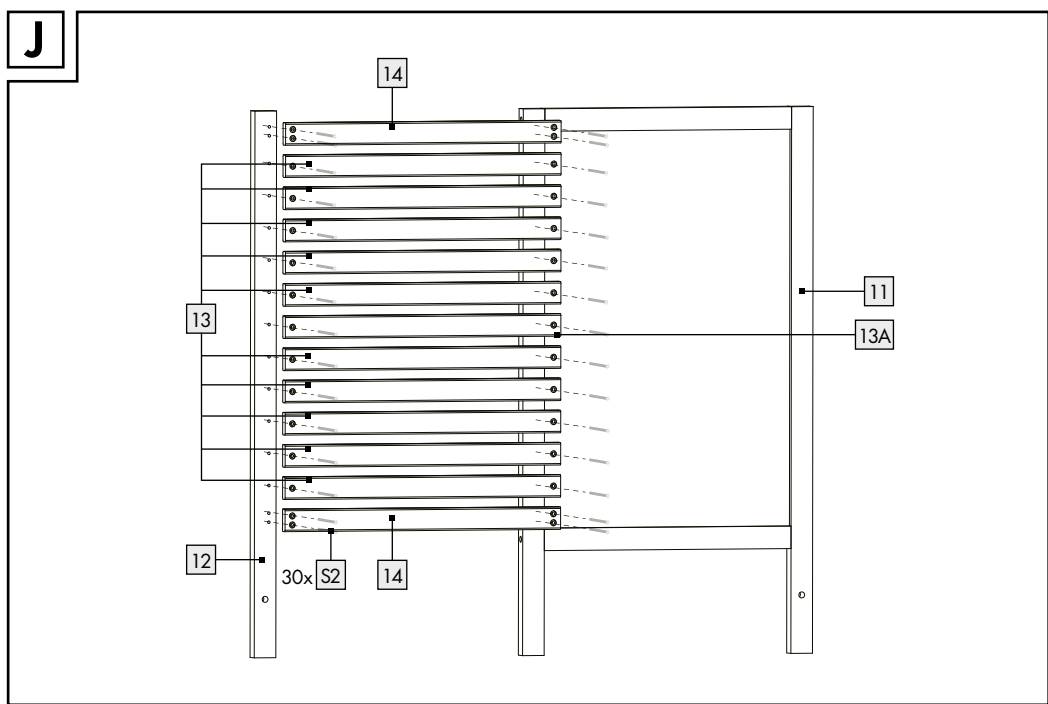
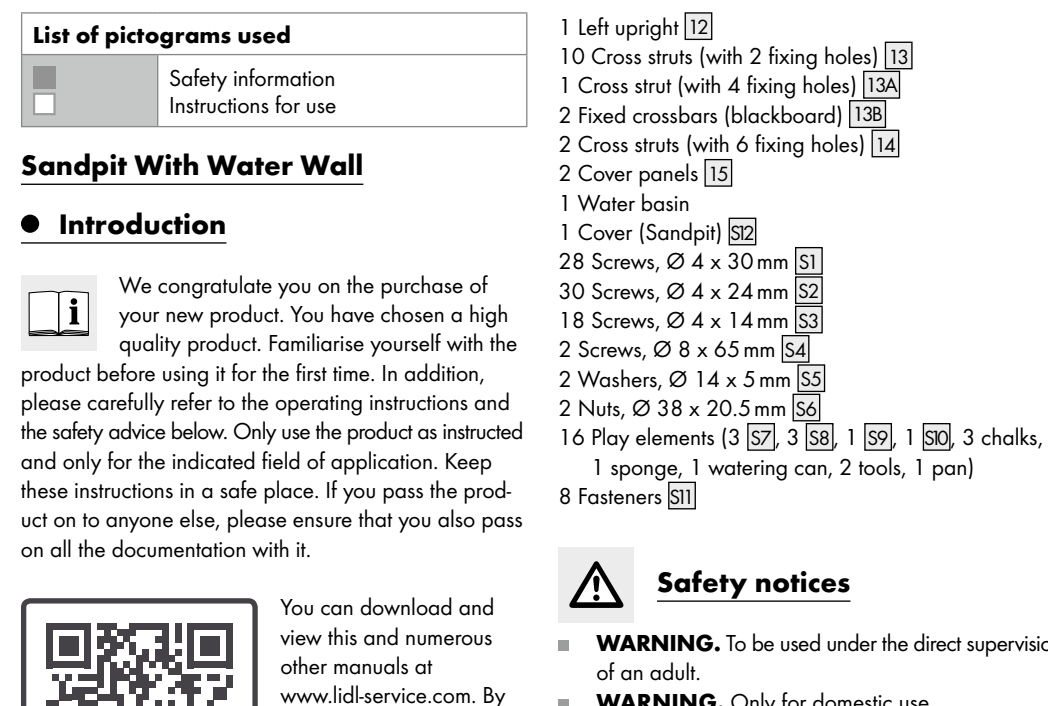
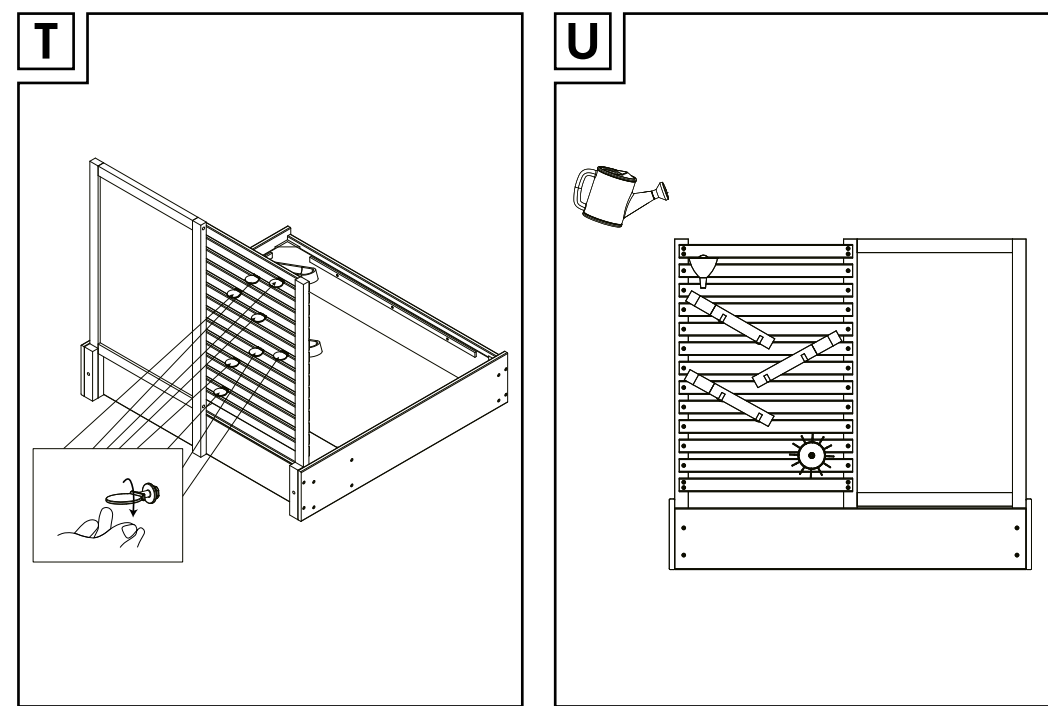
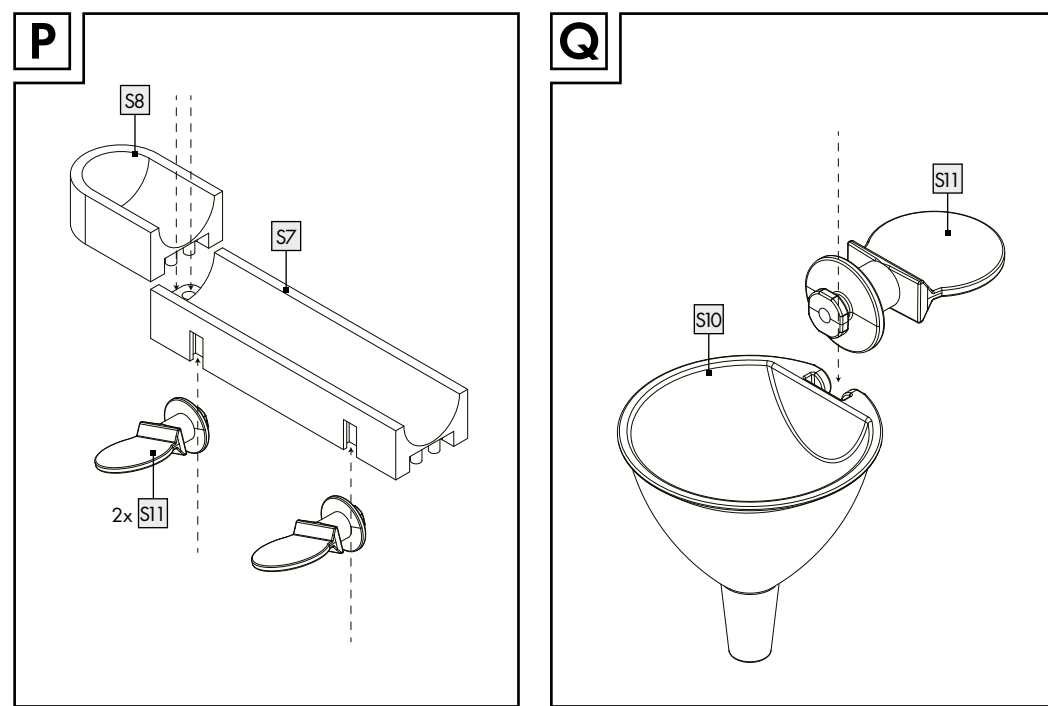
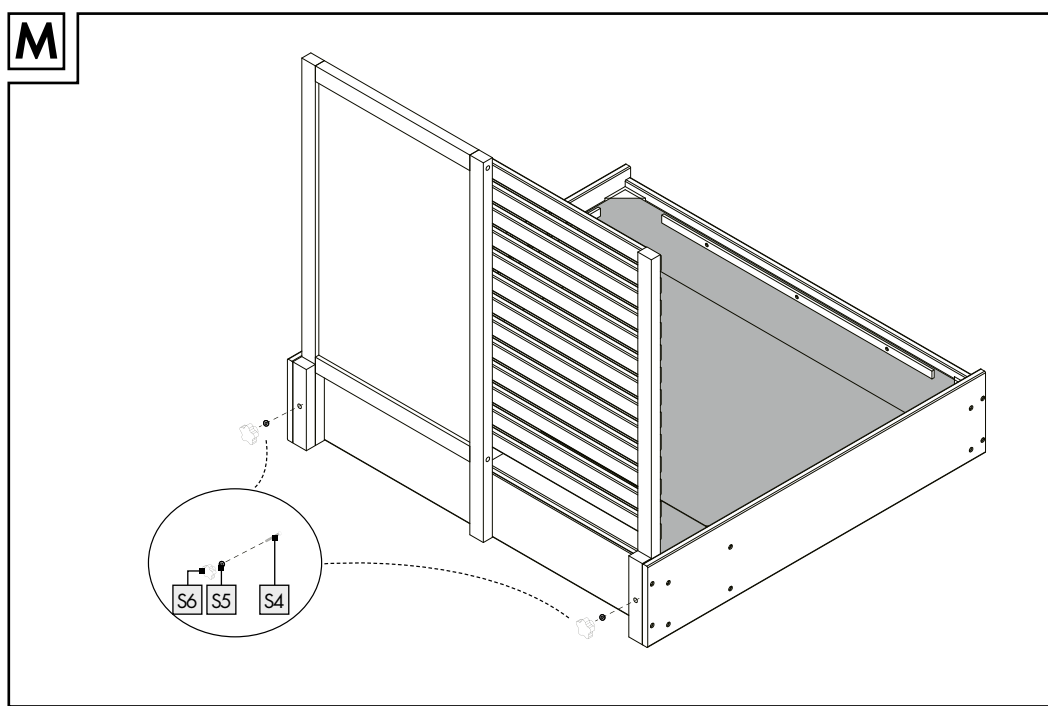
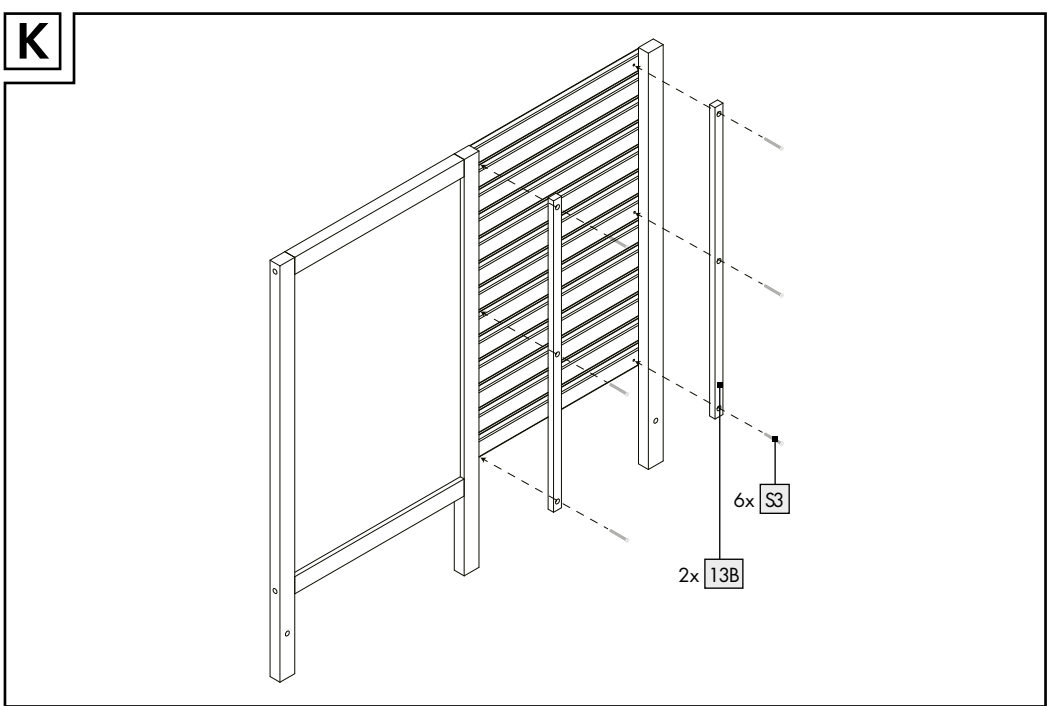
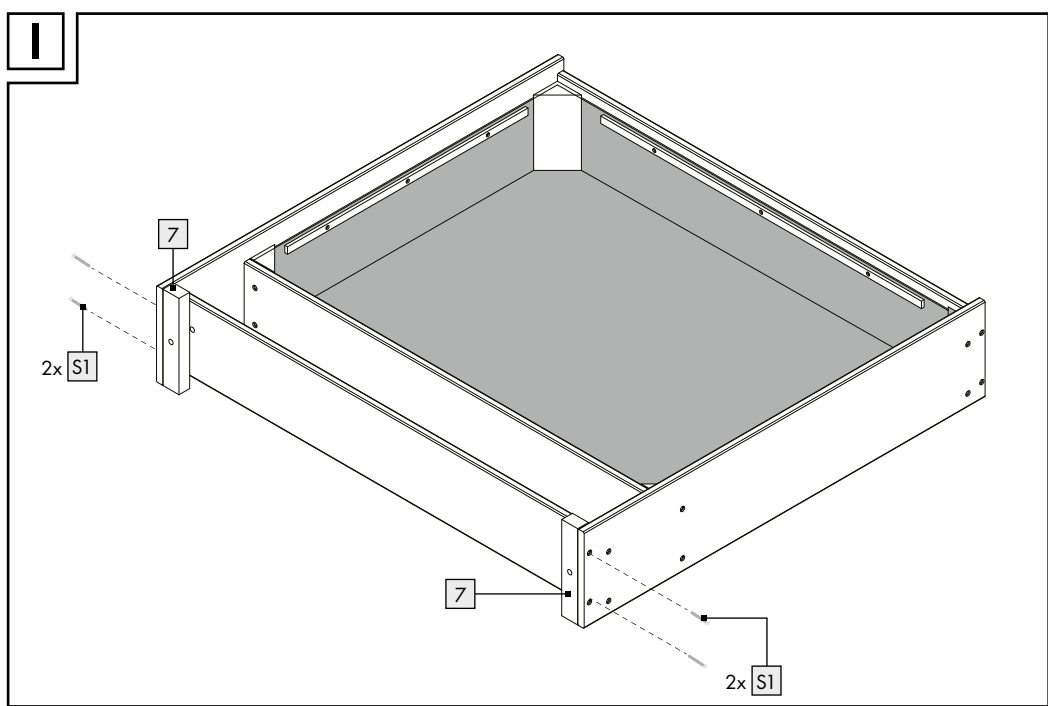
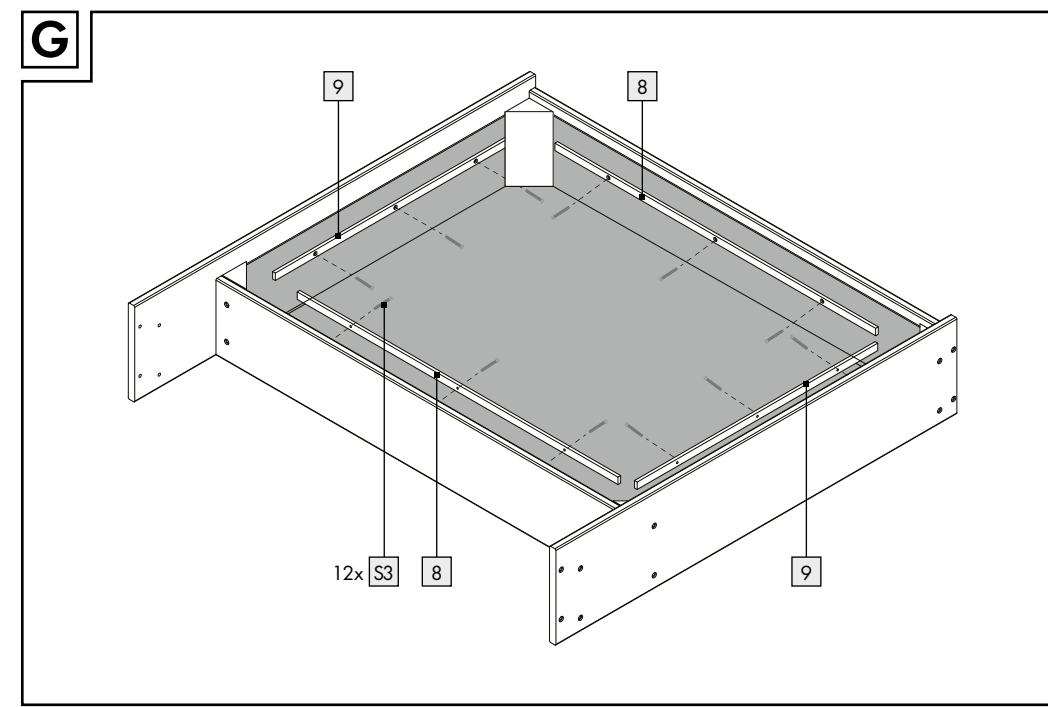
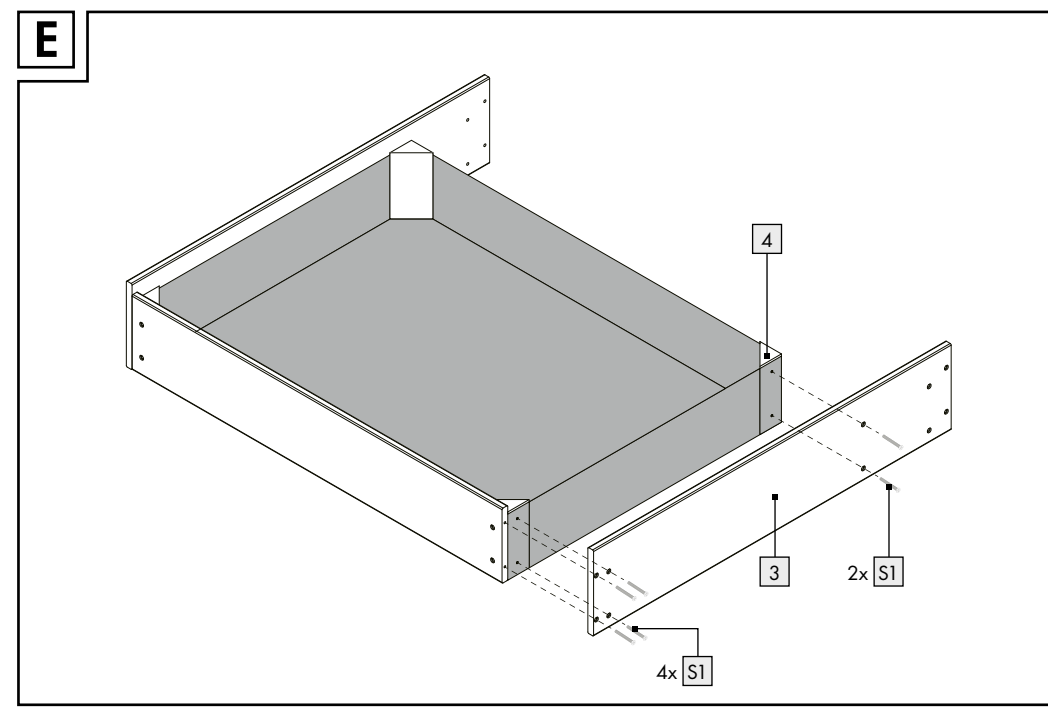
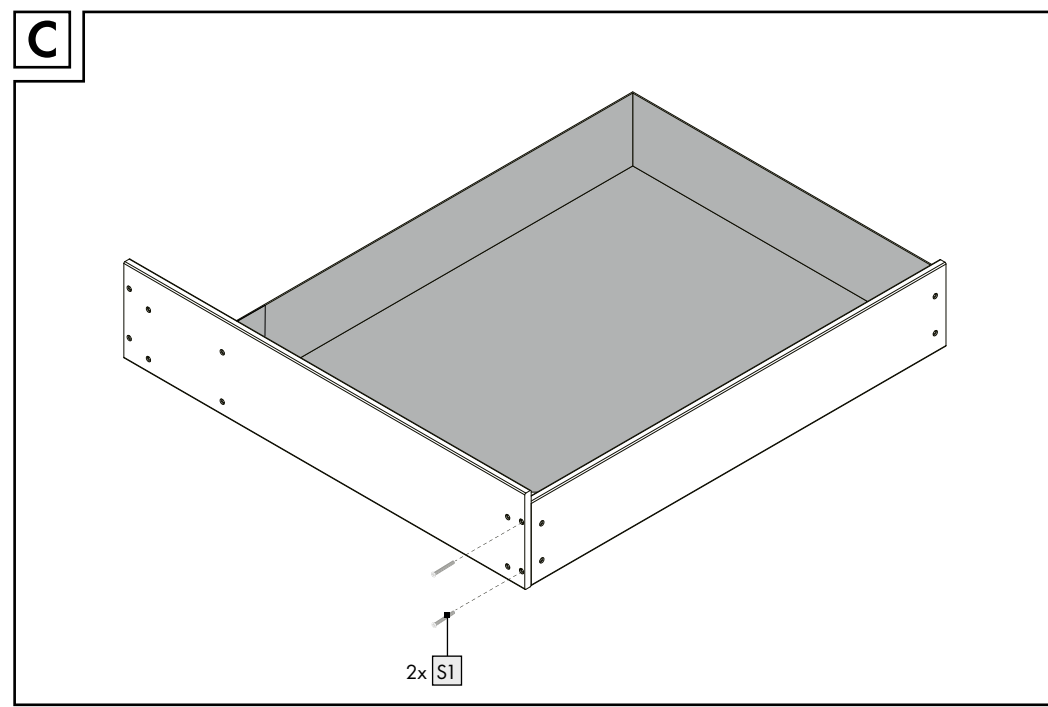


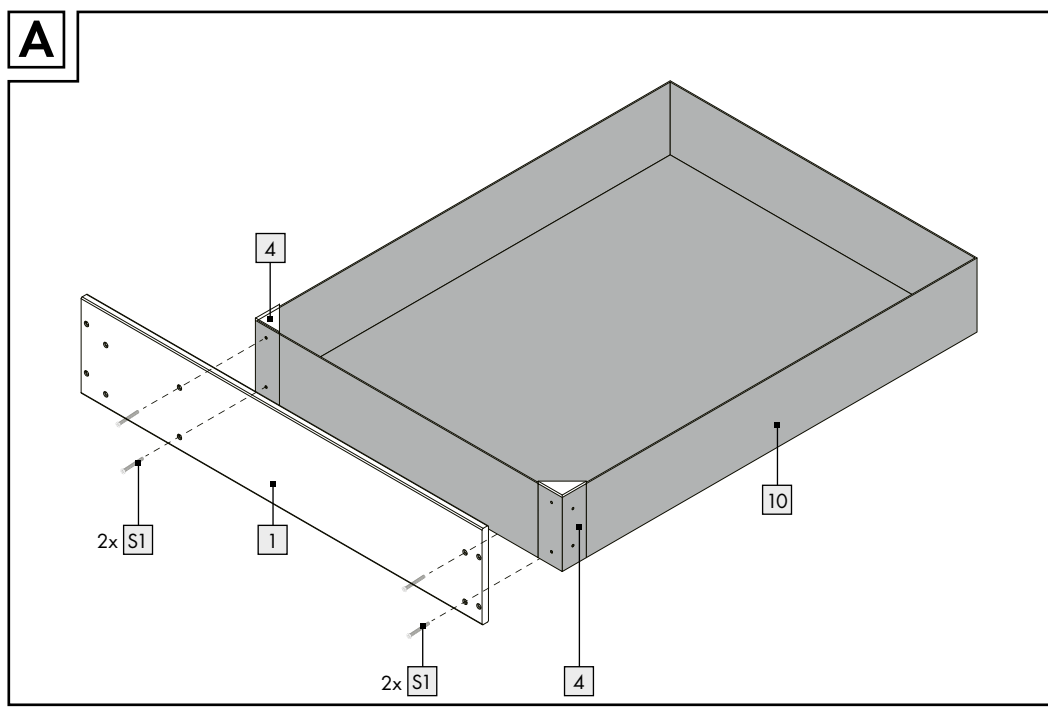

SANDPIT WITH WATER WALL

- SANDPIT WITH WATER WALL**
Assembly instructions and safety notes
- SANDLÅDA MED VATTENVÄGG**
Monterings- og sikkerhedsanvisninger
- PIASKOWNICA Z WODNĄ ŚCIANKĄ DO ZABAWY**
Wskazówki dotyczące montażu oraz bezpieczeństwa
- LIIVAKAST VESIMÄNGUSEINAGA**
Montaazsi ja ohutusjuhised
- HIIEKKALAATIKKO JA VESILEIKKISEINÄ**
Asennus- ja turvallisuusohjeet
- SANDKASSE MED VANDLEGETØJ**
Monterings- og sikkerhedsanvisninger
- SMÉLIO DŽÉ SU VANDENS ŽAIDIMŲ SIENELE**
Surinkimo ir saugos nurodymai
- SMILŠŲ KASTE AR ŪDENS ROTAULI SIENU**
Montažs un drošības norādījumi

IAN 496370_2504

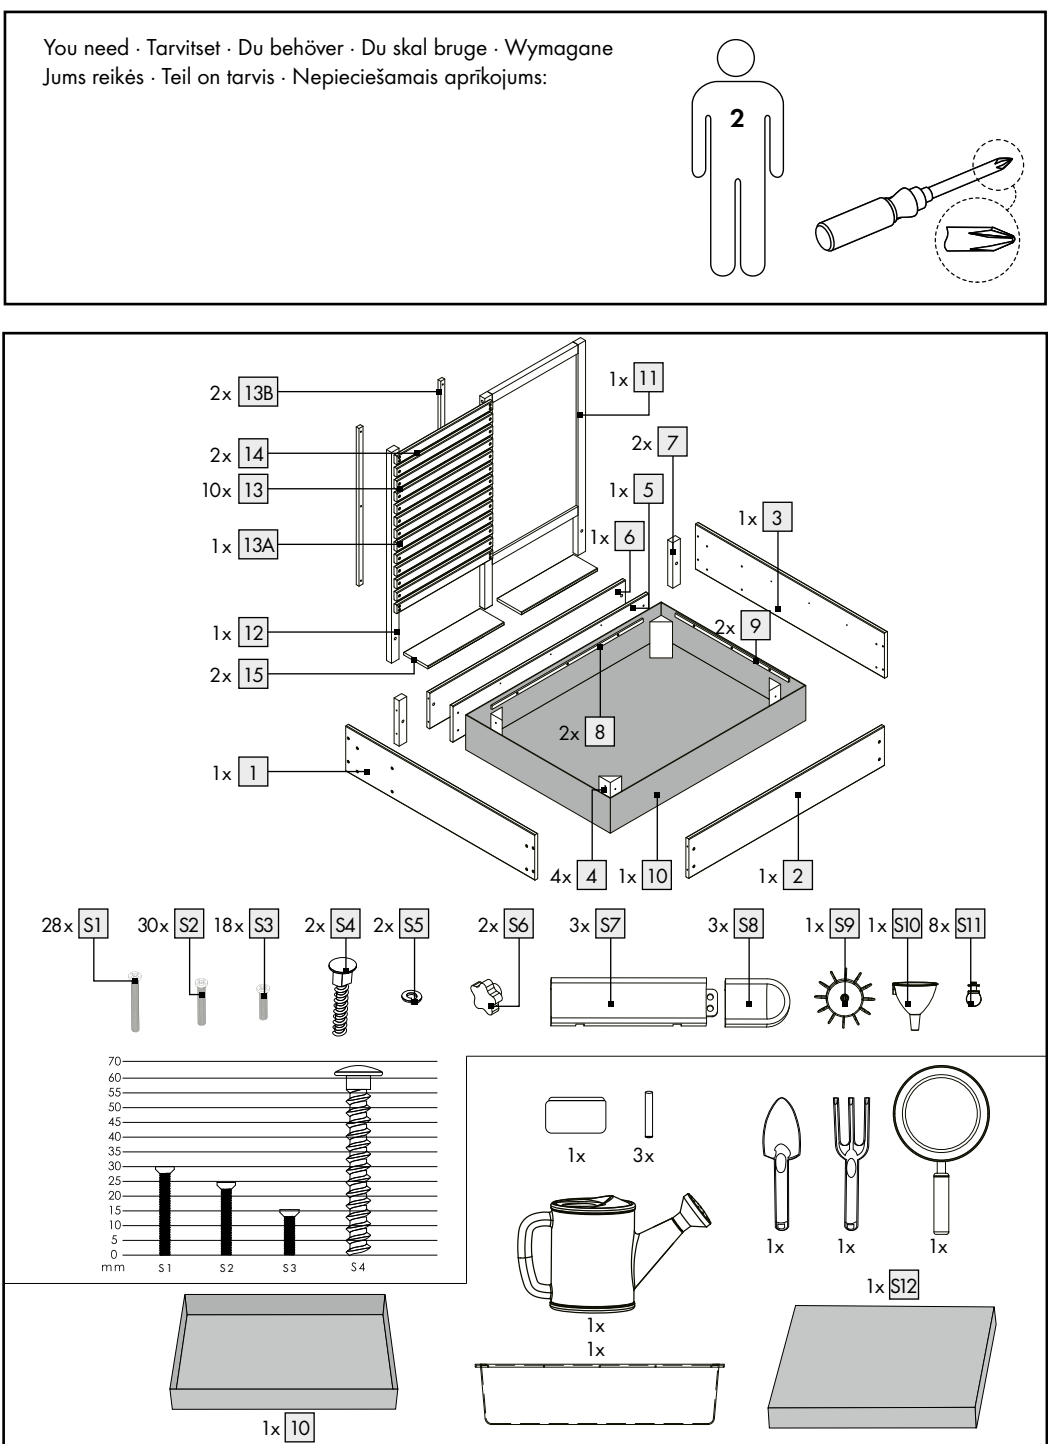

- Do not use the product if damage is visible or suspected.
- Risk of property damage!**
 - We are not liable for accidents resulting from failure to comply with the above safety instructions or improper handling.
 - The activity toy shall be placed on a level surface at least 2m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
 - The toy shall not be installed over concrete, asphalt or any other hard surface.
 - Do not modify the product.
 - Check all nuts and bolts for tightness and tighten when required.
 - Replace defective parts in accordance with the manufacturer's instructions.
 - Before storing, empty the water completely and allow the product to dry.
- Care and storage**
 - Do not use harsh or aggressive cleaning agents.
 - Clean the product only with a soft, dry cloth.
 - Always store the product clean and dry and at room temperature after use.
 - To help extend the life of this product it will need covering or sheltering during heavy rain and strong sunlight. For this purpose, use the cover [82] (see fig. VI).
 - Secure the product in extreme weather, e.g. strong wind. Store the product in protected areas.
- Disposal**
 - The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities, when required.
 - Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.
- Warranty**
 - The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of material or manufacturing defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.
 - The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Keep the original sales receipt in a safe location as this document is required as proof of purchase.
 - Any damage or defects already present at the time of purchase must be reported without delay after unpacking the product.
 - Should the product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. The warranty period is not extended as a result of a claim being granted. This also applies to replaced and repaired parts.
 - This warranty becomes void if the product has been damaged, or used or maintained improperly.
- Assembly**
 - This activity toy allows children to create individual waterfall paths.
 - With the watering can, they can try out different ways to activate the installed wheels with water so that they turn smoothly.
 - Note:** Remove the sprinkler head of the watering can when playing with the waterfall path. When using the watering can for watering, put the sprinkler head back on.
 - Figures U and V show examples of waterfall path combinations. If necessary, give your child some guidance.
- How to play**
 - This activity toy allows children to create individual waterfall paths.
 - With the watering can, they can try out different ways to activate the installed wheels with water so that they turn smoothly.
 - Note:** Remove the sprinkler head of the watering can when playing with the waterfall path. When using the watering can for watering, put the sprinkler head back on.
 - Figures U and V show examples of waterfall path combinations. If necessary, give your child some guidance.

The warranty covers material or manufacturing defects. This warranty does not cover product parts subject to normal wear and tear, thus considered consumables (e.g. batteries, rechargeable batteries, tubes, cartridges), nor damage to fragile parts, e.g. switches or glass parts.

Warranty claim procedure
To ensure quick processing of your case, please observe the following instructions:

Please have the till receipt and the item number (IAN 496370_2504) available as proof of purchase. You will find the item number on the rating plate, an engraving on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product. If functional or other defects occur, please contact the service department listed either by telephone or by email. You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you endorse the proof of purchase (till receipt) and information about what the defect is and when it occurred.

Service
Service Great Britain
Tel.: 0800 404 7657
E-Mail: owim@lidl.fi

Merkkien selitykset
Turvallisuusohjeet
Käyttöohjeet

Hiekkalaatikko ja vesileikkiseinä
Johdanto
Onnittelemme sinua uuden tuotteen hankinnasta. Olet valinnut korkealaatuisen tuotteen. Tutustu laitteeseen ennen ensimmäistä käyttöönottoa. Lue sitä varoen tässä käyttöohje ja turvallisuusohjeet. Käytä tuotetta vain kuvatulla tavalla ja ilmoitetulla käyttöalalla. Säilytä käyttöohje paikassa, josta löydät sen aina. Anna kaikki ohjeet mukaan, jos luovutat tuotteen edelleen.

Vai ladata ja tarkastella tätä ja lukuisia muita käyttöohjeita osoitteesta www.lidl-service.com. Skannoimalla tämän QR-koodin pääset suoraan Lidl:n palvelusivustolle (www.lidl-service.com), josta voit avata käyttöohjeesi syöttämällä tuotenumeron (IAN) 496370_2504.

Ainevahinkojen vaarat
Emme vastaa vahingoista, jotka johtuvat edellä mainittujen turvallisuusohjeiden noudattamatta jättämisestä tai virheellisestä käytöstä.
Aseta aktiiviteettilelu tasaiselle pinnalle vähintään 2 metrin etäisyydelle kaikista rakenteista ja esteistä, kuten aidoista, autotaleista, taloista, rakkuista oksista, pyykkinaruista tai sähköjohtoista.
Tuotetta ei saa asettaa betoni-, asfaltti- tai muille kovalle pinnalle.
Tuotteeseen ei saa tehdä muutoksia!
Tarkista kaikkien muttereiden ja ruuvien tukeva kiinnitys ja kiristä ne tarvittaessa.
Tarkista kaikki suojakäsit ja ruuvit terävien reunojen varalta ja vaihda ne tarvittaessa uusiin.
Vaihda vialliset osat uusiin valmistajan ohjeiden mukaisesti.
Tyhjennä vesi ennen säilytystään laittaa ja anna tuotteen kuivua.

Asennus
Älä kiristä liit ruuveja asennuksen aikana. Kiristä kaikki ruuvit vasta sitten, kun yksittäiset osat on asennettu paikoilleen.
Asennuksen saa suorittaa vain aikuinen henkilö.
Tarkista ennen tuotteen käyttöönottoa, että se on riittävän tukeva.
Aseta tuote tasaiselle ja tukevalle alustalle.
Tarkista tuote aina ennen käyttöä, että siinä ei ole vaurioita tai kulumia. Käytä tuotetta vain moitteettomassa kunnossa.
Älä käytä tuotetta, jos siinä on näkyviä tai olettamia vaurioita.

Leikkimisohje
Aktiiviteettilelun lapset voivat tehdä yksilöllisiä vesiputouksia.
Kästelukkunalla he voivat kaataa vettä ja aktivoida näin kiinnitetyn ratiaan niin, että se pyörii tasaisesti.
Huomautus: Irrota kastelukannun silti vesiputousradalla liikkeestä. Kun kastelukannu käytetään veden kaatamiseen, kiinnäytä silti jälleen paikalleen.
Kuvassa U ja V näytetään esimerkkejä vesiputouksista. Tarvittaessa neuvo lasta hieman käytössä.

Hoito ja säilytys
Älä käytä vaimakkaita puhdistusaineita.
Puhdista tuote vain pehmeällä, kuivalla liinalla.

Tuotteen käyttö
Säilytä tuotetta käytön jälkeen aina puhtaana ja kuivana huoneenlämpöisessä paikassa.
Tuotteen käyttöä pidetään pidettäväksi se on peitettyä tai suojattava rankkasateella ja voimakkaassa auringonpaisteesta. Käytä näissä tilanteissa suojata [82] (kuva W).
Varmista tuotteen kiinnitys äärimmäisissä sääolosuhteissa, kuten kovalla tuulella. Säilytä tuotetta suojatuissa tiloissa.

Häivittäminen
Pakkaus on valmistettu ympäristöystävällisistä materiaaleista, jotka voidaan viedä paikalliseen kierrätyspisteeseen.
Jos havaitset tuotteessa toimintahäiriöitä tai muita vikoja, ota ensin yhteyttä puhelimella tai sähköpostilla alla mainittuun huoltopalveluun.
Sen jälkeen voit lähettää tuotteen maksutta huoltopalveluun osoitteeseen. Laita tuotteen mukaan otokuitti ja selvitä havaitusta viasta ja sen havaitsemisajankohdasta.

Huoltopalvelu
Huoltopalvelu Suomi
Puhelin: 09 42453024
E-Mail: owim@lidl.fi

Teckenförklaring till använda piktogram
Säkerhetsinformation
Instruktioner

Sandlåda med vattenvägg
Inledning
Grattis till köpet av din nya produkt. Du har valt en produkt av hög kvalitet. Gör dig beaktat med produkten innan du använder den. Läs följande bruksanvisning och säkerhetsinformation. Använd endast ändamål. Förvara denna handledning på en säker plats. Överlämna denna bruksanvisningen om du överlåter produkten till en tredje part.

Ändamålsenlig användning
Produkten är endast avsedd för användning i privata hushåll. Produkten är ej avsedd för yrkesmässig användning.

Leveransomfattning
1 vänster sidovägg [1]
1 främre sidovägg [2]
1 höger sidovägg [3]
4 fasta rektangulära [4]
1 yttre bakskiva [5]
2 fasta fyrkantiga [6]
2 fasta tvärlängor (läng) [7]
2 fasta tvärlängor (kort) [8]
1 markpressning [9]
1 tvärlänga (med ramdelar) [10]

