

PDF ONLINE
www.lidl-service.com






DOLL PRAM

GB
DOLL PRAM
Assembly and safety instructions

SK
KOČÍK PRE BÁBIKU
Montážne a bezpečnostné pokyny

CZ
KOČÁREK PRO PANENKU
Pokyny k montáži a bezpečnost

DE AT CH
PUPPENWAGEN
Montage- und Sicherheitshinweise

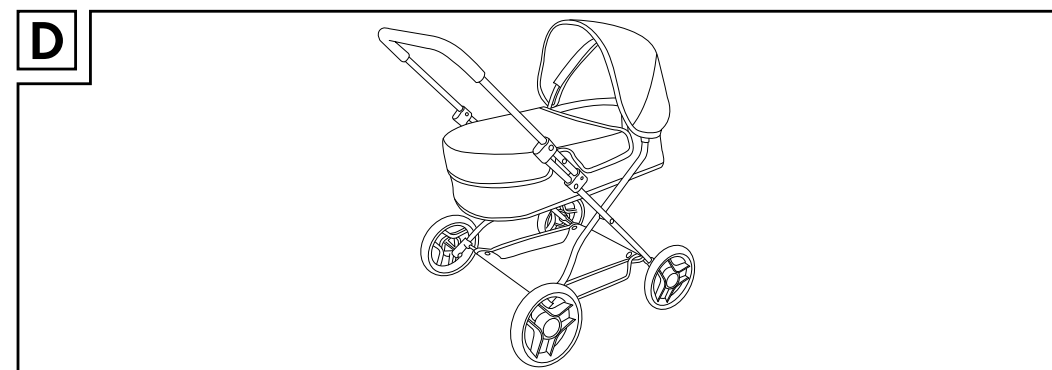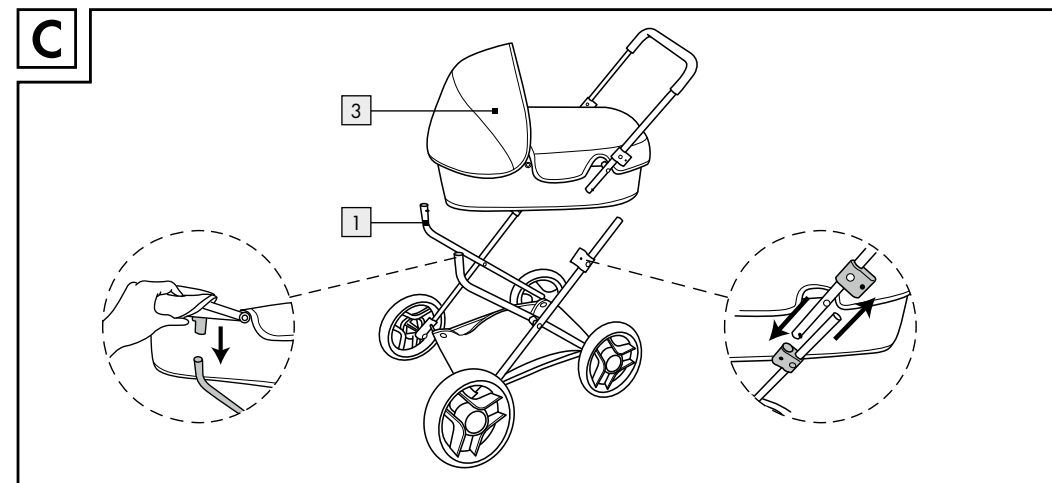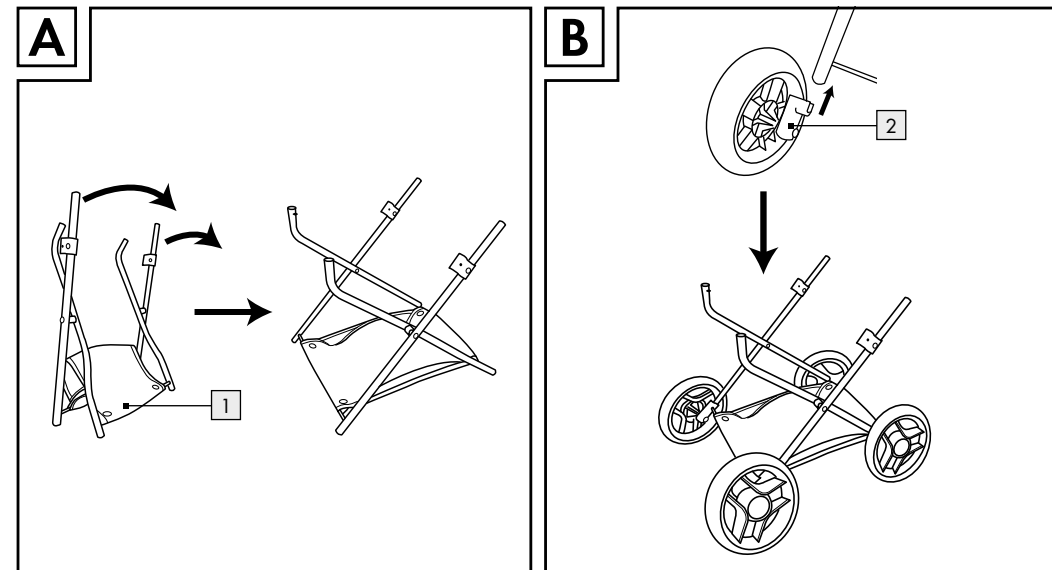

List of pictograms used	
	Safety information
	Instructions for use
	CE mark indicates conformity with relevant EU directives applicable for this product.

Doll Pram

● Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. Familiarise yourself with the product before using it for the first time. In addition, please carefully refer to the operating instructions and the safety advice below. Only use the product as instructed and only for the indicated field of application. Keep these instructions in a safe place. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

● Intended use

The product is only intended for private household use. This product is not intended for commercial use.

● Scope of delivery

- 1 frame with integrated shopping shelf (foldable)
- 4 wheels
- 1 basket with handle
- 1 bag
- 1 assembly and safety instructions

Safety notices

- **WARNING.** To be used under the direct supervision of an adult.
- **WARNING.** Only for domestic use.
- **WARNING.** Not suitable for children under 36 months. Small parts. Choking hazard.
- **WARNING.** Must be assembled/disassembled by an adult to prevent the product from collapsing.

- There is a risk of injury from crushing on the frame.
- **WARNING.** All packaging are not part of the toy and for safety reasons should always be removed before it is handed over to children to play with.
- Retain packaging for future reference.
- The product is suitable for children aged from 3 years old.
- This product is a toy.
- **WARNING.** This product is not suitable for transporting babies, children or pets.
- Do not use the product near open fire.
- Check the product for damage or wear before every use. Only use the product in good condition.
- Do not use the product if damage is visible or suspected.

● Assembly

Note: Remove all packaging materials from the product.

- Follow the steps shown in figures A-D for the assemble of the product.

● Care and storage

- Do not use harsh or aggressive cleaning agents.
- Clean the product only with a soft, dry cloth.
- Always store the product clean and dry and at room temperature after use.

● Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.

Contact your local refuse disposal authority for more details of how to dispose of your worn-out product.

● Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of product defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Please keep the original sales receipt in a safe location. This document is required as your proof of purchase.

Should this product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty applies to defects in material or manufacture. This warranty does not cover product parts subject to normal wear, thus possibly considered consumables (e.g. batteries) or for damage to fragile parts, e.g. switches, rechargeable batteries or glass parts.

● Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions:

Please have the till receipt and the item number (IAN 403713_2201) available as proof of purchase. You will find the item number on the rating plate, an engraving on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product.

If functional or other defects occur, please contact the service department listed either by telephone or by e-mail. You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

● Service

GB **Service Great Britain**
Tel.: 08000569216
E-Mail: owim@lidl.co.uk

Legenda použitých piktogramů	
	Bezpečnostní upozornění
	Instrukce
	Značka CE vyjadřuje soulad s příslušnými směrniciemi EU, které se vztahují na tento výrobek.

Kočárek pro panenku

● Úvod

Blahopřejeme Vám ke koupi nového výrobku. Rozhodli jste se pro kvalitní výrobek. Před prvním uvedením do provozu se seznámte s výrobkem. K tomu si pozorně přečtěte následující návod k obsluze a bezpečnostní pokyny. Používejte výrobek jen popsáním způsobem a pouze pro uvedené oblasti použití. Uchovejte si tento návod na bezpečném místě. Všechny podklady vydejte při předání výrobku i třetí osobě.

● Použití ke stanovenému účelu

Tento výrobek je určený jen pro používání v domácnostech. Výrobek není určen k výdělečné činnosti.

● Obsah dodávky

- 1 rám s integrovanou odkládací plochou na nákupy (skládací)
- 4 kolečka
- 1 koš s madlem
- 1 taška
- 1 návod k montáži

Bezpečnostní upozornění

- **POZOR.** Používání pod bezprostředním dohledem dospělých.
- **POZOR.** Pouze k domácímu použití.
- **POZOR.** Nevhodné pro děti do 36 měsíců. Malé díly. Nebezpečí udušení.

- **POZOR.** Sestavení a rozebrání výrobku je dovoleno dospělé osobě, aby nedošlo k náhlému složení výrobku.
- **POZOR.** Veškeré obalové a upevňovací materiály nejsou součástí hračky a musíte je z bezpečnostních důvodů odstranit ještě dříve než předáte výrobek dětem na hraní.
- Obal uschovat pro případné pozdější dotazy!
- Výrobek je vhodný pro děti od 3 let.
- Tento výrobek je hračka.
- **POZOR.** Výrobek není určen k přepravě kojenců, dětí nebo domácích zvířat.
- Nepoužívejte výrobek v blízkosti otevřeného ohně.
- Kontrolujte výrobek před každým použitím, jestli není poškozený nebo opotřebovaný. Používejte pouze výrobek v bezvadném stavu.
- Nepoužívejte výrobek s viditelným poškozením, nebo pokud se domníváte, že má vady.

● Montáž

Upozornění: Odstraňte všechny obalové materiály z výrobku.

- Dodržujte při montáži výrobku postup uvedený na obrázcích A až D.

● Ošetřování a skladování

- Nepoužívejte žádné ostré nebo agresivní čisticí prostředky.
- Výrobek čistěte pouze měkkou suchou utěrkou.
- Po použití skladujte výrobek vždy v suchu a při pokojové teplotě.

● Zlikvidování

Obal se skládá z ekologických materiálů, které můžete zlikvidovat prostřednictvím místních sběrů recyklovatelných materiálů.

O možnostech likvidace vysloužilých zařízení se informujte u správy vaší obce nebo města.

