LIVARNO home

PDF ONLINE www.lidl-service.com

LED SOLAR LIGHT / LED SOLAR LIGHTS

LED-SOLARSLEUCHTE / LED-SOLARLEUCHTEN

LAMPE SOLAIRE À LED / LAMPES SOLAIRES À LED

LED SOLAR LIGHT / LED SOLAR LIGHTS

Operation and safety notes

1. Introduction

Congratulations!

With your purchase you have chosen a high-quality product. The operation and safety notes are an integral part of this product. They contain important information for safety, use and disposal. Familiarise yourself with all of the operation and safety notes before using the product. Use the product only as described and for the specific areas of application. Keep the operation and safety notes for future reference. Provide all of the documentation when passing the product on to third parties.

Hereinafter, the LED Solar Light / LED Solar Lights will be referred to as product or lamp.

Explanation of symbols

The following symbols and signal words are used in these operation and safety notes, on the product or on the packaging.

⚠ WARNING!

This signal symbol/word indicates a hazard with a high level of risk which, if not avoided, may result in death or serious injury.

⚠ CAUTION!

This signal symbol/word indicates a hazard with a low level of risk which, if not avoided, may result in minor or moderate injury.

NOTE!

This signal word warns of possible property damage or provides you with useful additional information regarding the use.

This symbol indicates additional information.

This symbol indicates that batteries are included in the scope of delivery.

This symbol indicates protection category IP67 (dustproof and protected against temporary immersion).

This symbol indicates direct current.

This symbol informs you about the duration of the light when fully charged.

This symbol indicates protection class III. SELV: safety extra-low voltage.

These symbols inform you about the disposal of the packaging and the product.

Conformity declaration (see chapter „9. Conformity declaration"): Products that are marked with this symbol fulfil all applicable Community regulations of the European Economic Area.

2. Safety

Intended use

The product is not intended for commercial use. Different use or a modification to the product are not deemed as intended use and may lead to risks, such as injuries and damage. The distributor assumes no liability for damage that results from improper use.

⚠ WARNING!

Risk of injury!

Do not use in an explosive environment! There is a risk of injury!

- The product is not allowed to be used in an explosive (Ex) environment. The product is not approved for an environment, in which flammable liquids, gases or dust are present.

⚠ CAUTION!

Risk of injury!

A defective product is not allowed to be used! There is a risk of injury!

- Do not use the product in the case of malfunctions, damage or defects.
- Significant danger can occur for the user in the case of improper repairs. If you find a defect in the product, have the product checked and repaired if necessary before putting it back into operation.
- The LEDs and the battery are not replaceable. If the LEDs or battery are defective, the product must be disposed of.

⚠ WARNING!

Risk of injury!

- Manipulations/modifications are prohibited for approval reasons (CE).
- The product must not be covered up during use.

6. Safety instructions regarding rechargeable batteries

⚠ WARNING!

Risk of injury!

Wear gloves!

Do not touch leaked batteries with bare hands! There is a risk of injury!

- Leaked or damaged batteries may cause acid burns if they come into contact with skin. Do not touch leaked batteries with bare hands; therefore, ensure that you wear appropriate protective gloves in such a case!

NOTE!

- The product has a builtin rechargeable battery that cannot be replaced by the user. In order to avoid hazards, the battery may only be removed by the manufacturer or its service agent or by a similarly qualified individual.
- When disposing of the product, please note that the product contains a rechargeable battery.

⚠ CAUTION!

Danger of overheating!

Remove packaging prior to use.

7. Start-up

1. Remove all packaging materials.
2. Check whether all parts are available and undamaged.

If this is not the case, notify the specified service address.

Operation (Fig. B)

NOTE!

The product has a twilight sensor so that the product switches on automatically at dusk and switches off in daylight.
After installation, test the correct functioning of the twilight sensor by darkening the product when it is switched on.

The ON/MODE/OFF button 2 is located on the underside of the product 1.
You must switch on the product before placing it in a location.

1. Press the ON/MODE/OFF button 2 for at least 2 seconds. The twilight sensor is activated and the product is switched on in the last selected light mode.
2. Press the ON/MODE/OFF button 2 to switch through the 9 light modes: 2x white, then 6x different colours, then a colour change mode.
   - The last activated mode is retained when switching off and on again.
3. To switch off, press the ON/MODE/OFF button 2 for at least 2 seconds and the product switches off.

The product is ready for operation.

Charging the battery

- Charge the battery before using it for the first time.
- In summer, with constant sunlight, approx. 1 day is required for initial charging.
- The product's integrated charge control prevents overcharging of the battery.
- The battery is charged by sunlight even when the product is switched off.
- Depending on the time of year (e.g. winter), charging may take several days

Setting up the product (Fig. C)

1. Press the ground spike 2 into the mount 4 on the base plate of the product.
2. Insert the product 1 with the ground spike 2 into the ground (lawn, flower bed, etc.).

NOTE!

- If the soil is too firm, loosen it slightly.
- Ensure a secure stance. Do not use force when setting up. The product may be damaged.
- The product should be mounted in a location with direct sunlight. Partial shade can also affect the charging process.
- The product should not be illuminated by street lights at night. This may impair the function to the extent that the product does not switch on in twilight.

8. Care instructions & Cleaning instructions

Keep the product free of snow and ice during the winter. Check the product regularly for contamination. Remove any existing contamination to ensure proper functioning of the product.

⚠ CAUTION!

Danger of material damage!

Switch the product off before cleaning.

On www.lidl-service.com, you can download these and many other manuals, product videos and installation software.

With this QR code, you can directly reach the Lidl Service website (www.lidl-service.com) and can open your operating instructions by entering the article number (IAN 471140_2407).

9. Conformity declaration

This device complies with the fundamental requirements and other relevant regulations of the European Electromagnetic Compatibility Directive 2014/30/EU and the RoHS Directive 2011/65/EU. The complete original conformity declaration is available from the importer.

10. Disposal

Disposal of the packaging

The packaging and instructions are made of environmentally friendly materials that you can dispose of at local recycling points.

Disposal of the product

The product may not be disposed of with normal household waste. For information on disposal options for the product, please contact your local council/municipality or your Lidl shop.

Disposal of the battery / rechargeable battery

- Defective or used rechargeable batteries have to be recycled in accordance with Directive 2006/66/EC and its amendments.
  Batteries and disposable batteries are not permitted to be disposed of with household waste. They contain harmful metals. Marking: Pb (= lead), Hg (= mercury), Cd (= cadmium). You are legally obligated to return used batteries and rechargeable batteries. After use, you can either return batteries to our point of sale or in the direct vicinity (e.g. with a retailer or in municipal collection centres) free of charge. Batteries and rechargeable batteries are marked with a crossed-out wheelie bin.
  Rechargeable batteries must only be disposed of when discharged. Discharge the battery by leaving the product switched on until it no longer lights up.

11. Warranty

Dear customer, the warranty on this product is 3 years from the purchase date. In the event of defects in this product, you are entitled to exercise your statutory rights against the seller of the product. These statutory rights are not limited by our warranty described in the following.

Warranty conditions

The warranty begins on the date of purchase. Please keep the original receipt. This document is required as verification of the purchase.
If a material or manufacturing defect arises within three years from the purchase date of this product, the product will be repaired or replaced, as per our choice, at no charge to you. This warranty service requires the submission of the purchase receipt and the defective product within the three-year period and a short written description of the defect and when it arose.
If the defect is covered by our warranty, the repaired or a new product will be returned to you. The warranty period does not restart with the repair or replacement of the product.

Guarantee period and statutory claims for defects

The guarantee period will not be extended by the repair. This also applies to replaced and repaired parts. Damage and defects which may possibly already exist upon purchase must be reported immediately after unpacking. After the guarantee period has expired, required repairs shall be subject to a charge.

Scope of guarantee

The device has been carefully produced under strict quality guidelines and conscientiously inspected prior to delivery. The guarantee service applies to material or manufacturing faults. This guarantee does not extend to product parts, which are exposed to normal wear and tear and are therefore be regarded as wearing parts or to damage to fragile parts, e.g. switches or which are made of glass.
The guarantee shall lapse, if the product is damages, not used properly or maintained properly. For proper use of the product, all of the instructions in the operating instructions must be precisely complied with. Purposes and actions, which are dissuaded from or warned about in the operating instructions must be avoided.
The product is only intended for private and not commercial use. In the case of abusive and improper handling, use of force and with interventions, which are not performed by our authorised service branch, the guarantee shall lapse.

Processing in the case of a guarantee claim

To ensure quick processing of your concern, please follow the instructions below:
- Please have the till receipt and article number available (IAN 471140_2407) as proof of the purchase.
- You can find the article number on the rating plate on the product, as an engraving on the product, the title place of your instructions or the sticker on the back or underside of the product.
- If malfunctions or other defects occur, first contact the service department below by telephone or e-mail.
- You can then send a product that has been recorded as being defective, including the proof of purchase (till receipt) and stating the fault and when it occurred, postage-free to the service address provided to you.

8 IAN 471140_2407 OS

GB IE

LED SOLAR LIGHT / LED SOLAR LIGHTS

Operation and safety notes

1. Introduction

Congratulations!

With your purchase you have chosen a high-quality product. The operation and safety notes are an integral part of this product. They contain important information for safety, use and disposal. Familiarise yourself with all of the operation and safety notes before using the product. Use the product only as described and for the specific areas of application. Keep the operation and safety notes for future reference. Provide all of the documentation when passing the product on to third parties.

Hereinafter, the LED Solar Light / LED Solar Lights will be referred to as product or lamp.

Explanation of symbols

The following symbols and signal words are used in these operation and safety notes, on the product or on the packaging.

⚠ WARNING!

This signal symbol/word indicates a hazard with a high level of risk which, if not avoided, may result in death or serious injury.

⚠ CAUTION!

This signal symbol/word indicates a hazard with a low level of risk which, if not avoided, may result in minor or moderate injury.

NOTE!

This signal word warns of possible property damage or provides you with useful additional information regarding the use.

This symbol indicates additional information.

This symbol indicates that batteries are included in the scope of delivery.

This symbol indicates protection category IP67 (dustproof and protected against temporary immersion).

This symbol indicates direct current.

This symbol informs you about the duration of the light when fully charged.

This symbol indicates protection class III. SELV: safety extra-low voltage.

These symbols inform you about the disposal of the packaging and the product.

Conformity declaration (see chapter „9. Conformity declaration"): Products that are marked with this symbol fulfil all applicable Community regulations of the European Economic Area.

2. Safety

Intended use

The product is not intended for commercial use. Different use or a modification to the product are not deemed as intended use and may lead to risks, such as injuries and damage. The distributor assumes no liability for damage that results from improper use.

⚠ WARNING!

Risk of injury!

Do not use in an explosive environment! There is a risk of injury!

- The product is not allowed to be used in an explosive (Ex) environment. The product is not approved for an environment, in which flammable liquids, gases or dust are present.

⚠ CAUTION!

Risk of injury!

A defective product is not allowed to be used! There is a risk of injury!

- Do not use the product in the case of malfunctions, damage or defects.
- Significant danger can occur for the user in the case of improper repairs. If you find a defect in the product, have the product checked and repaired if necessary before putting it back into operation.
- The LEDs and the battery are not replaceable. If the LEDs or battery are defective, the product must be disposed of.

⚠ WARNING!

Risk of injury!

- Manipulations/modifications are prohibited for approval reasons (CE).
- The product must not be covered up during use.

6. Safety instructions regarding rechargeable batteries

⚠ WARNING!

Risk of injury!

Wear gloves!

Do not touch leaked batteries with bare hands! There is a risk of injury!

- Leaked or damaged batteries may cause acid burns if they come into contact with skin. Do not touch leaked batteries with bare hands; therefore, ensure that you wear appropriate protective gloves in such a case!

NOTE!

- The product has a builtin rechargeable battery that cannot be replaced by the user. In order to avoid hazards, the battery may only be removed by the manufacturer or its service agent or by a similarly qualified individual.
- When disposing of the product, please note that the product contains a rechargeable battery.

⚠ CAUTION!

Danger of overheating!

Remove packaging prior to use.

7. Start-up

1. Remove all packaging materials.
2. Check whether all parts are available and undamaged.

If this is not the case, notify the specified service address.

Operation (Fig. B)

NOTE!

The product has a twilight sensor so that the product switches on automatically at dusk and switches off in daylight.
After installation, test the correct functioning of the twilight sensor by darkening the product when it is switched on.

The ON/MODE/OFF button 2 is located on the underside of the product 1.
You must switch on the product before placing it in a location.

1. Press the ON/MODE/OFF button 2 for at least 2 seconds. The twilight sensor is activated and the product is switched on in the last selected light mode.
2. Press the ON/MODE/OFF button 2 to switch through the 9 light modes: 2x white, then 6x different colours, then a colour change mode.
   - The last activated mode is retained when switching off and on again.
3. To switch off, press the ON/MODE/OFF button 2 for at least 2 seconds and the product switches off.

The product is ready for operation.

Charging the battery

- Charge the battery before using it for the first time.
- In summer, with constant sunlight, approx. 1 day is required for initial charging.
- The product's integrated charge control prevents overcharging of the battery.
- The battery is charged by sunlight even when the product is switched off.
- Depending on the time of year (e.g. winter), charging may take several days

Setting up the product (Fig. C)

1. Press the ground spike 2 into the mount 4 on the base plate of the product.
2. Insert the product 1 with the ground spike 2 into the ground (lawn, flower bed, etc.).

NOTE!

- If the soil is too firm, loosen it slightly.
- Ensure a secure stance. Do not use force when setting up. The product may be damaged.
- The product should be mounted in a location with direct sunlight. Partial shade can also affect the charging process.
- The product should not be illuminated by street lights at night. This may impair the function to the extent that the product does not switch on in twilight.

8. Care instructions & Cleaning instructions

Keep the product free of snow and ice during the winter. Check the product regularly for contamination. Remove any existing contamination to ensure proper functioning of the product.

⚠ CAUTION!

Danger of material damage!

Switch the product off before cleaning.

On www.lidl-service.com, you can download these and many other manuals, product videos and installation software.

With this QR code, you can directly reach the Lidl Service website (www.lidl-service.com) and can open your operating instructions by entering the article number (IAN 471140_2407).

9. Conformity declaration

This device complies with the fundamental requirements and other relevant regulations of the European Electromagnetic Compatibility Directive 2014/30/EU and the RoHS Directive 2011/65/EU. The complete original conformity declaration is available from the importer.

10. Disposal

Disposal of the packaging

The packaging and instructions are made of environmentally friendly materials that you can dispose of at local recycling points.

Disposal of the product

The product may not be disposed of with normal household waste. For information on disposal options for the product, please contact your local council/municipality or your Lidl shop.

Disposal of the battery / rechargeable battery

- Defective or used rechargeable batteries have to be recycled in accordance with Directive 2006/66/EC and its amendments.
  Batteries and disposable batteries are not permitted to be disposed of with household waste. They contain harmful metals. Marking: Pb (= lead), Hg (= mercury), Cd (= cadmium). You are legally obligated to return used batteries and rechargeable batteries. After use, you can either return batteries to our point of sale or in the direct vicinity (e.g. with a retailer or in municipal collection centres) free of charge. Batteries and rechargeable batteries are marked with a crossed-out wheelie bin.
  Rechargeable batteries must only be disposed of when discharged. Discharge the battery by leaving the product switched on until it no longer lights up.

11. Warranty

Dear customer, the warranty on this product is 3 years from the purchase date. In the event of defects in this product, you are entitled to exercise your statutory rights against the seller of the product. These statutory rights are not limited by our warranty described in the following.

Warranty conditions

The warranty begins on the date of purchase. Please keep the original receipt. This document is required as verification of the purchase.
If a material or manufacturing defect arises within three years from the purchase date of this product, the product will be repaired or replaced, as per our choice, at no charge to you. This warranty service requires the submission of the purchase receipt and the defective product within the three-year period and a short written description of the defect and when it arose.
If the defect is covered by our warranty, the repaired or a new product will be returned to you. The warranty period does not restart with the repair or replacement of the product.

Guarantee period and statutory claims for defects

The guarantee period will not be extended by the repair. This also applies to replaced and repaired parts. Damage and defects which may possibly already exist upon purchase must be reported immediately after unpacking. After the guarantee period has expired, required repairs shall be subject to a charge.

Scope of guarantee

The device has been carefully produced under strict quality guidelines and conscientiously inspected prior to delivery. The guarantee service applies to material or manufacturing faults. This guarantee does not extend to product parts, which are exposed to normal wear and tear and are therefore be regarded as wearing parts or to damage to fragile parts, e.g. switches or which are made of glass.
The guarantee shall lapse, if the product is damages, not used properly or maintained properly. For proper use of the product, all of the instructions in the operating instructions must be precisely complied with. Purposes and actions, which are dissuaded from or warned about in the operating instructions must be avoided.
The product is only intended for private and not commercial use. In the case of abusive and improper handling, use of force and with interventions, which are not performed by our authorised service branch, the guarantee shall lapse.

Processing in the case of a guarantee claim

To ensure quick processing of your concern, please follow the instructions below:
- Please have the till receipt and article number available (IAN 471140_2407) as proof of the purchase.
- You can find the article number on the rating plate on the product, as an engraving on the product, the title place of your instructions or the sticker on the back or underside of the product.
- If malfunctions or other defects occur, first contact the service department below by telephone or e-mail.
- You can then send a product that has been recorded as being defective, including the proof of purchase (till receipt) and stating the fault and when it occurred, postage-free to the service address provided to you.

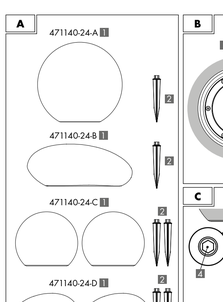

10. Utylizacja

Utylizacja produktu

Opakowanie i instrukcja obsługi wykonane są z materiału przyjaznego dla środowiska, które można utylizować w lokalnych punktach recyklingu.

Utylizacja zużytej baterii:

- Ten symbol oznacza, że zużytego sprzętu nie można umieszczać łącznie z innymi odpadami (2012/19/UE).
- Zgodnie z art. 13 ust 1. Ustawy z dnia 11 września 2015 roku o zużytym sprzęcie elektrycznym i elektronicznym zakazuje się umieszczania zużytego sprzętu łącznie z innymi odpadami. Elektroodpady nie mogą być wyrzucane do pojemników do selektywnej zbiórki odpadów komunalnych. Można je oddać w specjalnie wyznaczonych miejscach np. Punkt Selektywnej Zbiórki Odpadów Komunalnych lub/ bądź w punktach handlowych oferujących w sprzedaży sprzęt elektroniczny.
- Należy postępować zgodnie z obowiązującymi w Polsce przepisami dotyczącymi selektywnej zbiórki urządzeń elektrycznych i elektronicznych. Prawidłowa gospodarka odpadami pomaga uniknąć potencjalnych skutków dla środowiska i zdrowia ludzi wynikających z obecności w sprzęcie niebezpiecznych: substancji, mieszanin oraz części składowych.
Zużyty sprzęt może mieć szkodliwy wpływ na środowisko i zdrowie ludzi z uwagi na potencjalną zawartość niebezpiecznych substancji, mieszanin oraz części składowych. Gospodarstwo domowe spełnia ważną rolę w przyczynianiu się do ponownego użycia i odzysku surowców wtórnych, w tym recyklingu zużytego sprzętu. Na tym etapie kształtuje się postawy, które wpływają na zachowanie wspólnego dobra jakim jest czyste środowisko naturalne.

Utylizacja baterie / akumulatory

- Uszkodzone i zużyte baterie wielokrotnego ładowania zostaną poddane recyklingu według dyrektywy 2006/66/WE wraz z uzupełnieniami. Baterii i akumulatorków nie wolno wyrzucać razem z odpadami domowymi. Zawierają one szkodliwe metale ciężkie. Oznaczenia: Pb (= ołów), Hg (= rtęć), Cd (= kadm). Użytkownik jest zobowiązany ustawowo do zwrotu zużytych baterii i akumulatorków. Zużyte baterie możesz oddać bezpłatnie w naszym punkcie sprzedaży albo we Twojej okolicy (np. W sklepach lub komunalnych punktach zbiorczych). Baterie i akumulatorki są oznakowane przekreślonym śmietnikiem. Baterie/akumulatory wielokrotnego ładowania mogą być utylizowane tylko wtedy, gdy są rozładowane. Rozładować baterię, pozostawiając podłączone wtyczki, ewentualnie zewrzeć styki taśmą izolacyjną.

11. Gwarancja

Szanowni klienci, to urządzenie jest objęte 3-letnią gwarancją od daty zakupu. W przypadku wad produktu mogą dochodzić prawnie swoich ustawowych roszczeń wobec sprzedawcy produktu. Tych ustawowych roszczeń nie ogranicza nasza przedstawiona poniżej gwarancja.

Warunki gwarancji

Okres gwarancji rozpoczyna się w dniu zakupu. Prosimy o zachowanie paragonu kasowego. Ten dokument stanowi dowód zakupu.
Jeśli w okresie trzech lat od daty zakupu tego produktu ujawni się wada materiału lub błąd produkcyjny, produkt - według naszego uznania - zostanie przez nas bezpłatnie naprawiony lub wymieniony na nowy. Warunkiem skorzystania ze świadczeń gwarancyjnych jest przedłożenie w czasie trzyletniego okresu gwarancyjnego wadliwego urządzenia i dowodu zakupu (paragonu) oraz krótkie opisanie, na czym polega wada i kiedy wystąpiła. Jeśli nasza gwarancja obejmie te wady, otrzymają państwo naprawiony lub nowy produkt. Wraz z naprawą lub wymianą produktu nie rozpoczyna się nowy okres obowiązywania gwarancji.

Okres gwarancji i roszczenia z tytułu wad

Rękojmia nie wydłuża okresu gwarancji. Dotyczy to również części wymienionych i naprawionych. Szkody i wady produktu obecne już w momencie zakupu należy zgłosić niezwłocznie po rozpakowaniu. Po upływie okresu gwarancji naprawy są płatne.

Zakres gwarancji

Urządzenie zostało wyprodukowane z zachowaniem staranności i surowych wytycznych jakości, i sprawdzone przed dostawą. Gwarancja obejmuje wyłącznie szkody materiałowe i fabryczne. Niniejsza gwarancja nie obejmuje części produktu, które podlegają normalnemu zużywaniu i dlatego są uważane za części zużywające się, ani uszkodzeń familtych części, np. Wytłaczników lub części wykonanych z szkła.
Gwarancja traci ważność, jeżeli produkt został uszkodzony, był użytkowany lub konserwowany w nieprawidłowy sposób. W celu należytego użytkowania produktu należy dokładnie przestrzegać wszystkich instrukcji podanych w instrukcji obsługi. Należy bezwzględnie powstrzymać się od zastosowań i sposobów obchodzenia się z produktem, które w instrukcji obsługi są odradzane lub przed którymi instrukcja ostrzega.
Produkt jest przeznaczony włącznie do użytku prywatnego i nie nadaje się do zastosowań komercyjnych. Gwarancja traci ważność w przypadku nieprawidłowego i nienależytego obchodzenia się, zastosowania siły i interwencji, które nie są przewodzone przez nasz autoryzowany punkt serwisowy.

Procedura w przypadku świadczeń gwarancyjnych

W celu zapewnienia szybkiej realizacji zgłoszenia należy postępować zgodnie z poniższymi wskazówkami.

- W przypadku wszystkich zgłoszeń przygotować paragon i numer artykułu (IAN 471140_2407) jako dowód zakupu.
- Numer artykułu jest podany na tabliczce znamionowej produktu, wyłoczony na produkcie, podany na stronie tytułowej instrukcji lub nakleje z tyłu lub na spodzie produktu.
- W przypadku zakłóceń w działaniu lub innych wad należy skontaktować się telefonicznie lub pocztą elektroniczną z działem serwisu wskazanym poniżej.
- Produkt zarejestrowany jako wadliwy należy przesłać pocztą wraz z numerem artykułu (IAN 471140_2407) jako dowód zakupu.
- Wyrób by mal byf namontovaný na miесte s priamym prístupom slnečného žiarenia. Aj čiastočný tieň môže mať vplyv na prácu zariadenia.
- Výrobok je potrebné umiestniť tak, aby naň v noci nedopadalo svetlo z pouličného osvetlenia. Môže to ovplyvniť jeho funkciu až do tej miery, že pri súmraku nedôjde k zapnutiu výrobku.

8. Pokyny týkajúce sa údržby a čistenia

Počas zimy čistite výrobok od snehu a ľadu. Pravidelne kontrolujte, či výrobok nie je znečistený. V zdajme zaručenia bezchybného fungovania výrobku odstráňte prípadné nečistoty.

⚠ POZOR!

Nebezpečenstvo vecného poškodenia!

Pred čistením vypnite výrobok.

- Čistite iba vlhkou utierkou
- používajte iba bežné čistiace prostriedky na skло
- nepoužívajte žiadne agresívne čistiace prostriedky, príp. Chemikálie
- nepoužívajte žiadne predmety s ostrými hranami, ako sú špachtle a pod., aby ste nepoškodili povrch

9. Vyhlásenie o zhode

Tento výrobok spĺňa základné požiadavky a iné relevantné ustanovenia európskej smernice o elektromagnetickej kompatibilite 2014/30/EU, ako aj smernice o obmedzení používania určitých nebezpečných látok v elektrických a elektronických zariadeniach 2011/65/EU. Kompletné originálne vyhlásenie o zhode je k dispozícii u dovozcu.

10. Likvidácia

Likvidácia obalu

Obal a návod na obsluhu sú vyrobené z ekologických materiálov, ktoré môžete zlikvidovať na miestnych recyklačných miestach.

Likvidácia výrobku

Výrobok nesmiete zlikvidovať v bežnom komunálnom odpade. Bližšie informácie o možnostiach likvidácie produktu vám poskytne obecná/mestská správa alebo pobočka Lidl.

Likvidovanie akumulátorov / nabíjateľné batérie

- Poškodené alebo použité nabíjateľné batérie sa musia recyklovať v súlade so smernicou 2006/66/ES a jej dodatkami.
- Batérie a akumulátory nesmiete zlikvidovať v bežnom komunálnom odpade. Obsahujú škodlivé ťažké kovy. Označenie: Pb (= olovo), Hg (= ortuť), Cd (= kadmium). Zo zákona ste povinní vrátiť použité batérie a akumulátory. Batérie môžete po použití bezplatne vrátiť, a to buď v našom obchode alebo v bezprostrednej blízkosti (napr. V obchodoch alebo v miestnych zberných strediskách). Batérie a akumulátory sú označené symbolom prečiarknutého odpadkového koša.
Nabíjateľné batérie / akumulátory sa smú likvidovať výhradne vo vybitom stave. Vybité akumulátor tak, že nechá-te výrobok zapnutý, až kým nebude viac

⚠ POZOR!

Nebezpečenstvo prehriatia!

Nepoužívajte v obale.

7. Uvedenie do prevádzky

1. Odstráňte všetok obalový materiál.
2. Skontrolujte, či sú k dispozícii všetky časti v nepoškodenom stave.
V opačnom prípade sa obráťte na uvedenú servisnú adresu.

Ovládanie (obr. B)

UPOZORNENIE!

Výrobok je vybavený senzorom súmraku, takže sa automaticky zapína pri súmraku a vypína sa pri dennom svetle.
Po inštalácii otestujte správnu funkciu senzora súmraku tak, že výrobok v zapnutom stave zakryjete.

Na spodnej strane výrobku 1 sa nachádza tlačidlo ZAP/REŽIM/VYP. 2
Pred nainštalovaním výrobku na miesto je nutné výrobok zapnúť.
1. Stlačte tlačidlo ZAP/REŽIM/VYP. 3 minimálne na 2 sekundy. Senzor súmraku je aktivovaný a výrobok je zapnutý v napojených vybratom režime svietenia.
2. Stláčaním tlačidla ZAP/REŽIM/VYP. 3 môžete prepínať medzi 9 režimami svietenia.
2 x bleska, následne 6 x rôzne farby, následne režim cyklického prepínania farieb.
Režim aktivovaný naposledy zostáva zachovaný pri vypnutí a opätovnom zapnutí.
3. Na vypnutie stlačte tlačidlo ZAP/REŽIM/VYP. 3 minimálne na 2 sekundy, výrobok sa vypne.
Výrobok je pripravený na prevádzku.

Nabíjanie akumulátora

- Akumulátor pred prvým použitím nabite.
- V tele pri nepretržitom slnečnom svetle trvá prvé nabitie cca 1 deň.
- Regulácia nabíjania integrovaná vo výrobku zabraňuje nadmernému nabitiu akumulátora.
- Akumulátor sa nabíja zo slnečného žiarenia, aj keď je výrobok vypnutý.
- V závislosti od ročného obdobia (napr. zimný mesiac) doba nabíjania trvať niekoľko dní.

Inštalácia výrobku (obr. C)

1. Hrot 4 zatlačte do upnutia 5 v spodnej doske výrobku.
2. Hrot 2 s výrobkom 1 zatlačte do zeme (trávnik, kvetinový záhon atď.).

UPOZORNENIE!

- Ak je pôda príliš tvrdá, trocha ju prekopajte.
- Dbajte na bezpečnú stabilitu. Pri inštalácii nepoužívajte nadmernú siluu. Môže dôjsť k poškodeniu výrobku.

Záručná doba a zákonné nároky vyplývajúce z nedostatkov

Záručná doba sa poskytnutím záručného plnenia nepredĺžuje. Platí to aj pre vymenené a opravené súčiastky. Poškodenia a nedostatky, ktoré sa prípadne vyskytujú už pri kúpe, sa musia nahlásiť okamžite po vybalení. Po uplynutí záručnej doby sú všetky prípadné opravy spoplatnené.

Rozsah záruky

Prístroj bol vyrobený riadne v súlade s prísnymi smernicami týkajúcimi sa kvality a pred dodaním svedomite odskúšaný. Poskytnutie záruky platí pre chyby materiálu alebo výrobné chyby. Táto záruka sa nevzťahuje na časti výrobku, ktoré sú vystavené bežnému opotrebovaniu, a preto je možné považovať ich za opotrebovateľné diely alebo na poškodenie krehkých častí, napr. Spínač alebo časti, ktoré sú vyrobené zo skla.
Táto záruka zaniká, keď bol výrobok poškodený, používaný v rozpore s účelom alebo opravovaný. Pre používanie výrobku v súlade s účelom sa musia presne dodržiavať všetky pokyny uvedené v návode na obsluhu. Účelom použitia alebo konaniam, od ktorých návod na obsluhu odráda alebo pred ktorými varuje, sa musite bezpodmienečne vyhýbať.
Výrobok je určený len na súkromné a nie na priemyselné použitie. V prípade nesprávneho zaobchádzania alebo zaobchádzania, ktoré je v rozpore s ú čelom, použitia sily a pri zásahoch, ktoré neboli realizované našou autorizovanou servisnou pobočkou, záruka zaniká.

Vybavenie v prípade uplatnenia záruky

Aby sme zabezpečili rýchle spracovanie vašej žiadosti, riaďte sa, prosím, nasledovnými pokynmi:
- V prípade všetkých žiadostí si pripravte pokladničný blok a číslo výrobku (IAN 471140_2407) alebo doklad o kúpe.
- Číslo výrobku nájdete na typovom štítku výrobku, vyryté na výrobku, na úvodnej strane vášho návodu alebo na nálepke na zadnej alebo spodnej strane výrobku.
- Ak by sa vyskytli funkčné poruchy alebo iné nedostatky, najskôr telefonicky alebo e-mailom kontaktujte následne uvedené servisné oddelenie.
- Výrobok identifikovaný ako chybný môžete spolu s dokladom o kúpe (pokladničný doklad) a uvedením v čom pozostáva chyba a kedy nastala bez poštovného poplatku poslať na adresu servisu, ktorá vám bude oznámená.

Na webovej stránke www.lidl-service.com si môžete stiahnuť túto a mnohé ďalšie príručky, videá a výrobkové a inštalačný softvér.

S týmto QR kódom sa dostanete priamo na stránku servisu spoločnosti Lidl (www.lidl-service.com) a prostredníctvom zadania čísla výrobku (IAN 471140_2407) si môžete otvoriť návod na obsluhu.

6. Bezpečnostné pokyny k akumulátorom

⚠ VAROVANIE!

Nebezpečenstvo poranenia!

Noste rukavice!

Vytečené akumulátory nechytajte holými rukami!

Hrozí nebezpečenstvo poranenia!

- Vytečené alebo poškodené akumulátory môžu pri kontakte s pokožkou spôsobiť poleptanie. Nedotýkajte sa poškodených akumulátorov holými rukami. V týchto prípadoch nevyhnutne používajte vhodné ochranné rukavice!
- Ten kontaktuje kontaktné plochy akumulátor môže spôsobiť zvodný prúd. Pokrývajte kontaktné plochy nevodivým materiálom.
- Nie je dovolené akumulátor akýmkoľvek spôsobom otvárať alebo ho rozbíjať.
- Akumulátor nie je vhodný na tepelnú úpravu. Nevhadzujte ho do ohňa. Nevystavujte ho vysokým teplotám.
- Nabíjajte iba v prípade, ak je nabíjací kábel celkovo suchý a nie je poškodený. Nabíjajte iba v suchom a dobre vetranom prostredí.
- Nenechávajte nabíjať akumulátory bez dozoru.
- Nabíjajte iba v rozsahu teplôt 0 °C – 45 °C.
- Nabíjací kábel pravidelne kontrolujte, či nie je poškodený. Ak je nabíjací kábel poškodený, nie je dovolené ho ďalšie používať a nabíjať.
- Nabíjací kábel nepoužívajte na iné ako na nabíjanie akumulátorov.
- Nedovoľte, aby sa s výrobkom alebo obalom hrali deti.
- V blízkosti výrobku dávajte pozor na deti.
- Výrobok a obal uschovávajte mimo dosahu detí.

⚠ VAROVANIE!

Nebezpečenstvo poranenia!

Nevhodné pre deti do 8 rokov!

Uchovávajte mimo dosahu deti. Hrozí nebezpečenstvo poranenia!

- Deti od 8 rokov, ako aj osoby s obmedzenými fyzickými, senzorickými alebo mentálnymi schopnosťami alebo nedostatkom skúseností a znalostí musia byť pri použití výrobku pod dozorom a/ alebo musia byť poučené o bezpečnom používaní výrobku a musia rozumieť prípadným rizikám.
- Deti sa s výrobkom nesmú hrať.
- Údržbu a/alebo čistenie výrobku nesmú vykonávať deti.

Dodržiavajte národné predpisy!

- Pri používaní a zneškodňovaní výrobku dodržiavajte platné vnútroštátne predpisy a ustanovenia.

⚠ VAROVANIE!

Nebezpečenstvo poranenia!

Nepoužívajte v prostredí s nebezpečenstvom výbuchu! Hrozí nebezpečenstvo poranenia!

- Výrobok sa nesmie používať v prostredí s nebezpečenstvom výbuchu (Ex). Výrobok sa nesmie používať v prostredí, v ktorom sa nachádzajú horľavé tekuté látky, plyny alebo prach.

⚠ POZOR!

Nebezpečenstvo poranenia!

Poškodený výrobok sa nesmie používať! Hrozí nebezpečenstvo poranenia!

- Nepoužívajte výrobok v prípade funkčných porúch, poškodení alebo iných porúch.
- Neodborne vykonané opravy môžu pre používateľa predstavovať značné nebezpečenstvo.
- Ak na výrobku zistíte chybu, nechajte výrobok skontrolovať a v prípade potreby ho pred opätovným uvedením do prevádzky opraviť.
- LED diódy a batéria nie sú vymeniteľné. Ak sú LED diódy alebo batéria chybné, výrobok sa musí zlikvidovať.

⚠ VAROVANIE!

Nebezpečenstvo poranenia!

- Manipulácie/zmeny sú zo schvaľovacích dôvodov [CE] zakázané.
- Výrobok sa počas používania nesmie zakrývať.

6. Bezpečnostné pokyny k akumulátorom

⚠ VAROVANIE!

Nebezpečenstvo poranenia!

Noste rukavice!

Vytečené akumulátory nechytajte holými rukami!

Hrozí nebezpečenstvo poranenia!

- Vytečené alebo poškodené akumulátory môžu pri kontakte s pokožkou spôsobiť poleptanie. Nedotýkajte sa poškodených akumulátorov holými rukami. V týchto prípadoch nevyhnutne používajte vhodné ochranné rukavice!
- Ten kontaktuje kontaktné plochy akumulátor môže spôsobiť zvodný prúd. Pokrývajte kontaktné plochy nevodivým materiálom.
- Nie je dovolené akumulátor akýmkoľvek spôsobom otvárať alebo ho rozbíjať.
- Akumulátor nie je vhodný na tepelnú úpravu. Nevhadzujte ho do ohňa. Nevystavujte ho vysokým teplotám.
- Nabíjajte iba v prípade, ak je nabíjací kábel celkovo suchý a nie je poškodený. Nabíjajte iba v suchom a dobre vetranom prostredí.
- Nenechávajte nabíjať akumulátory bez dozoru.
- Nabíjajte iba v rozsahu teplôt 0 °C – 45 °C.
- Nabíjací kábel pravidelne kontrolujte, či nie je poškodený. Ak je nabíjací kábel poškodený, nie je dovolené ho ďalšie používať a nabíjať.
- Nabíjací kábel nepoužívajte na iné ako na nabíjanie akumulátorov.
- Nedovoľte, aby sa s výrobkom alebo obalom hrali deti.
- V blízkosti výrobku dávajte pozor na deti.
- Výrobok a obal uschovávajte mimo dosahu detí.

⚠ VAROVANIE!

Nebezpečenstvo poranenia!

Nevhodné pre deti do 8 rokov!

Uchovávajte mimo dosahu deti. Hrozí nebezpečenstvo poranenia!

- Deti od 8 rokov, ako aj osoby s obmedzenými fyzickými, senzorickými alebo mentálnymi schopnosťami alebo nedostatkom skúseností a znalostí musia byť pri použití výrobku pod dozorom a/