Children from the age of 8, as well as people with impaired physical, sensory or mental capabilities or with a lack of experience and knowledge, must be supervised when using the product and/or be instructed regarding the safe use of the product and understand the resulting dangers. Children are not allowed to play with the product.
Maintenance and/or cleaning of the product is not allowed to be performed by children.

Observe national regulations!
Observe the applicable national requirements and regulations for the use and disposal of the product.

⚠ WARNING!

Risk of injury!
Do not use in an explosive environment! There is a risk of injury!
The product is not allowed to be used in an explosive environment. The product is not approved for an environment in which flammable liquids, gases or dust are present.

⚠ WARNING!

Risk of injury!
If defective product is not allowed to be used! There is a risk of injury!
Do not use the product in the case of malfunctions, damages or defects.
Significant danger can occur for the user in the case of improper repairs.
If you determine a defect on the product, remove the batteries from the device and dispose of the product inspected and repaired, if necessary, before putting it into operation again.
The LEDs are not replaceable. If the LEDs are defective, the product must be disposed of.
The cable is not interchangeable. If the cable is defective, the product must be disposed of.

⚠ WARNING!

Risk of injury!
The product is not allowed to be used as a toy! There is a risk of injury!
The product is not intended for children to play with. Children can underestimate the dangers that result from improper use.

NOTE!

This signal word warns of possible property damage and provides you with useful additional information regarding the use.

⚠ CAUTION!

This signal symbol/word indicates a hazard with a low level of risk which, if not avoided, may result in minor or moderate injury.

Legend
1 Product
2 Black wire product
3 White wire product
4 Silver, twisted wire product
5 Power supply unit
6 Infrared remote control
7 Battery compartment
8 Suction cup holder
9 Mounting bracket
10 Plug
11 Screw
12 Sealing ring
13 Receiver
14 Button
15 Infrared diode
16 ON/OFF button
17 MODE button
18 TIMER button
19 DIM button
20 LED

⚠ WARNING!

Risk of injury!
The product is not allowed to be used as a toy! There is a risk of injury!
The casing must not be opened and the product must not be manipulated/modified under any circumstances. Manipulations/modifications can considerably life from electric shock. Manipulations/modifications are also prohibited for approval reasons (CE).
Check voltage! Make sure that the existing mains voltage corresponds to the specification on the name plate. Only connect if both voltages are identical.
Switching-on must be immediately carried out in the case of a thunderstorm.
Never touch the power plug with wet hands, if it is in operation. The product must not be covered up during use.

6. Safety instructions regarding batteries

⚠ WARNING!

Fatal danger!
Batteries must not be swallowed! There is a risk of fatal injuries!
Batteries must not be swallowed, so this article and its batteries must be stored out of the reach of small children.
Swallowing can lead to chemical burns, stiffness perforations and fatal injuries. Severe internal burns can already occur within 2 hours of ingestion.
If a battery has been swallowed, please consult a doctor without delay!
Keep the batteries out of the reach of children.

⚠ WARNING!

Fire and explosion hazard!
Never recharge non-rechargeable batteries, do not short-circuit them. This may result in overheating, risk of fire or bursting.
Keep the product away from heat sources and direct sunlight.
The batteries may explode if overheated. There is a risk of injury!

⚠ WARNING!

Risk of injury!
Do not touch leaked batteries with bare hands! There is a risk
Leaked or damaged batteries may cause chemical burns if they come into contact with skin. Do not touch leaked batteries with bare hands; therefore you should you wear appropriate protective gloves in this case.
Only use type CR2025 batteries from the same manufacturer.
Insert the batteries into the designated battery compartment with the correct polarity.
Do not use combinations of old and new batteries or rechargeable batteries.
Store batteries in a dry and cool, not damp, place.
Never throw batteries into fire. Do not short-circuit batteries.
Disposable batteries do not belong in household waste but must be disposed of at a collection point for used batteries.
Rechargeable batteries do not belong in household waste but must be disposed of at a collection point for used batteries.
Remove the batteries if the device is not in use.
Discharged batteries must be immediately removed in order to avoid battery leakage and the damage to the device.
Empty batteries and used rechargeable batteries must be disposed of properly.
Store disposable batteries separately from discharged batteries, in order to avoid mix-ups.

⚠ CAUTION!

Danger of overheating!
Remove packaging prior to use.

7. Start-up

1. Remove all packaging materials.
2. Check whether all parts are available and undamaged.
If this is not the case, notify the specified service.

Legend
1 Product
2 Black wire product
3 White wire product
4 Silver, twisted wire product
5 Power supply unit
6 Infrared remote control
7 Battery compartment
8 Suction cup holder
9 Mounting bracket
10 Plug
11 Screw
12 Sealing ring
13 Receiver
14 Button
15 Infrared diode
16 ON/OFF button
17 MODE button
18 TIMER button
19 DIM button
20 LED

⚠ WARNING!

Risk of injury!
There is a risk of injury when the output socket is damaged!
Insert the plug into the output socket!
Insert the plug ⓫ of the product ① into the output socket ⓬ on the power supply unit ⑤ with the correct polarity, see **Fig. D**.

⚠ WARNING!

Risk of injury!
For this, please pay attention to the marked polarities (+ and -).
Screw the union nut ⓭ of the plug ⑪ to the output socket ⑫, see **Fig. D**.

⚠ WARNING!

Risk of injury!
Make sure that the union nut ⓭ is firmly screwed to the output socket ⑫.
The product ① must not be used without a correctly fitted sealing ring ⑫ of the union nut ⓭, see **Fig. D**.

Only after you have completely hung up, laid out or fixed the product on a fir tree, plug the power supply unit ⑤ into the socket.

8. Operation

Power supply unit
The product ① can be put into an easily accessible wall outlet. The product ① and the ⑤ illuminate in the last mode that was set.
To switch the product ① off, remove the power supply unit ⑤ from the wall outlet.

Infrared remote control

NOTE!

The receiver ⑬ is equipped with an infrared diode ⑮, see **Fig. A**. There, the infrared remote control ⑥ can be used to control, ⑮ aim at the receiver ⑬.

NOTE!

The IP44 protection does NOT apply to the infrared remote control ⑥ in dry areas and protect it from splashing water.
Only use the infrared remote control ⑥ in dry areas and protect it from splashing water or moisture.
Make sure that there are no obstacles between the infrared remote control ⑥ and the receiver ⑬.
The range of the infrared remote control ⑥ is 5 m.

⚠ VORSICHT!

To switch on the product ① press the ON/OFF button ⑯ on the infrared remote control ⑥, see **Fig. E**.
To switch off the product ① press the ON/OFF button ⑯ on the infrared remote control ⑥ again.

Mode selection on the receiver (Fig. E)
The product ① is switched on, you can use the button ⑭ on the receiver ⑬ to switch the lighting mode, you can switch through the following modes:
1. COMBINATION
2. IN WAVES
3. SEQUENTIAL
4. SIO-GO
5. CHASING/FLASH
6. SLOW FADE
7. TWINKLE/FLASH
8. STEADY ON

Mode selection on the infrared remote control (Fig. F)
If the product ① is switched on, you can use the button ⑰ on the infrared remote control ⑥ to switch through the following modes:
1. COMBINATION
2. IN WAVES
3. SEQUENTIAL
4. SIO-GO
5. CHASING/FLASH
6. SLOW FADE
7. TWINKLE/FLASH
8. STEADY ON

Dimming function (Fig. F)
With the two DIM buttons ⑲ ⑱ of the infrared remote control ⑥ you can increase or decrease the brightness of the LEDs in 4 step.

Timer function
The product ① is equipped with a timer function.

Activating/deactivating the timer function via the receiver
When the product ① is switched on, press the button ⑱ on the receiver ⑬ for approx. 3 seconds to activate the timer function and deactivate it again by pressing it again for longer period (approx. 3 seconds).

Activating/deactivating the timer function via infrared remote control
When you press the TIMER button ⑱ on the infrared remote control ⑥ press 1x to switch on the timer function, press again switches the timer function off again.

If the timer function is switched on, the product ① will switch off automatically after 6 hours.
After another 18 hours, the product ① will switch on automatically.
If the product is not switched off manually, this daily cycle will repeat itself.

NOTE!

When the timer function is active, or you switch off the timer function, see **Fig E**.

NOTE!

The LED ⑳ is attached in the receiver ⑬. It only shines green through the receiver ⑬.

Memory function
The product ① has a memory function. When it is switched off, the settings used remain stored and are immediately available again the next time it is switched on.

9. Cleaning and care instructions

⚠ WARNING!

Risk of injury!
Before cleaning, you must remove the batteries from the battery compartment. The power plug must be disconnected before cleaning. There is a risk of electric shock!
only clean with a dry cloth
do not use any strong detergents and/or chemicals
do not immerse in water
store in a cool, dry place and out of the reach of children

10. Conformity declaration

The device complies with the fundamental requirements and other relevant regulations of the European Directives: Compatibility Directive 2014/30/EU and RoHS Directive 2011/65/EU. The complete original declaration is available from the importer.

11. Disposal

Disposal of the packaging
The packaging materials are made of 100 % environmentally friendly materials, which you may dispose of at your local collection point.

Disposal of the product
The product may not be disposed of with normal household waste. For information on disposal options for the product, please contact your local council/municipality or your Ltd shop.

Disposal of the battery/ rechargeable battery
- Defective or used rechargeable batteries have to be recycled in accordance with Directive 2006/66/EC, as amended.
Batteries and disposable batteries are not permitted to be disposed of with household waste. Batteries that contain harmful heavy metals: Marking Pb (= lead), Hg (= mercury), Cd (= cadmium). You are legally obligated to return used batteries and rechargeable batteries. After use, you can return batteries to a collection point of sale or in the direct vicinity (e.g. with a retailer) or to other local collection centres) free of charge. Batteries and rechargeable batteries are marked with a crossed-out waste bin.

12. Warranty

Dear customer, the warranty on this product is 3 years from the purchase date. In the event of a defect in the product, you are entitled to exercise statutory rights against the seller of the product. These statutory rights are not limited by our warranty described in the following.

Warranty conditions
The warranty begins on the date of purchase. Please keep the original receipt in a safe place. It is required as verification of the purchase.
If a material or manufacturing defect arises within three years from the purchase date of this product, the product will be repaired or replaced, as per our choice, at no charge to you. This warranty service requires the submission of the purchase receipt and the defective product within the three-year period and a short written description of what is wrong with it and when it broke.
If the defect is covered by our warranty, the repaired or new product will be returned to you. The warranty period is not extended by the repair or replacement of the product.

Guarantee period and statutory claims for defects
The guarantee period will not be extended by the warranty. This also applies to replaced and repaired parts. Damage and defects which may possibly already exist at the purchase must be reported immediately after unpacking. Repairs carried out after expiry, required repairs shall be subject to a charge.

Scope of guarantee
The device has been carefully produced under strict quality guidelines and extensively inspected prior to delivery. The guarantee service applies to material and manufacturing faults. This guarantee does not extend to parts subject to normal wear and tear and can therefore be regarded as wearing parts or to damage to fragile parts, e.g. switches, battery packs or which are made of glass.
This guarantee shall lapse, if the product is dismantled, or if it was not properly maintained properly. For proper use in accordance with the instructions in the operating instructions must be

With this QR code, you can find the Ltd. Service website (www.ltd-service.com) on your mobile device and enjoy exciting instructions by entering the article number (IAN 390546_2201).

Warranty conditions
The warranty begins on the date of purchase. Please keep the original receipt in a safe place. It is required as verification of the purchase.
If a material or manufacturing defect arises within three years from the purchase date of this product, the product will be repaired or replaced, as per our choice, at no charge to you. This warranty service requires the submission of the purchase receipt and the defective product within the three-year period and a short written description of what is wrong with it and when it broke.
If the defect is covered by our warranty, the repaired or new product will be returned to you. The warranty period is not extended by the repair or replacement of the product.

Guarantee period and statutory claims for defects
The guarantee period will not be extended by the warranty. This also applies to replaced and repaired parts. Damage and defects which may possibly already exist at the purchase must be reported immediately after unpacking. Repairs carried out after expiry, required repairs shall be subject to a charge.

Scope of guarantee
The device has been carefully produced under strict quality guidelines and extensively inspected prior to delivery. The guarantee service applies to material and manufacturing faults. This guarantee does not extend to parts subject to normal wear and tear and can therefore be regarded as wearing parts or to damage to fragile parts, e.g. switches, battery packs or which are made of glass.
This guarantee shall lapse, if the product is dismantled, or if it was not properly maintained properly. For proper use in accordance with the instructions in the operating instructions must be

With this QR code, you can find the Ltd. Service website (www.ltd-service.com) on your mobile device and enjoy exciting instructions by entering the article number (IAN 390546_2201).

200 LED GALAXY FAIRY LIGHTS / 200 LED FAIRY LIGHTS
LED-LICHTERSCHWEIF / LED-LICHTERKETTE
GUIRLANDE LUMINEUSE À LED

Operation and safety notes

1. Introduction

Congratulations!
With your purchase you have chosen a high-quality product. The operating instructions are an integral part of this product. They contain important information for safe, long and disposal. Familiarise yourself with all of the operating and safety instructions before using the product. Use the product only as described and for the specified areas of application. Keep the instructions for future reference. Provide all of the documentation when passing the product on to third parties.
In the following, the 200 LED Galaxy Fairy Lights and 200 LED Fairy Lights are referred to as product.

Explanation of symbols

The following symbols and signal words are used in these operating instructions, on the product or on the packaging.

⚠ WARNING!

This signal symbol/word indicates a hazard with a high level of risk which, if not avoided, may result in death or serious injury.

⚠ CAUTION!

This signal symbol/word indicates a hazard with a low level of risk which, if not avoided, may result in minor or moderate injury.

NOTE!

This signal word warns of possible property damage and provides you with useful additional information regarding the use.

This symbol indicates indoor and outdoor usage.

This symbol indicates the ON/OFF switch.

This symbol indicates the battery.

This symbol indicates that batteries are included in the scope of delivery.

This symbol indicates that a product is equipped with a TIMER.

This symbol indicates that the product is switched on.

This symbol indicates that when it lights up green, the battery is full.

This symbol indicates warm white light.

These symbols indicate the length dimensions of the product.

This symbol indicates the temperature.

This symbol confirms that the product meets the relevant safety requirements and can be used safely under Finnish conditions. It is basis for the safety of the product throughout Europe.

This symbol indicates direct current.

This symbol indicates alternating current.

This symbols indicates an independent operating device.

Short-circuit proof safety transformer

This symbol indicates Protection Class IP44 (Protection against splashing water from all sides).

This symbol indicates protection class II.
APPLIES ONLY TO THE POWER SUPPLY UNIT.

This symbol indicates protection class III. SELV: safety extra-low voltage.
APPLIES ONLY TO THE LIGHT CHAIN.

These symbols indicate the disposal of the packaging and the product.

Certified safety: Products marked with this symbol comply with the requirements of the German Product Safety Act (ProdSG).
APPLIES ONLY TO THE POWER SUPPLY UNIT.

This symbol indicates that the product is tested and certified.

Use a stepladder when hanging the product ⑩. Watch for falling parts.
Ensure that the ladder is set up stable. Don't lean too far beyond the ladder. If the ladder starts to tilt, ask a helper to hold and stabilise the ladder.
Make sure that the fire hose is not damaged.

⚠ WARNING!

Risk of injury!
There is a risk of injury when the output socket is damaged!
Insert the plug into the output socket!
Insert the plug ⑪ of the product ① into the output socket ⑫ on the power supply unit ⑤ with the correct polarity, see **Fig. D**.

⚠ WARNING!

Risk of injury!
For this, please pay attention to the marked polarities (+ and -).
Screw the union nut ⑬ of the plug ⑪ to the output socket ⑫, see **Fig. D**.

⚠ WARNING!

Risk of injury!
Make sure that the union nut ⑬ is firmly screwed to the output socket ⑫.
The product ① must not be used without a correctly fitted sealing ring ⑫ of the union nut ⑬, see **Fig. D**.

Only after you have completely hung up, laid out or fixed the product on a fir tree, plug the power supply unit ⑤ into the socket.

8. Operation

Power supply unit
The product ① can be put into an easily accessible wall outlet. The product ① and the ⑤ illuminate in the last mode that was set.
To switch the product ① off, remove the power supply unit ⑤ from the wall outlet.

Infrared remote control

NOTE!

The receiver ⑬ is equipped with an infrared diode ⑮, see **Fig. A**. There, the infrared remote control ⑥ can be used to control, ⑮ aim at the receiver ⑬.

NOTE!

The IP44 protection does NOT apply to the infrared remote control ⑥ in dry areas and protect it from splashing water.
Only use the infrared remote control ⑥ in dry areas and protect it from splashing water or moisture.
Make sure that there are no obstacles between the infrared remote control ⑥ and the receiver ⑬.
The range of the infrared remote control ⑥ is 5 m.

⚠ VORSICHT!

To switch on the product ① press the ON/OFF button ⑯ on the infrared remote control ⑥, see **Fig. E**.
To switch off the product ① press the ON/OFF button ⑯ on the infrared remote control ⑥ again.

Mode selection on the receiver (Fig. E)
The product ① is switched on, you can use the button ⑭ on the receiver ⑬ to switch the lighting mode, you can switch through the following modes:
1. COMBINATION
2. IN WAVES
3. SEQUENTIAL
4. SIO-GO
5. CHASING/FLASH
6. SLOW FADE
7. TWINKLE/FLASH
8. STEADY ON

Mode selection on the infrared remote control (Fig. F)
If the product ① is switched on, you can use the button ⑰ on the infrared remote control ⑥ to switch through the following modes:
1. COMBINATION
2. IN WAVES
3. SEQUENTIAL
4. SIO-GO
5. CHASING/FLASH
6. SLOW FADE
7. TWINKLE/FLASH
8. STEADY ON

Dimming function (Fig. F)
With the two DIM buttons ⑲ ⑱ of the infrared remote control ⑥ you can increase or decrease the brightness of the LEDs in 4 step.

Timer function
The product ① is equipped with a timer function.

Activating/deactivating the timer function via the receiver
When the product ① is switched on, press the button ⑱ on the receiver ⑬ for approx. 3 seconds to activate the timer function and deactivate it again by pressing it again for longer period (approx. 3 seconds).

Activating/deactivating the timer function via infrared remote control
When you press the TIMER button ⑱ on the infrared remote control ⑥ press 1x to switch on the timer function, press again switches the timer function off again.

If the timer function is switched on, the product ① will switch off automatically after 6 hours.
After another 18 hours, the product ① will switch on automatically.
If the product is not switched off manually, this daily cycle will repeat itself.

NOTE!

When the timer function is active, or you switch off the timer function, see **Fig E**.

NOTE!

The LED ⑳ is attached in the receiver ⑬. It only shines green through the receiver ⑬.

Memory function
The product ① has a memory function. When it is switched off, the settings used remain stored and are immediately available again the next time it is switched on.

9. Cleaning and care instructions

⚠ WARNING!

Risk of injury!
Before cleaning, you must remove the batteries from the battery compartment. The power plug must be disconnected before cleaning. There is a risk of electric shock!
only clean with a dry cloth
do not use any strong detergents and/or chemicals
do not immerse in water
store in a cool, dry place and out of the reach of children

10. Conformity declaration

The device complies with the fundamental requirements and other relevant regulations of the European Directives: Compatibility Directive 2014/30/EU and RoHS Directive 2011/65/EU. The complete original declaration is available from the importer.

11. Disposal

Disposal of the packaging
The packaging materials are made of 100 % environmentally friendly materials, which you may dispose of at your local collection point.

Disposal of the product
The product may not be disposed of with normal household waste. For information on disposal options for the product, please contact your local council/municipality or your Ltd shop.

Disposal of the battery/ rechargeable battery
- Defective or used rechargeable batteries have to be recycled in accordance with Directive 2006/66/EC, as amended.
Batteries and disposable batteries are not permitted to be disposed of with household waste. Batteries that contain harmful heavy metals: Marking Pb (= lead), Hg (= mercury), Cd (= cadmium). You are legally obligated to return used batteries and rechargeable batteries. After use, you can return batteries to a collection point of sale or in the direct vicinity (e.g. with a retailer) or to other local collection centres) free of charge. Batteries and rechargeable batteries are marked with a crossed-out waste bin.

12. Warranty

Dear customer, the warranty on this product is 3 years from the purchase date. In the event of a defect in the product, you are entitled to exercise statutory rights against the seller of the product. These statutory rights are not limited by our warranty described in the following.

Warranty conditions
The warranty begins on the date of purchase. Please keep the original receipt in a safe place. It is required as verification of the purchase.
If a material or manufacturing defect arises within three years from the purchase date of this product, the product will be repaired or replaced, as per our choice, at no charge to you. This warranty service requires the submission of the purchase receipt and the defective product within the three-year period and a short written description of what is wrong with it and when it broke.
If the defect is covered by our warranty, the repaired or new product will be returned to you. The warranty period is not extended by the repair or replacement of the product.

Guarantee period and statutory claims for defects
The guarantee period will not be extended by the warranty. This also applies to replaced and repaired parts. Damage and defects which may possibly already exist at the purchase must be reported immediately after unpacking. Repairs carried out after expiry, required repairs shall be subject to a charge.

Scope of guarantee
The device has been carefully produced under strict quality guidelines and extensively inspected prior to delivery. The guarantee service applies to material and manufacturing faults. This guarantee does not extend to parts subject to normal wear and tear and can therefore be regarded as wearing parts or to damage to fragile parts, e.g. switches, battery packs or which are made of glass.
This guarantee shall lapse, if the product is dismantled, or if it was not properly maintained properly. For proper use in accordance with the instructions in the operating instructions must be

With this QR code, you can find the Ltd. Service website (www.ltd-service.com) on your mobile device and enjoy exciting instructions by entering the article number (IAN 390546_2201).

⚠ WARNING!

Verletzungsgefahr!
Ein defektes Produkt darf nicht benutzt werden! Es besteht Verletzungsgefahr!
Das Produkt darf nicht in Betrieb genommen werden, wenn es Störungen, Beschädigungen oder Defekten aufweist.
Durch unsachgemäße Reparaturen können erhebliche Gefahren für den Benutzer entstehen.
Wenn Sie einen Defekt am Produkt feststellen, entfernen Sie die Batterien aus dem Produkt und entsorgen das Produkt, gegebenenfalls nach Reparatur, wieder sachgerecht.
Die LEDs sind nicht austauschbar. Bei defekten LEDs muss das Produkt entsorgt werden.
Das Netzkabel ist nicht austauschbar. Bei defektem Netzkabel muss das Produkt entsorgt werden.

⚠ WARNING!

Verletzungsgefahr!
Das Produkt darf nicht manipuliert werden! Es besteht Verletzungsgefahr durch Stromschlag!
Das Gehäuse darf unter keinen Umständen geöffnet und das Produkt darf nicht manipuliert/verändert werden. Durch Manipulationen/Veränderungen besteht lebensgefahr durch elektrischen Schlag. Manipulationen/Veränderungen sind aus Zulassungsgründen (CE) untersagt.

Spannungsquelle überprüfen!

Stellen Sie sicher, dass die vorhandene Netzspannung mit der Angabe auf dem Typenschild übereinstimmt. Nur bei Übereinstimmung kann zu übermäßiger Hitzeentwicklung führen.
Trennen Sie den Netzstecker niemals mit feuchten Händen aus der Steckdose ziehen.
Das Produkt darf während der Nutzung nicht abgedeckt werden.

6. Sicherheitshinweise für Batterien

⚠ WARNUNG!

Batterien dürfen nicht verschluckt werden! Es besteht Lebensgefahr!
Batterien können verschluckt werden, dieser lebensgefährlich sein, da es innerhalb von 2 Stunden zu dauerhaften Schäden führen kann. Batterien müssen deshalb für Kinder unzugänglich aufbewahrt werden.
Verschlucken kann zu Verätzungen, Weichteilperforationen und zum Tod führen. Innerhalb von 2 Stunden nach Einnahme können schwere innere Verätzungen auftreten!
Sollte eine Batterie verschluckt worden sein, suchen Sie sofort einen Arzt auf!
Halten Sie Kinder unter 8 Jahren auf Abstand.
Beobachten Sie Kinder in der Nähe des Produktes.
Bewahren Sie das Produkt und seine Batterien außerhalb der Reichweite von Kindern auf.

⚠ WARNUNG!

Brand- und Explosionsgefahr!
- Laden Sie nicht aufladbare Batterien niemals wieder auf, schließen Sie sie nicht kurz und zerlegen Sie sie nicht. Überhitzung, Brand- oder Explosionsgefahr!
Halten Sie das Produkt von Hitzequellen und direkter Sonneneinstrahlung fern, die Batterien können durch Überhitzung explodieren. Es besteht Verletzungsgefahr!

⚠ WARNUNG!

Verletzungsgefahr!
Auslaufende Batterien können Verätzungen verursachen! Batterien unter 8 Jahren geeignet! Es besteht Verletzungsgefahr!
- Kinder ab 8 Jahren und darüber sowie Personen mit verringerten physischen, sensorischen oder geistigen Fähigkeiten oder Mangel an Erfahrung und Wissen dürfen das Produkt benutzen, wenn sie durch eine für ihre Sicherheit verantwortliche Person in sicherer Gebrauch des Produkts unterwiesen wurden und die daraus resultierenden Gefahren verstehen.
Kinder dürfen nicht mit dem Produkt spielen.
Reinigung und/oder Reinigung des Produkts dürfen nicht von Kindern ohne Aufsicht durchgeführt werden.

Nationale Bestimmungen beachten!

Beachten Sie gelltende nationale Vorschriften und Bestimmungen bei der Nutzung und Entsorgung des Produkts.

⚠ WARNUNG!

Verletzungsgefahr!
Verletzungsgefahr durch Verwendung! Es besteht Verletzungsgefahr!
Das Produkt darf nicht in explosionsgefährdeten Umgebungen betrieben werden. Für eine Umgebung, in der sich brennbare Flüssigkeiten, Gase oder Stäube befinden, ist das Produkt nicht zugelassen.

⚠ WARNUNG!

Verletzungsgefahr!
Ein defektes Produkt darf nicht benutzt werden! Es besteht Verletzungsgefahr!
Das Produkt darf nicht in Betrieb genommen werden, wenn es Störungen, Beschädigungen oder Defekten aufweist.
Durch unsachgemäße Reparaturen können erhebliche Gefahren für den Benutzer entstehen.
Wenn Sie einen Defekt am Produkt feststellen, entfernen Sie die Batterien aus dem Produkt und entsorgen das Produkt, gegebenenfalls nach Reparatur, wieder sachgerecht.
Die LEDs sind nicht austauschbar. Bei defekten LEDs muss das Produkt entsorgt werden.
Das Netzkabel ist nicht austauschbar. Bei defektem Netzkabel muss das Produkt entsorgt werden.

⚠ WARNUNG!

Verletzungsgefahr durch Stromschlag!
Das Gehäuse darf unter keinen Umständen geöffnet und das Produkt darf nicht manipuliert/verändert werden. Durch Manipulationen/Veränderungen besteht lebensgefahr durch elektrischen Schlag. Manipulationen/Veränderungen sind aus Zulassungsgründen (CE) untersagt.

Spannungsquelle überprüfen!

Stellen Sie sicher, dass die vorhandene Netzspannung mit der Angabe auf dem Typenschild übereinstimmt. Nur bei Übereinstimmung kann zu übermäßiger Hitzeentwicklung führen.
Trennen Sie den Netzstecker niemals mit feuchten Händen aus der Steckdose ziehen.
Das Produkt darf während der Nutzung nicht abgedeckt werden.

6. Sicherheitshinweise für Batterien

⚠ WARNUNG!

Batterien dürfen nicht verschluckt werden! Es besteht Lebensgefahr!
Batterien können verschluckt werden, dieser lebensgefährlich sein, da es innerhalb von 2 Stunden zu dauerhaften Schäden führen kann. Batterien müssen deshalb für Kinder unzugänglich aufbewahrt werden.
Verschlucken kann zu Verätzungen, Weichteilperforationen und zum Tod führen. Innerhalb von 2 Stunden nach Einnahme können schwere innere Verätzungen auftreten!
Sollte eine Batterie verschluckt worden sein, suchen Sie sofort einen Arzt auf!
Halten Sie Kinder unter 8 Jahren auf Abstand.
Beobachten Sie Kinder in der Nähe des Produktes.
Bewahren Sie das Produkt und seine Batterien außerhalb der Reichweite von Kindern auf.

⚠ WARNUNG!

Verletzungsgefahr durch Verschlucken! Das Produkt darf nicht für den gewerblichen Einsatz bestimmt. Andere Verwendung oder Veränderung kann gefährlich sein und zu Verletzungen und Beschädigungen führen. Es besteht Verletzungsgefahr!
Das Produkt ist nicht für den gewerblichen Einsatz bestimmt. Andere Verwendung oder Veränderung kann gefährlich sein und zu Verletzungen und Beschädigungen führen. Es besteht Verletzungsgefahr!
Die Batterien sind nicht für den gewerblichen Einsatz bestimmt. Andere Verwendung oder Veränderung kann gefährlich sein und zu Verletzungen und Beschädigungen führen. Es besteht Verletzungsgefahr!

⚠ WARNUNG!

Verletzungsgefahr!
Ausgelaufene Batterien können Verätzungen verursachen! Batterien können bei Berührung mit der Haut Verätzungen verursachen. Berühren Sie ausgelaufene Batterien nicht mit bloßen Händen; tragen Sie deshalb in diesem Fall entsprechende Schutzhandschuhe!
Verwenden Sie nur Batterien des Typs CR2025 gleicher Hersteller.
Setzen Sie Batterien mit korrekter Polarität entsprechend in das dafür vorgesehene Batteriefach ein.
Verwenden Sie keine Kombinationen aus alten und neuen Batterien oder Akkus.
Lagern Sie Ihre Batterien trocken und nicht zu feucht.
Werfen Sie Batterien auf keinen Fall ins Feuer.
Schließen Sie Batterien nicht kurz.
Batterien verlieren auch bei der Lagerung einen Teil ihrer Energie. Entnehmen Sie Batterien, die längere Zeit nicht benutzt werden, um Schäden am Produkt zu vermeiden.
Leere Batterien oder verbrauchte Akkus sind fachgerecht zu entsorgen.
Batterien dürfen nicht in den normalen Hausmüll gelangen. Sie können Schadstoffe enthalten, die Umwelt und Gesundheit schädigen können.
Sie können Batterien nach Gebrauch an einer Sammelstelle Ihrer Gemeinde, Ihrem Wertstoffhof oder dem Fachhandel abgeben.
Entfernen Sie Batterien, wenn Sie das Produkt längere Zeit nicht benutzen.
Entladene Batterien müssen sofort entfernt werden, um ein Auslaufen der Batterien und die Beschädigung des Produktes zu vermeiden.
Entsorgen Sie leere Batterien und Akkus sowie verbrauchte Akkus getrennt.

7. Inbetriebnahme

1. Entfernen Sie sämtliches Verpackungsmaterial.
2. Überprüfen Sie, ob alle Teile vorhanden und unbeschädigt sind. Falls dies nicht der Fall ist, wenden Sie sich bei der angegebenen Servicestelle.

Legende
1 Produkt
2 Produkt aus schwarzem Draht
3 Produkt aus weißem Draht
4 Produkt aus silbernem, gedrehtem Draht
5 Netzteil
6 Infrarotfernbedienung
7 Batteriefach
8 Saugnapfhalterung
9 Befestigungsbügel
10 Stecker
11 Schraube
12 Dichtungsring
13 Empfänger
14 Taste
15 Infrarotdiode
16 Ausgangsbuchse EIN/AUS-Taste
17 MODE-Taste
18 TIMER-Taste
19 DIM-Taste
20 LED

⚠ WARNUNG!

Verletzungsgefahr durch Stromschlag! Das Gehäuse darf unter keinen Umständen geöffnet und das Produkt darf nicht manipuliert/verändert werden. Durch Manipulationen/Veränderungen besteht lebensgefahr durch elektrischen Schlag. Manipulationen/Veränderungen sind aus Zulassungsgründen (CE) untersagt.

Spannungsquelle überprüfen!

Stellen Sie sicher, dass die vorhandene Netzspannung mit der Angabe auf dem Typenschild übereinstimmt. Nur bei Übereinstimmung kann zu übermäßiger Hitzeentwicklung führen.
Trennen Sie den Netzstecker niemals mit feuchten Händen aus der Steckdose ziehen.
Das Produkt darf während der Nutzung nicht abgedeckt werden.

6. Sicherheitshinweise für Batterien

⚠ WARNUNG!

Batterien dürfen nicht verschluckt werden! Es besteht Lebensgefahr!
Batterien können verschluckt werden, dieser lebensgefährlich sein, da es innerhalb von 2 Stunden zu dauerhaften Schäden führen kann. Batterien müssen deshalb für Kinder unzugänglich aufbewahrt werden.
Verschlucken kann zu Verätzungen, Weichteilperforationen und zum Tod führen. Innerhalb von 2 Stunden nach Einnahme können schwere innere Verätzungen auftreten!
Sollte eine Batterie verschluckt worden sein, suchen Sie sofort einen Arzt auf!
Halten Sie Kinder unter 8 Jahren auf Abstand.
Beobachten Sie Kinder in der Nähe des Produktes.
Bewahren Sie das Produkt und seine Batterien außerhalb der Reichweite von Kindern auf.

⚠ WARNUNG!

Verletzungsgefahr durch Verschlucken! Das Produkt darf nicht für den gewerblichen Einsatz bestimmt. Andere Verwendung oder Veränderung kann gefährlich sein und zu Verletzungen und Beschädigungen führen. Es besteht Verletzungsgefahr!
Das Produkt ist nicht für den gewerblichen Einsatz bestimmt. Andere Verwendung oder Veränderung kann gefährlich sein und zu Verletzungen und Beschädigungen führen. Es besteht Verletzungsgefahr!
Die Batterien sind nicht für den gewerblichen Einsatz bestimmt. Andere Verwendung oder Veränderung kann gefährlich sein und zu Verletzungen und Beschädigungen führen. Es besteht Verletzungsgefahr!

⚠ WARNUNG!

Verletzungsgefahr durch Verschlucken! Auslaufende Batterien können Verätzungen verursachen! Batterien können bei Berührung mit der Haut Verätzungen verursachen. Berühren Sie ausgelaufene Batterien nicht mit bloßen Händen; tragen Sie deshalb in diesem Fall entsprechende Schutzhandschuhe!
Verwenden Sie nur Batterien des Typs CR2025 gleicher Hersteller.
Setzen Sie Batterien mit korrekter Polarität entsprechend in das dafür vorgesehene Batteriefach ein.
Verwenden Sie keine Kombinationen aus alten und neuen Batterien oder Akkus.
Lagern Sie Ihre Batterien trocken und nicht zu feucht.
Werfen Sie Batterien auf keinen Fall ins Feuer.
Schließen Sie Batterien nicht kurz.
Batterien verlieren auch bei der Lagerung einen Teil ihrer Energie. Entnehmen Sie Batterien, die längere Zeit nicht benutzt werden, um Schäden am Produkt zu vermeiden.
Leere Batterien oder verbrauchte Akkus sind fachgerecht zu entsorgen.
Batterien dürfen nicht in den normalen Hausmüll gelangen. Sie können Schadstoffe enthalten, die Umwelt und Gesundheit schädigen können.
Sie können Batterien nach Gebrauch an einer Sammelstelle Ihrer Gemeinde, Ihrem Wertstoffhof oder dem Fachhandel abgeben.
Entfernen Sie Batterien, wenn Sie das Produkt längere Zeit nicht benutzen.
Entladene Batterien müssen sofort entfernt werden, um ein Auslaufen der Batterien und die Beschädigung des Produktes zu vermeiden.
Entsorgen Sie leere Batterien und Akkus sowie verbrauchte Akkus getrennt.

1. COMBINATION
2. IN WAVES
3. SEQUENTIAL
4. SIO-GO
5. CHASING/FLASH
6. SLOW FADE
7. TWINKLE/FLASH
8. STEADY ON

Fixation du produit sur un sapin
3905462-22-CEU
3905462-22-BEU
Fixer ou enfiler le support à ventouse ⑧ dans le compartiment sapin, de manière à ce qu'il ne puisse pas tomber.
Accrocher le produit ⑩ avec le crochet ⑨ dans une branche adaptée dans le crochet du support à ventouse ⑧.
Répartir les 10 guirlandes du haut vers le bas sur le sapin en partant sur la pointe.

⚠ WARNUNG!

Verletzungsgefahr!
Placer le produit ⑩ autour du sapin. Pour ce faire, commencer en bas. Ce faisant, placer le produit ⑩ sur les branches. S'il n'est pas possible de placer le produit ⑩ sur les branches, le placer sur le tronc.

⚠ WARNUNG!

Verletzungsgefahr!
Ne pas utiliser dans un environnement présentant un risque d'explosion ! Un risque de blessures existe !
Le produit ne doit pas être utilisé dans un environnement exposé aux explosions. Le produit n'est pas homologué pour un environnement dans lequel des liquides inflammables, des gaz ou des poussières inflammables sont présents.

⚠ PRUDENCE !

Risque de surchauffe !
Ne pas relier le produit à l'alimentation pendant qu'il est dans son emballage.

7. Mise en service

1. Retirez tous les matériaux d'emballage.
2. Vérifier que toutes les pièces sont là et qu'elles ne sont pas endommagées.
Si ce n'est pas le cas, contactez le service de service indiqué.

Légende
1 Produit
2 Produit en fil noir
3 Produit en fil argenté
4 Produit en fil argenté torsadé
5 Bloc d'alimentation
6 Télécommande infrarouge
7 Compartiment des piles
8 Support à ventouse
9 Crochet de suspension
10 Fiche

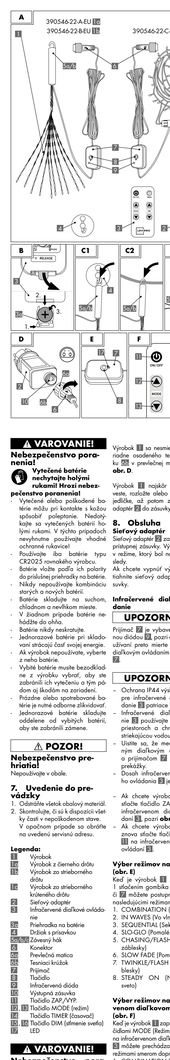

plotne vrat, a to bud v načinu obchodné ukážky – bezprostredne, blikajúci (napr. v obchodnom dome, kde sa predvádza), alebo v režime bez obchodnej ukážky (napr. v kancelárii, v obchodnom dome, kde sa predvádza), alebo v režime prechádzať nakladanie nižšie odpadkového koša.

12. Záruka

Veľkoobchodná zákaznícka, veľkoobchodný zákazník, na ktorý sa vzťahuje záruka v trvaní 2 rokov od dátumu jeho zakúpenia. V prípade nejakých pochybností môže s predávajúcim kontaktovať a vyžiadať si kópiu záručného listu. Tento záručný list je možné vyplniť a odoslať nám, môže vám ho poslať e-mailom.

Vybavenie v prípade uplatnenia záruky

Aby sme zabezpečili rýchle spracovanie vašej reklamácie, prosíme, naskenovaný pôvodný pokladničný doklad a kópiu záručného listu pošlite na našu e-mailovú adresu. Ak sa preukážete platným dokladom o kúpe, vyhradzujeme si právo vám v prípade uplatnenia záruky poslať náhradný kus rovnakého alebo podobného typu. Pokiaľ nebude náhradný kus k dispozícii, vrátime vám kúpnu cenu.

Vybavenie v prípade uplatnenia záruky

Aby sme zabezpečili rýchle spracovanie vašej reklamácie, prosíme, naskenovaný pôvodný pokladničný doklad a kópiu záručného listu pošlite na našu e-mailovú adresu. Ak sa preukážete platným dokladom o kúpe, vyhradzujeme si právo vám v prípade uplatnenia záruky poslať náhradný kus rovnakého alebo podobného typu. Pokiaľ nebude náhradný kus k dispozícii, vrátime vám kúpnu cenu.

Záručné podmienky

Záručná lehota začína dátumom nákupu. Uschovajte si preto doklad originálny pokladničný blok. Tento doklad budete potrebovať ako dôkaz o nákupe. Ak sa v priebehu tejto záručnej doby vyskytnú chyby v výrobku materiálu alebo spracovaní, vyhradzujeme si právo vám – podľa nášho rozhodnutia – buď bezplatne opraviť alebo chybný výrobok nahradiť novým alebo renovovaným výrobkom, ktorý je minimálne rovnaký ako váš pôvodný výrobok. Na opravené alebo nové diely poskytujeme záruku na zostávajúcu dobu pôvodnej záručnej doby. Ak sa vám chybný výrobok alebo jeho súčiastka vymenia, stávajú sa vaším majetkom.

Vybavenie v prípade uplatnenia záruky

Aby sme zabezpečili rýchle spracovanie vašej reklamácie, prosíme, naskenovaný pôvodný pokladničný doklad a kópiu záručného listu pošlite na našu e-mailovú adresu. Ak sa preukážete platným dokladom o kúpe, vyhradzujeme si právo vám v prípade uplatnenia záruky poslať náhradný kus rovnakého alebo podobného typu. Pokiaľ nebude náhradný kus k dispozícii, vrátime vám kúpnu cenu.

Záručné podmienky

Záručná lehota začína dátumom nákupu. Uschovajte si preto doklad originálny pokladničný blok. Tento doklad budete potrebovať ako dôkaz o nákupe. Ak sa v priebehu tejto záručnej doby vyskytnú chyby v materiálu alebo spracovaní, vyhradzujeme si právo – podľa nášho rozhodnutia – buď bezplatne opraviť alebo chybný výrobok nahradiť novým alebo renovovaným výrobkom, ktorý je minimálne rovnaký ako váš pôvodný výrobok. Na opravené alebo nové diely poskytujeme záruku na zostávajúcu dobu pôvodnej záručnej doby. Ak sa vám chybný výrobok alebo jeho súčiastka vymenia, stávajú sa vaším majetkom.

⚠ VAROVANIE!

Nebezpečenstvo poranenia!

Výrobok sa nesmie používať bez riadne osadeného teleskopického krytu a prevlečnej matice **(7)** pri **obr. D.**

Vrtečné bránenie nesmie nebezpečenstvo poranenia!

Vrtačkou **(A)** nesmie používať bez riadne osadeného teleskopického krytu **(2)** a prevlečnej matice **(7)** pri **obr. D.**

Vrtačkou **(A)** nikdy nevŕtajte do vrtačky, ak je jeho chránič odstránený alebo poškodený.