



REMOTE CONTROLLED CAR

GB IE NI
REMOTE CONTROLLED CAR
Operating and safety instructions

NL BE
RC-VOERTUIG
Bedienings- en veiligheidsinstructies

DE AT CH
RC FAHRZEUG
Bedienungs- und Sicherheitshinweise

IAN 397598_2201

IE NI NL

List of pictograms used	
	Safety information
	Instructions for use
	CE mark indicates conformity with relevant EU directives applicable for this product.

Remote controlled car

● Introduction

We congratulate you on the purchase of your new product. You have chosen a high quality product. The instructions for use are part of the product. They contain important information concerning safety, use and disposal. Before using the product, please familiarise yourself with all of the safety information and instructions for use. Only use the product as described and for the specified applications. If you pass the product on to anyone else, please ensure that you also pass on all the documentation with it.

● Intended use

The product is only intended for private household use and not intended for commercial use.

● Parts description

1 Regulation rod	8 ON/OFF button
2 Vehicle	9 Control stick forward/backward
3 ON/OFF switch	10 Battery compartment cover (Vehicle)
4 Battery compartment	11 Battery compartment cover (Transmitter)
5 Transmitter	
6 LED	
7 Control stick right/left	

● Technical data






Vehicle		Transmitter	
Speed:	approx. 7km/h	Battery:	2 x 1.5V AA/LR6
Batteries:	3 x 1.5V AA/LR6-batteries	Range:	10-15 m
		Frequency band:	2.4 Ghz
		Frequency:	2.410-2.473 MHz

● Scope of delivery

1 vehicle	5 batteries (AA)
1 transmitter	1 instruction manual

Safety information

- WARNING.** Not suitable for children under 36 months. Small parts. Choking hazard.
- WARNING.** This toy produces flashes that may trigger epilepsy in sensitised individuals.
- WARNING.** To be used under the direct supervision of an adult.

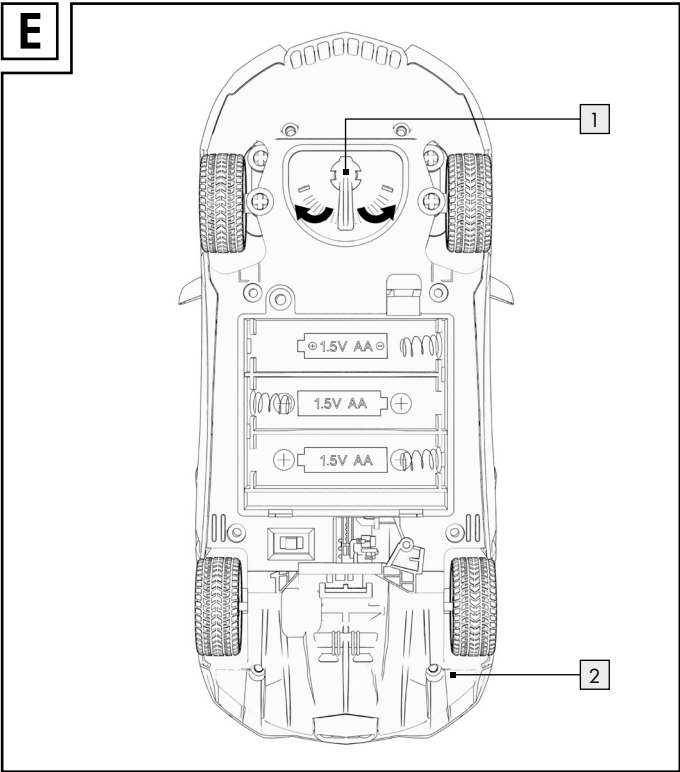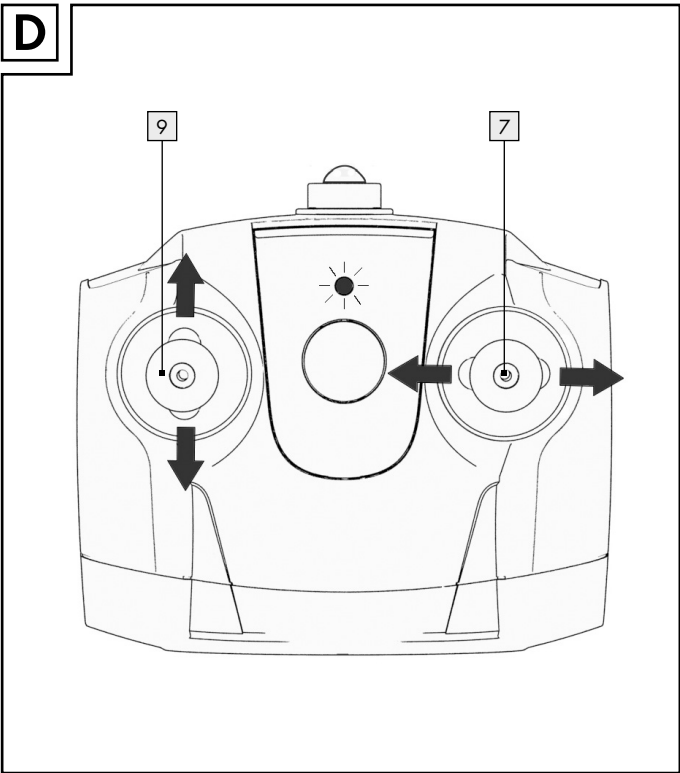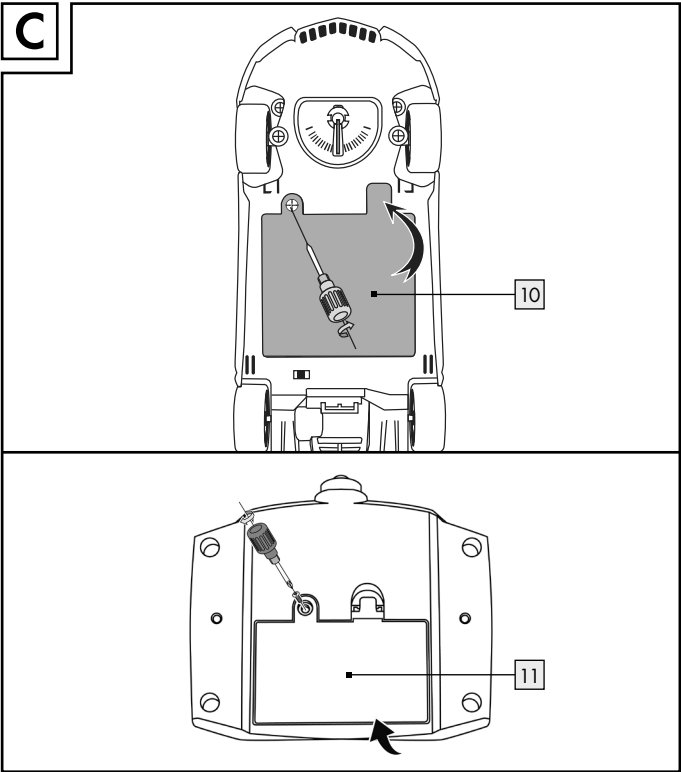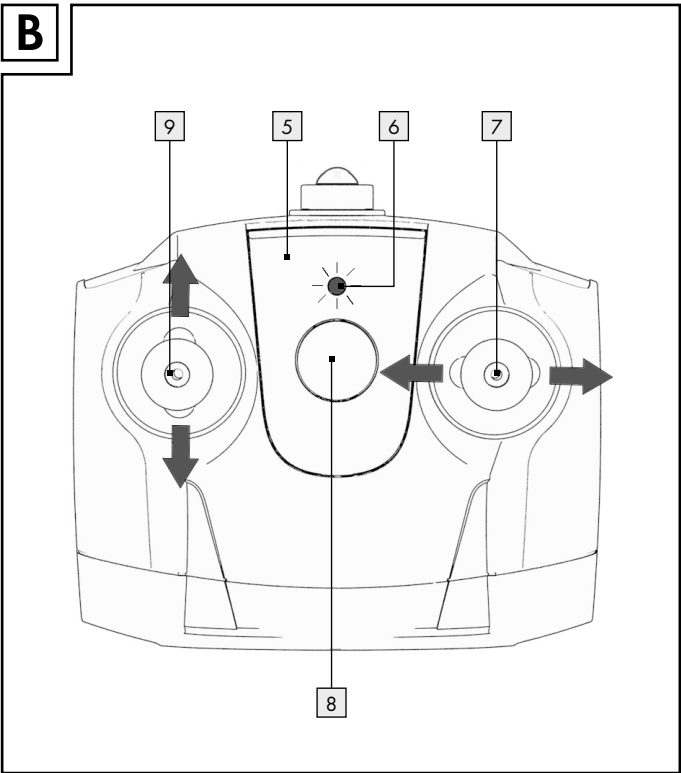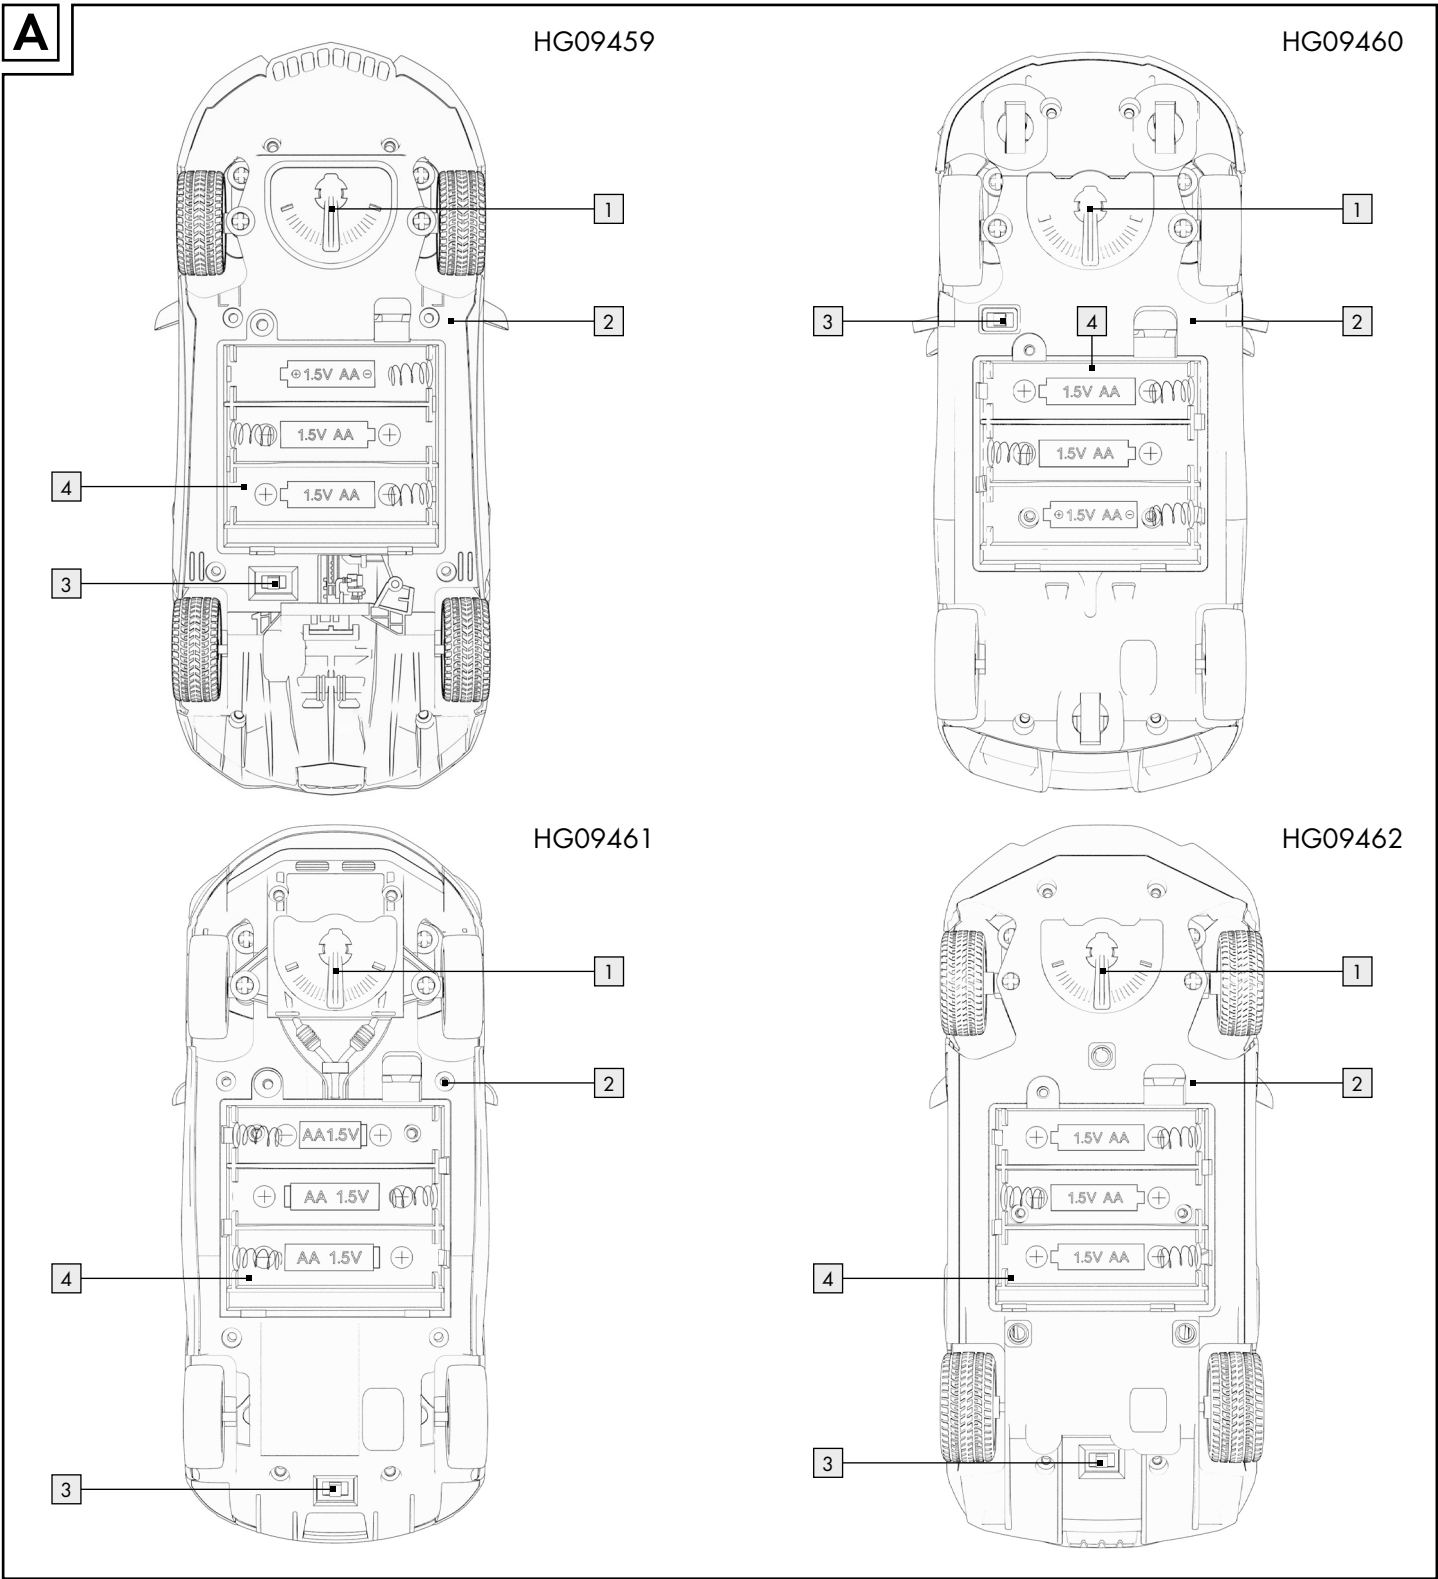

● Use

- **Turn product on/off**
 - Press the ON/OFF button **8** on the transmitter **5** to switch it on. The LED **6** flashes.
 - Then slide the ON/OFF switch **3** on the underside of the vehicle **2** to the "ON" position to switch on the product. The LED **6** stops flashing. The vehicle **2** is now connected to the transmitter **5**.
 - Press the ON/OFF button **8** on the transmitter **5** again to switch it off. The LED **6** goes out.
 - Slide the ON/OFF switch **3** on the underside of the vehicle **2** to the "OFF" position to switch off the product.

● Control




- Move the control stick **9** forwards or backwards to make the vehicle **2** move forwards or backwards (see fig. D).
- Note:** Accelerate slowly at first so that the vehicle does not drive off uncontrollably. Then gradually increase.
- Move the control stick **7** to the right so that the vehicle **2** moves to the right (see fig. D).
- Move the control stick **7** to the left so that the vehicle **2** moves to the left (see fig. D).
- Note:** If the vehicle does not travel in a straight line, adjust the regulation rod **1** under the front of the vehicle **2** to fine-tune the direction (see fig. E).

● Care and storage

- Do not use harsh or aggressive cleaning agents.
- Clean the product using a soft, dry cloth only.
- Always store the product in a dry place and at room temperature.

● Disposal

The packaging is made entirely of recyclable materials, which you may dispose of at local recycling facilities.

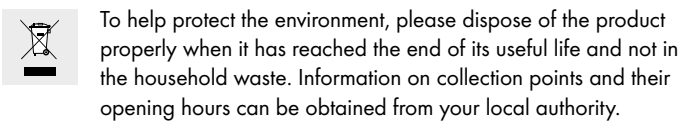

Faulty or used batteries/rechargeable batteries must be recycled in accordance with Directive 2006/66/EC and its amendments. Please return the batteries/rechargeable batteries and/or the product to the available collection points.



Batteries/rechargeable batteries may not be disposed of with the usual domestic waste. They may contain toxic heavy metals and are subject to hazardous waste treatment rules and regulations. The chemical symbols for heavy metals are as follows: Cd = cadmium, Hg = mercury, Pb = lead. That is why you should dispose of used batteries/rechargeable batteries at a local collection point.

● Warranty

The product has been manufactured to strict quality guidelines and meticulously examined before delivery. In the event of product defects you have legal rights against the retailer of this product. Your legal rights are not limited in any way by our warranty detailed below.

The warranty for this product is 3 years from the date of purchase. The warranty period begins on the date of purchase. Please keep the original sales receipt in a safe location. This document is required as your proof of purchase.

Should this product show any fault in materials or manufacture within 3 years from the date of purchase, we will repair or replace it – at our choice – free of charge to you. This warranty becomes void if the product has been damaged, or used or maintained improperly.

The warranty applies to defects in material or manufacture. This warranty does not cover product parts subject to normal wear, thus possibly considered consumables (e.g. batteries) or for damage to fragile parts, e.g. switches, rechargeable batteries or glass parts.

● Warranty claim procedure

To ensure quick processing of your case, please observe the following instructions:

Please have the till receipt and the item number (IAN 397598_2201) available as proof of purchase. You will find the item number on the rating plate, an engraving on the front page of the instructions for use (bottom left), or as a sticker on the rear or bottom of the product. If functional or other defects occur, please contact the service department listed either by telephone or by e-mail. You can return a defective product to us free of charge to the service address that will be provided to you. Ensure that you enclose the proof of purchase (till receipt) and information about what the defect is and when it occurred.

● Service

GB Service Great Britain Tel.: 0800 0569216 E-Mail: owim@lidl.co.uk	IE Service Ireland Tel.: 1800 200736 E-Mail: owim@lidl.ie
---	---

NI Service Northern Ireland Tel.: 0800 0927852 E-Mail: owim@lidl.ie



